



# MODELS MC100, MC100C, MC100-P2 AND MC100C-P2

*Universal Mini Remote Control*



## TABLE OF CONTENTS

GETTING STARTED .....	2	COMMERCIAL DOOR OPERATORS .....	10
LOCATE THE PROGRAM/LEARN BUTTON .....	3-7	Programming to a commercial door operator with a Program/LEARN button .....	10
Chamberlain® products .....	3	GATE OPERATORS .....	11
LiftMaster® products .....	4	Program to a gate operator with a Program/LEARN button .....	11
Overhead Door® products .....	4	EXTERNAL RECEIVERS .....	12
Genie® products .....	5	Programming to an external receiver with a Program/LEARN button .....	12
Linear® products .....	6	MYQ LIGHT CONTROLS .....	13
Wayne Dalton® products .....	6	NEED HELP? .....	14
Stanley® products .....	7	BATTERY .....	15
GARAGE DOOR OPENERS .....	8-9		
Programming to a garage door opener with a Program/LEARN button .....	8		
Programming to a Genie® Intellicode® 2 garage door opener .....	9		



**Read instructions thoroughly BEFORE beginning.**

**If using the Universal Mini Remote Control with residential door openers, the remote control must be used only with door openers manufactured after 1993 that utilize photoelectric sensors. The photoelectric sensors are always located on or near the bottom of the door track.**



**WARNING:** This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## **WARNING**


To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.


# GETTING STARTED

The Universal Mini Remote Control can be programmed to activate up to two products, such as a garage door opener, MyQ® light controls, gate operator, or commercial door operator. Each button on the remote control works independently of the other and must be programmed separately. The images throughout this manual are for reference only and your product may look different.


Garage Door Opener

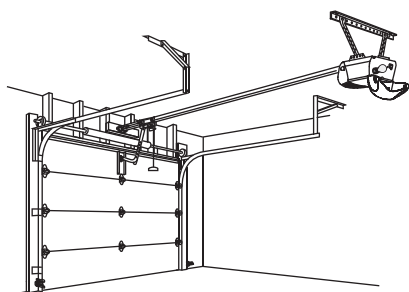

Gate Operator

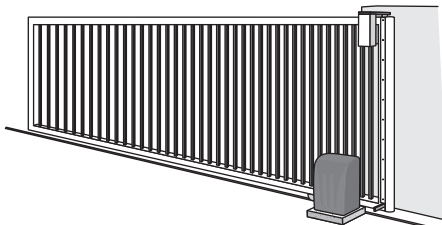


Commercial Door Operator

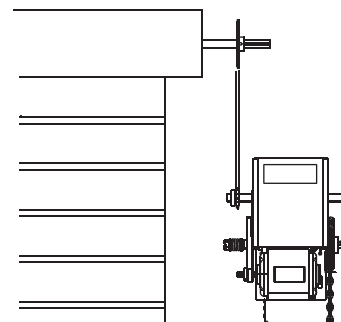

You will need to locate the Program/LEARN button on your product before you start programming.


## GARAGE DOOR OPENERS

The Program/LEARN button is typically located on the back or side panel of your garage door opener. Newer garage door openers may have a Program/Learn button located on the door control. Your Program/LEARN button may have a different name (SMART button, SET button, etc.). For help locating your Program/LEARN button refer to the Table of Contents in this manual or contact your garage door opener manufacturer.

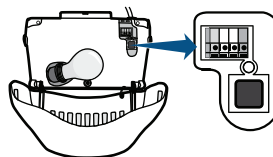


## COMMERCIAL DOOR OPERATORS

The Program/LEARN button is typically located on the logic board of your operator. Your Program/LEARN button may have a different name (RADIO button, XMITTER button, etc.). For help locating your Program/LEARN button contact your door operator manufacturer.

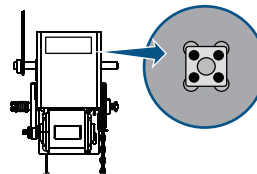


## GATE OPERATORS

The Program/LEARN button is typically located on the control board of your operator. Your Program/LEARN button may have a different name (RADIO button, XMITTER button, etc.). For help locating your Program/LEARN button contact your gate operator manufacturer.

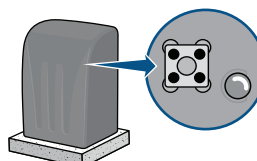


## EXTERNAL RECEIVER

Some products do not have a Program/LEARN button. In this case, the Program/LEARN button will be located in an external receiver. The receiver will be located on the product or mounted nearby. Follow the programming instructions for an external receiver.

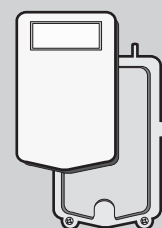


# LOCATE THE PROGRAM/LEARN BUTTON

## CHAMBERLAIN PRODUCTS

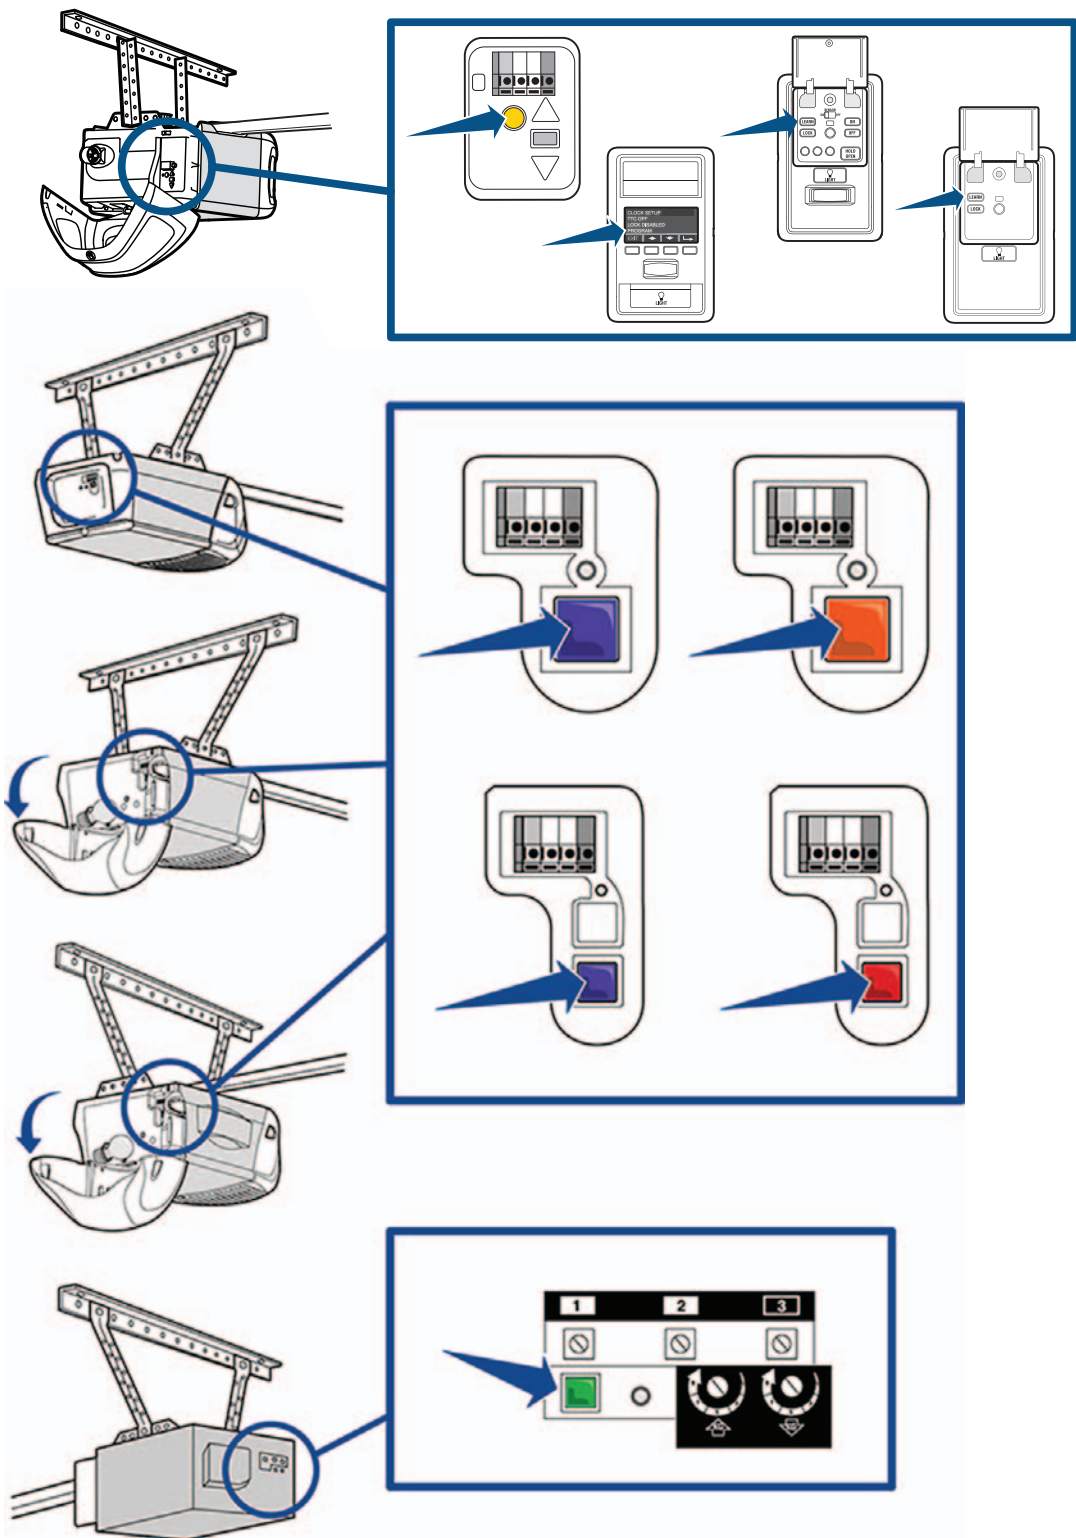


# LOCATE THE PROGRAM/LEARN BUTTON
 
## LIFTMASTER PRODUCTS


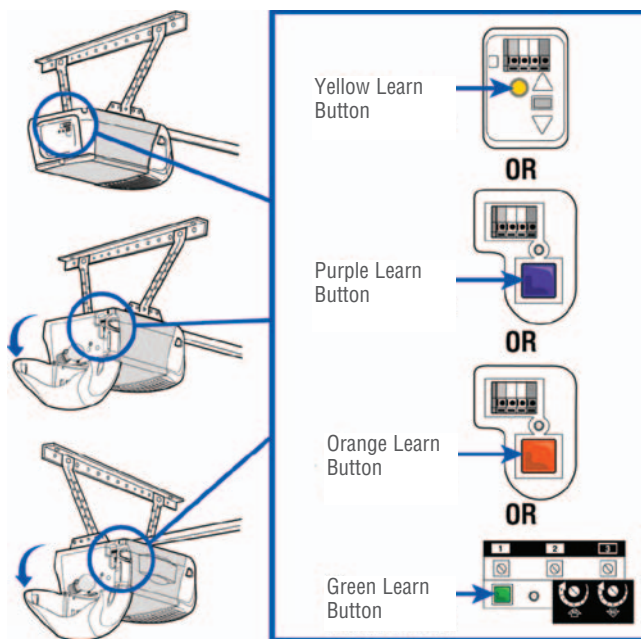


## OVERHEAD DOOR PRODUCTS

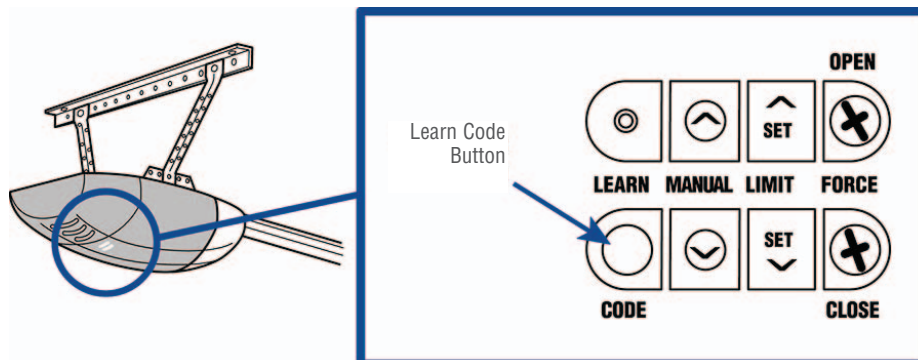 


# LOCATE THE PROGRAM/LEARN BUTTON
  
## GENIE PRODUCTS

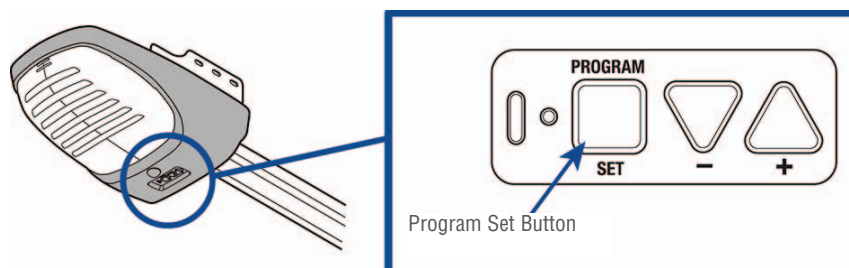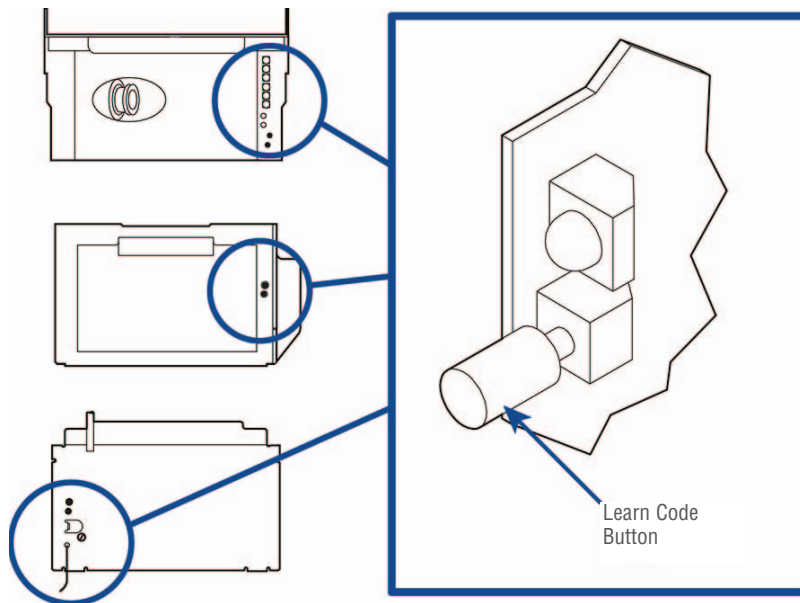


# LOCATE THE PROGRAM/LEARN BUTTON
 
## LINEAR PRODUCTS

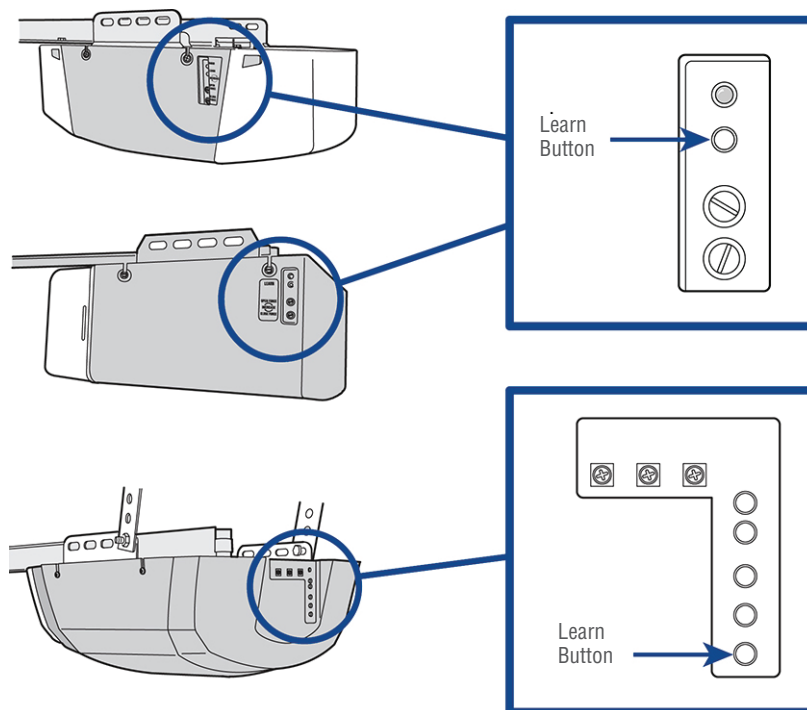


## WAYNE-DALTON PRODUCTS

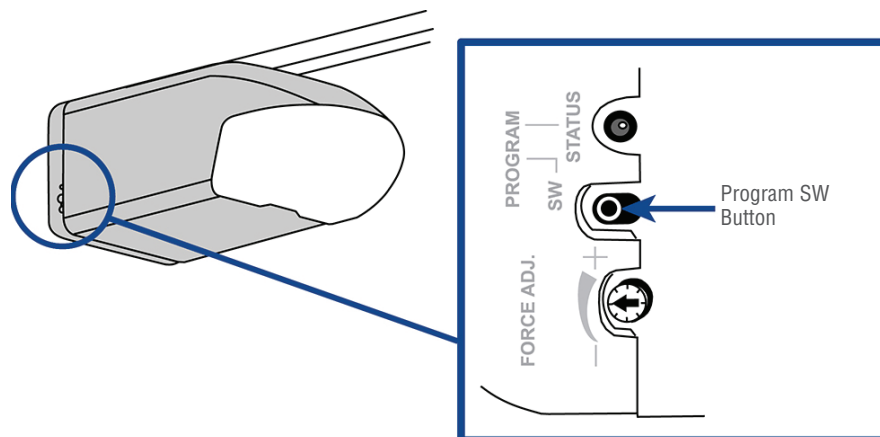 

# LOCATE THE LEARN BUTTON

STANLEY PRODUCTS

 ---

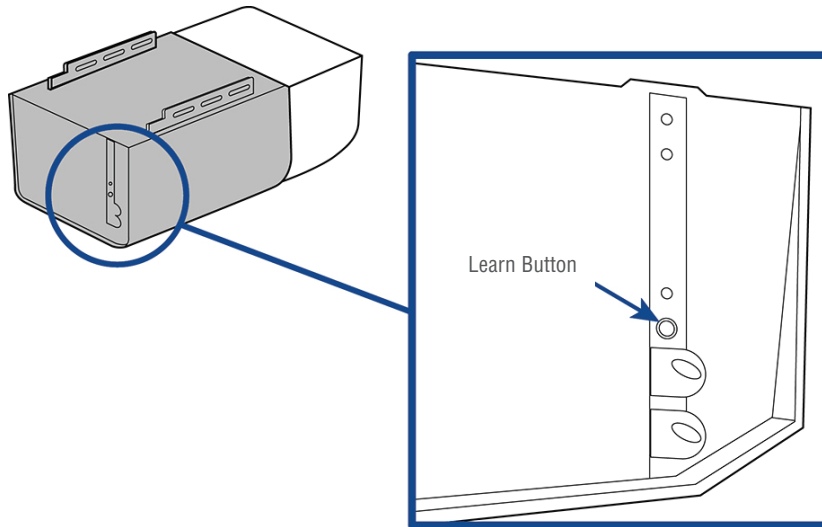

# GARAGE DOOR OPENERS

## Programming to a Garage Door Opener with a Program/LEARN Button


The Program/LEARN button is typically located on the back or side panel of the garage door opener or an external receiver. For help locating your Program/LEARN button refer to the Help section in this manual or contact your garage door opener manufacturer.

The Mini Remote Control is pre-programmed to work with a Chamberlain garage door opener with a yellow learn button. Press and release the yellow learn button, then press and hold the button on the remote control you would like to use. If programming is not successful, proceed through the steps below.

If you have a Genie® Intellicode® 2 garage door opener go to the next page. If you have an external receiver, see External Receivers page 12.


The images throughout this manual are for reference only and your product may look different.

- 1** Start with your garage door closed.

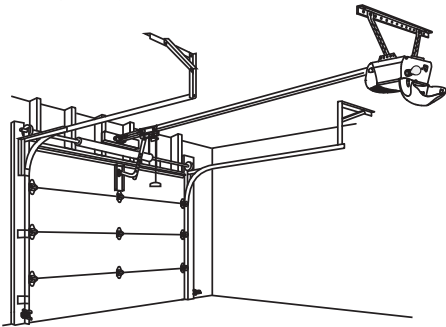


**IMPORTANT:** The remote will activate your garage door during programming. Ensure garage door is clear of ALL obstructions.

- 2** Press and hold bottom button on the remote control until the blue LED stays solid (approximately 15 seconds) then release the button.

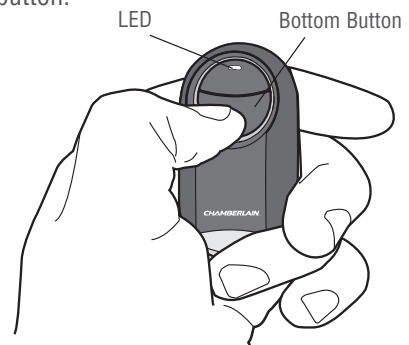


- 3** Press and release the Program/LEARN button on your garage door opener, or 2 times on your door control.

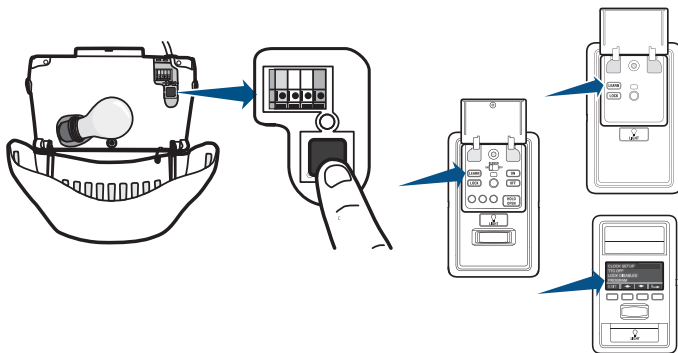


- 4** On the remote control, press and release the button that you would like to program twice. The blue LED will blink and the remote control will begin sending the preprogrammed codes to the garage door opener. Transmission can take up to 60 seconds.



- 5** When the garage door begins to open, immediately press and release either of the buttons on the remote control to confirm the code and exit programming.

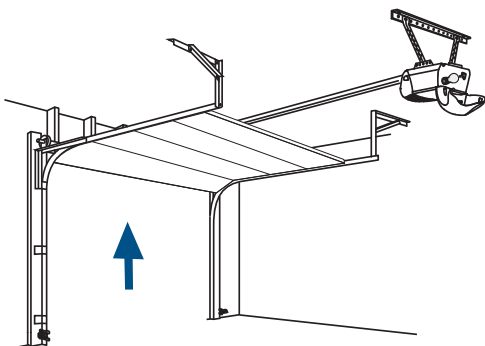

- 6** Test the remote control by pressing the button you programmed in step 4. If the garage door opener does not activate, repeat the programming steps.

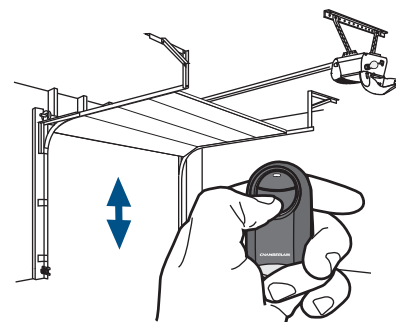




# GARAGE DOOR OPENERS (continued)

## Programming to a Genie® Intellicode® 2 Garage Door Opener

Before starting, you **MUST** have an existing Genie® Intellicode® 2 remote control programmed to the garage door opener. For help programming a Genie Intellicode 2 remote control to your Genie operator, see your Genie owner's manual.


The images throughout this manual are for reference only and your product may look different.

- 1** Start with your garage door closed.

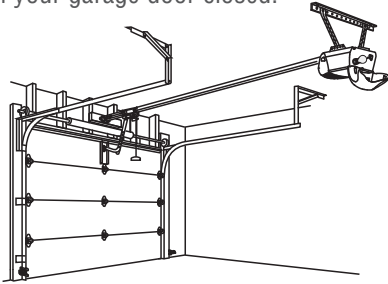


**IMPORTANT:** The remote will activate your garage door during programming. Ensure door is clear of ALL obstructions.


- 2** Press and hold bottom button on the remote control until the blue LED stays solid (approximately 15 seconds) then release the button.

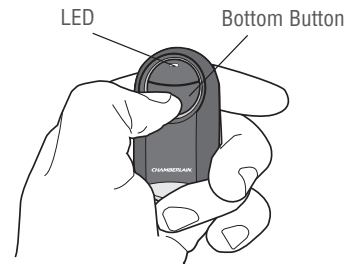


- 3** On the garage door opener, press and hold the Program/Set button until both the long and short LED's light up BLUE.

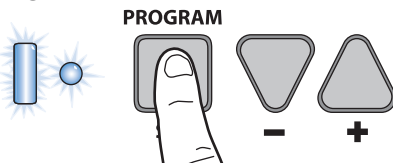

- 4** Press and release the Program/Set button and the long LED will flash PURPLE.

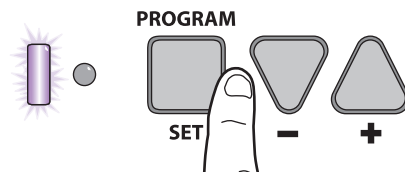


- 5** On the Genie® remote control, press and release the button that is already programmed to the garage door opener. Both LED's will flash PURPLE.

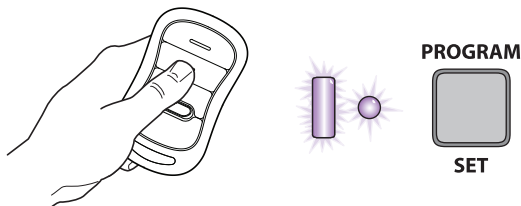


- 6** On the remote control, press and release the button that you would like to program 3 times. The blue LED will blink for up to 60 seconds.



- 7** Wait for the garage door to open, then press and release either of the buttons on the remote to complete programming.

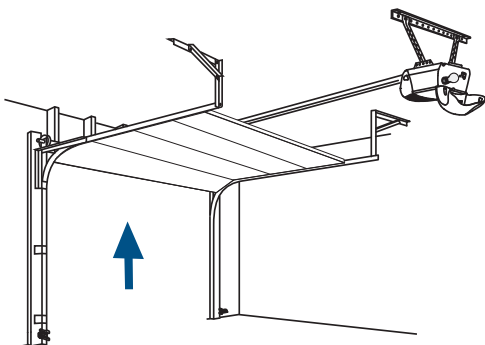

- 8** Test the remote control by pressing the button you programmed in step 6. If the garage door opener does not activate, repeat the programming steps.

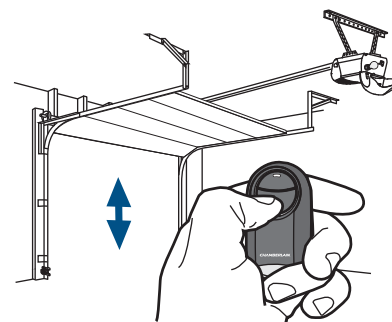

# COMMERCIAL DOOR OPERATORS

## Programming to a Commercial Door Operator with a Program/LEARN Button


The Program/LEARN button is typically located on the logic board of the operator or an external receiver. For help locating your Program/LEARN button contact your commercial door operator manufacturer.

The Mini Remote Control comes pre-programmed to work with a Chamberlain branded Commercial Door Operator with a yellow learn button. Press and release the yellow learn button, then press and hold the button on the remote control you would like to use. If programming is not successful, proceed through the steps below.


If you have an external receiver, proceed to the External Receiver programming page. See the Table of Contents for page location. The images throughout this manual are for reference only and your product may look different.

- 1** Start with your commercial door closed.


**IMPORTANT:** The remote will activate your commercial door during programming. Ensure door is clear of ALL obstructions.

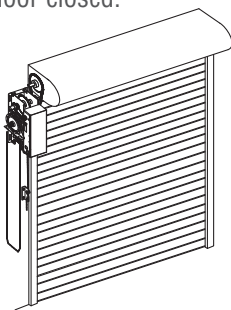

- 2** Press and hold bottom button on the remote control until the blue LED stays solid (approximately 15 seconds) then release the button.

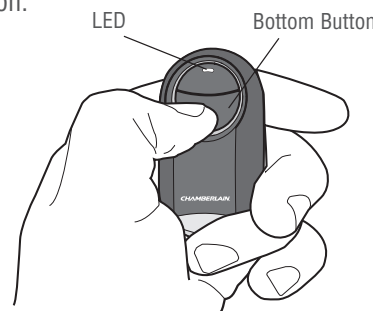


- 3** Press and release the Program/LEARN button\* on your commercial door operator. The program LED will illuminate.

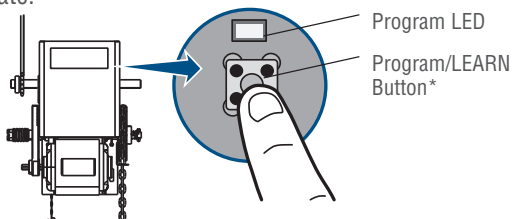


\* Depending on your product, the Program/LEARN button may have a different name (use the button for programming remote controls).


- 4** On the remote control, press and release the button that you would like to program twice. The blue LED will blink for up to 60 seconds.

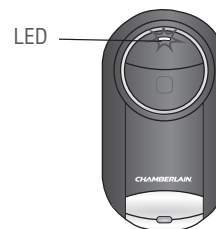


- 5** Wait for the program LED on the commercial door operator to blink, then press and release the Program/LEARN button to exit program mode.

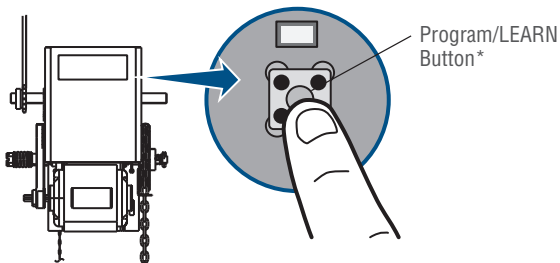

- 6** Wait for the commercial door to open, then press and release either of the buttons on the remote.

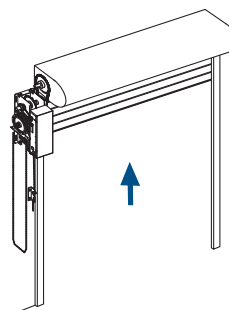

- 7** Test the remote control by pressing the button you programmed in step 4. If the commercial door operator does not activate, repeat the programming steps.

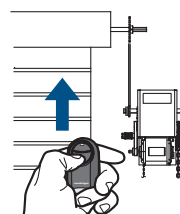

# GATE OPERATORS


## Programming to a Gate Operator with a Program/LEARN Button

The Program/LEARN button is typically located on the control board of the operator or an external receiver. For help locating your Program/LEARN button contact your gate operator manufacturer.

The Mini Remote Control comes pre-programmed to work with a Chamberlain branded Commercial Door Operator with a yellow learn button. Press and release the yellow learn button, then press and hold the button on the remote control you would like to use. If programming is not successful, proceed through the steps below.


If you have an external receiver, proceed to the External Receiver programming page. See the Table of Contents for page location. The images throughout this manual are for reference only and your product may look different.

- 1** Start with your gate closed.

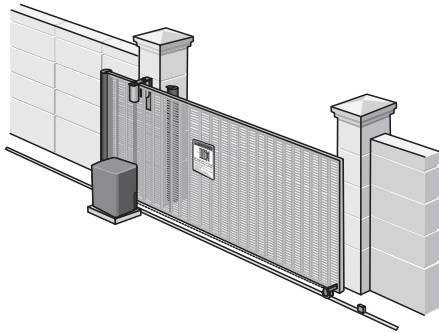


**IMPORTANT:** The remote will activate your gate during programming. Ensure gate is clear of ALL obstructions.

- 2** Press and hold bottom button on the remote control until the blue LED stays solid (approximately 15 seconds) then release the button.

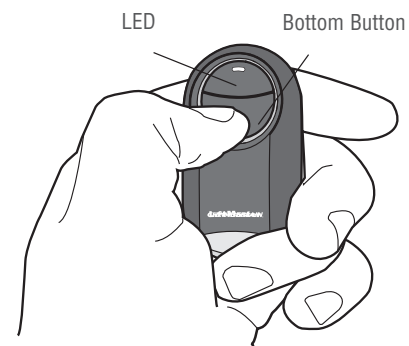

- 3** Press and release the Program/LEARN button\* on your gate operator. The Program/LEARN LED will illuminate.

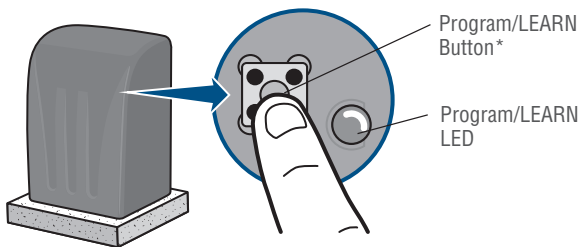


\* Depending on your product, the Program/LEARN button may have a different name (use the button for programming remote controls).

- 4** On the remote control, press and release the button that you would like to program twice. The blue LED will blink for up to 60 seconds.



- 5** Wait for the gate to open or the program/LEARN LED on the gate operator to blink, then press and release either of the buttons on the remote to complete programming.

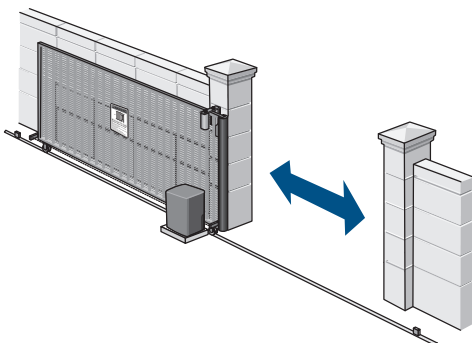

- 6** Test the remote control by pressing the button you programmed in step 4. If the gate operator does not activate, repeat the programming steps.



# EXTERNAL RECEIVERS

## Programming to an External Receiver with a Program/LEARN Button




If using the Universal Mini Remote Control with residential door openers, the remote control must be used only with door openers manufactured after 1993 that utilize photoelectric sensors. The photoelectric sensors are always located on or near the bottom of the door track.

The Mini Remote Control comes pre-programmed to work with a Security+ 2.0® Chamberlain or LiftMaster branded External receiver. Press and release the learn button, then press and hold the button on the remote control you would like to use. If programming is not successful, proceed with the steps below.

The external receiver is typically located on the product or mounted near the product.


The images throughout this manual are for reference only and your product may look different.

- 1** Start with your garage door, commercial door, or gate closed.

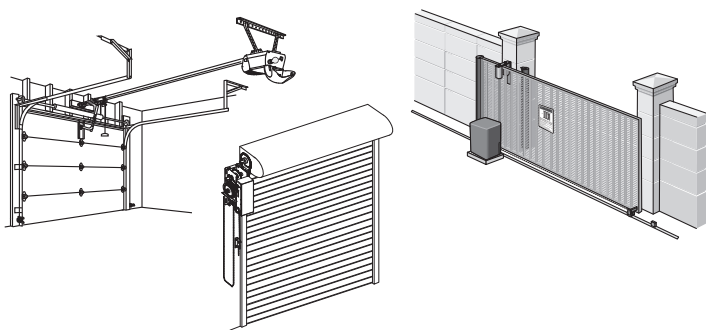


**IMPORTANT:** The remote will activate your door or gate during programming. Ensure door or gate is clear of ALL obstructions.

- 2** Press and hold bottom button on the remote control until the blue LED stays solid (approximately 15 seconds) then release the button.

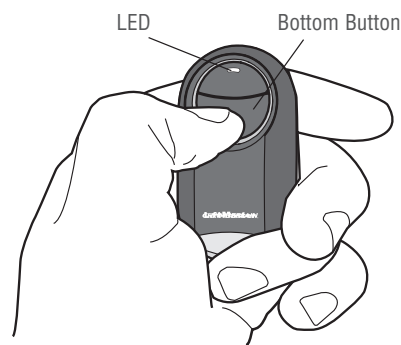

- 3** Press and release the Program/LEARN button\* on the external receiver.

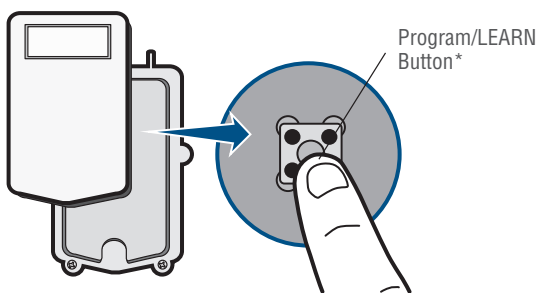


\* Depending on your product, the Program/SMART/LEARN button may have a different name (use the button for programming remote controls).


- 4** On the remote control, press and release the button that you would like to program twice. The blue LED will blink for up to 60 seconds.



- 5** Wait for the door or gate to open, then press and release either of the buttons on the remote to complete programming.

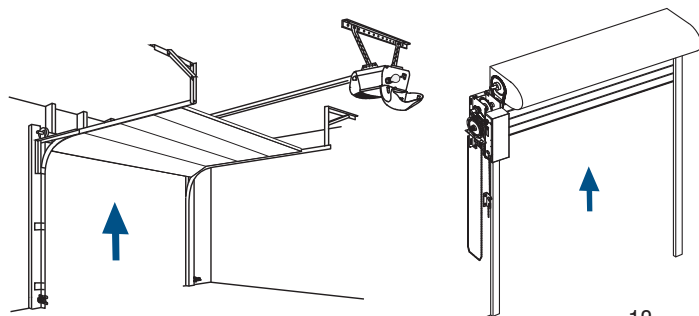

- 6** Test the remote control by pressing the button you programmed in step 4. If the garage door opener, commercial door operator, or gate operator does not activate, repeat the programming steps.

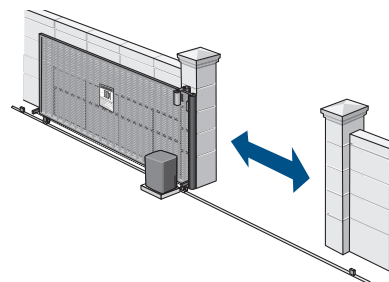


# MYQ® LIGHT CONTROLS

## Programming to a MyQ® Light Control


The Universal Mini Remote Control comes pre-programmed to work with Chamberlain and LiftMaster MyQ Light Controls. Press and release the learn button on the MyQ control, then press and hold the button on the remote control you would like to use. If programming is not successful, proceed through the steps below.

The images throughout this manual are for reference only and your product may look different.


- 1** Plug the lamp into the module and plug the module into an electrical outlet (the LED on the module will flash). **NOTE:** Make sure the lamp is switched ON.

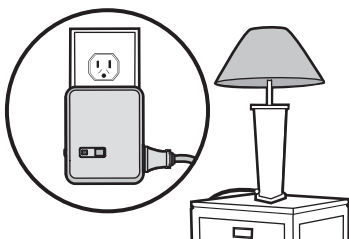


- 2** If the lamp is not ON, press and release the Power button on the module to turn the lamp ON.

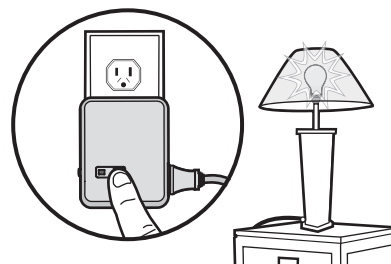

- 3** Press and hold the bottom button on the remote control until the blue LED stays solid (approximately 15 seconds), then release the button.

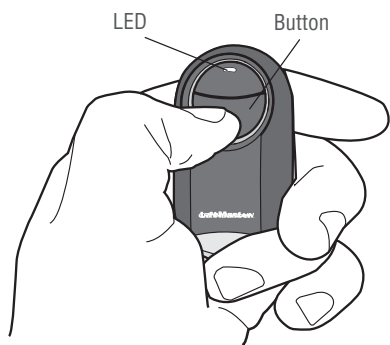


- 4** Press and release the Program/LEARN button on the MyQ Light Control.

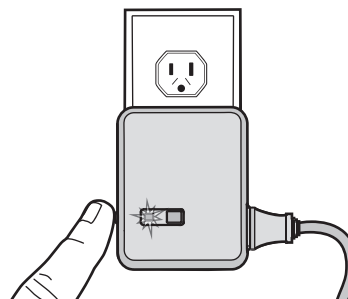

- 5** On the remote control, press and release the button that you would like to program twice. The blue LED will blink for up to 60 seconds.



- 6** Wait for the MyQ Light Control to turn off, then press and release either of the buttons on the remote to complete programming.

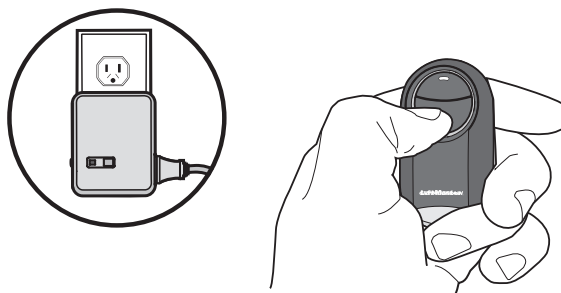

- 7** Test the remote control by pressing the button you programmed. If the MyQ Light does not activate, repeat the programming steps.

# NEED HELP?

## **The remote control does not have good range.**

- The range of the remote control may vary depending on environmental factors. Replace the battery if necessary.

## **The remote control will not program to a product with a Program/LEARN button.**

- Check the battery in the remote control. The LED should light when you press a button. Replace the battery if necessary.

## **The remote control LED will not light or is dim.**

- Replace the battery.

# BATTERY

## **WARNING**

To prevent possible **SERIOUS INJURY** or **DEATH**:


- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V CR2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212°F (100°C) or incinerate.

NOTICE: To comply with FCC and or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

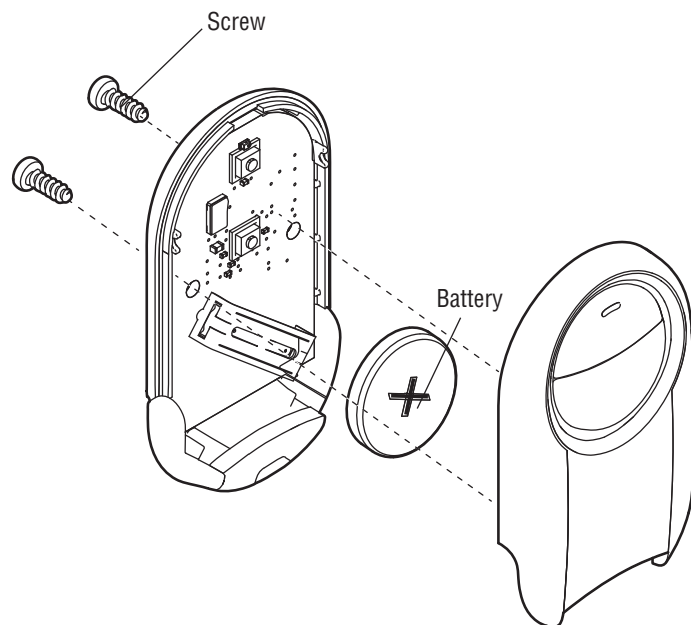

Dispose of batteries properly. Replace **ONLY** with 3V CR2032 coin batteries.

**Need Help?**

**[www.chamberlain.com](http://www.chamberlain.com)**

**1-800-442-1255**

Chamberlain and LiftMaster are Trademarks of Chamberlain Group. Genie is a Trademark of Overhead Door Corporation. Overhead Door is a Trademark of Overhead Door Corporation. Linear is a Trademark of Linear Corporation. Master Mechanic is a Trademark of TruServ. Sears is a Trademark of Sears & Roebuck. Stanley is a Trademark of The Stanley Works. Wayne Dalton is a trademark of Wayne Dalton Corporation. Do It is a trademark of Do It Best Corporation.

© 2017, The Chamberlain Group, Inc.  
All Rights Reserved