

# 800280

**CHERRY FINISH CORNER ETAGERE** 

# ASSEMBLY INSTRUCTION COASTER FINE FURNITURE



www.coastercompany.com

page 1 of 4 2012/6/7

## ASSEMBLY INSTRUCTION

### **ASSEMBLY TIPS:**


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts to are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## / Warning!!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.


#### PARTS IDENTIFICATION

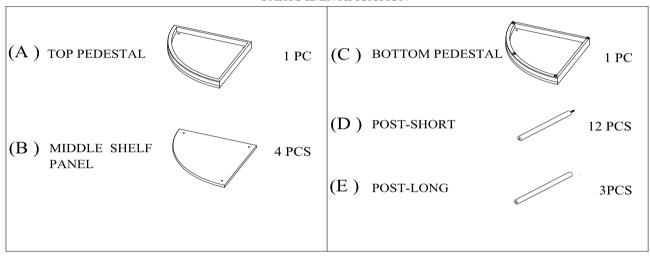

#### $\mathbf{Z}$

#### HARDWARE PACKAGE


NO	DESCRIPTION	FIGURE	Q'TY
1	BOLT 1/4"x1"	<b>D</b> animing	6 pcs
2	WALL ANCHOR ∅5mmx24mm	The state of the s	1 pc
3	SCREW-SMALL  Ø3mmx12mm	$oldsymbol{ heta}_{DD_{DL}}$	1 pc
4	SCREW-LARGE Ø3mmx16mm	<b>B</b> rinz	1 pc
5	WASHER 5/32"x8mm	0	1 pc
6	TIGHTWIRE  Ø3mmx300mm		1 pc

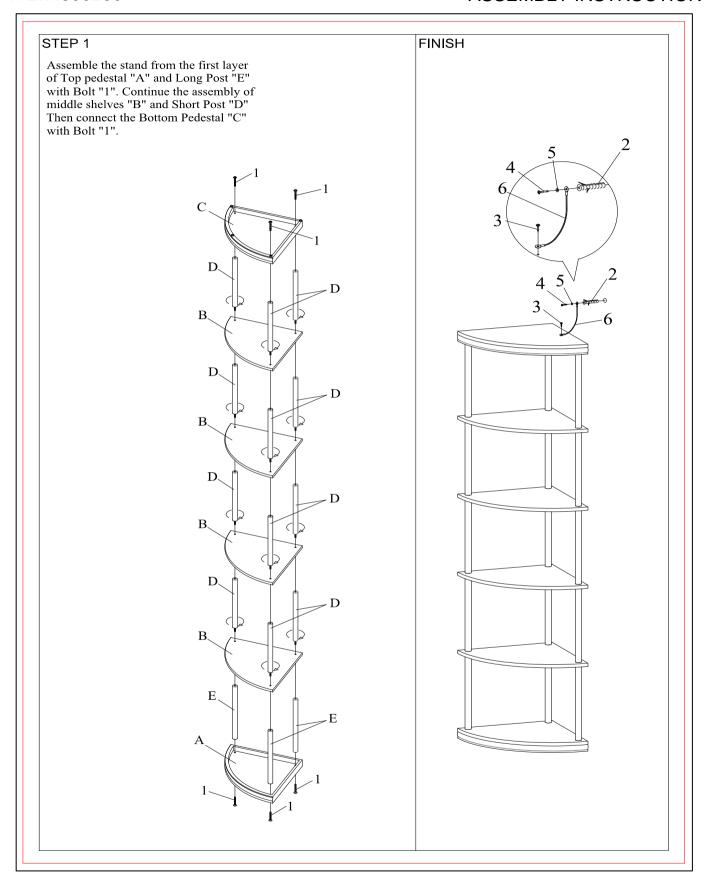




# Assembly Instruction of Anti-tipping hardware


1. Drill 2 holes in the wall at the location expected.

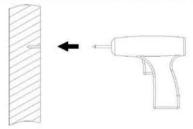

2. Install 2 wall anchors into the holes with a hammer.

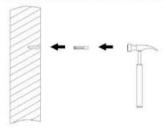

- 3. Position the etagere so that it is flush against the wall.
- 4. Pull up on the strap until it is tight.
- 5. Using the supplied screws and washers, secure the straps to the wall anchors as shown.

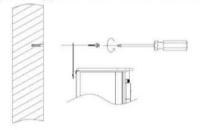

## WARNING

## Injury may result from tipping furniture

This restraint is not a substitute for proper adult supervision.

This restraint may provide protection against tipping furniture.

Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may result in injury and damage.

