

 
 
**ASSEMBLY INSTRUCTIONS  
COASTER FINE FURNITURE**



**[www.coastercompany.com](http://www.coastercompany.com)**

# ANTI - TIPPING KIT

- 1.1 Attach one of the mounting brackets securely to the back edge of the chest. Use the short screw.
- 1.2 Determine where the chest is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the chest.
- 1.3 Drill a 3/16" hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 1.4 Position the bracket over the anchor and use the long screw to securely attach the bracket to the wall.
- 1.5 Place the chest so the bracket on the back edge is in line with the bracket on the wall.
- 1.6 Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 1.7 To double lock return the beaded end back through the keyhole as shown.
- 1.8 Check to make sure the cable tie is securely laced and locked to the brackets.

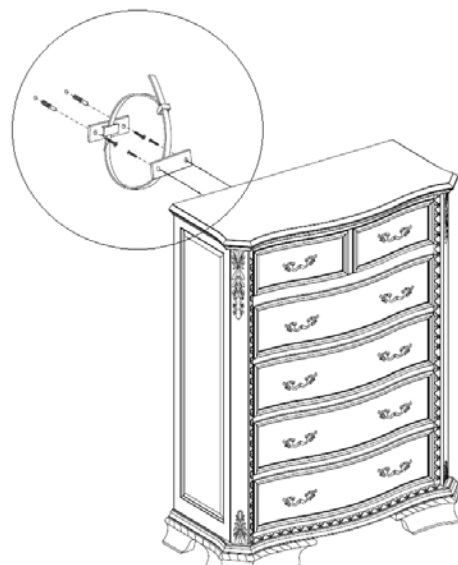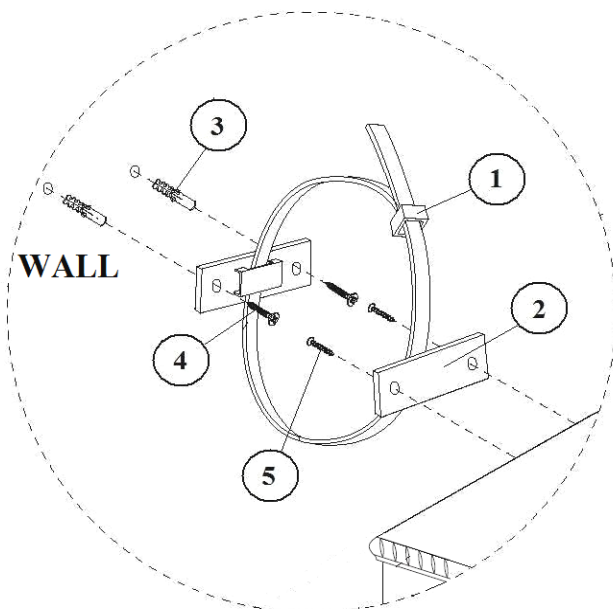

## HARDWARE IDENTIFICATION

|   |                 |               |                                                                                     |       |
|---|-----------------|---------------|-------------------------------------------------------------------------------------|-------|
| 1 | CABLE TIE       | 250 MM        |  | 1 PC  |
| 2 | PLASTIC BRACKET | 45 X 20 X 4MM |  | 2 PCS |
| 3 | PLASTIC ANCHOR  | Ø7 X 30MM     |  | 2 PCS |
| 4 | LONG SCREW      | 4 X 25MM      |  | 2 PCS |
| 5 | SHORT SCREW     | 4 X 18MM      |  | 2 PCS |