 


C R O S L E Y
FURNITURE

42" CAST ALUM. DINING TABLE
CO600142-BK

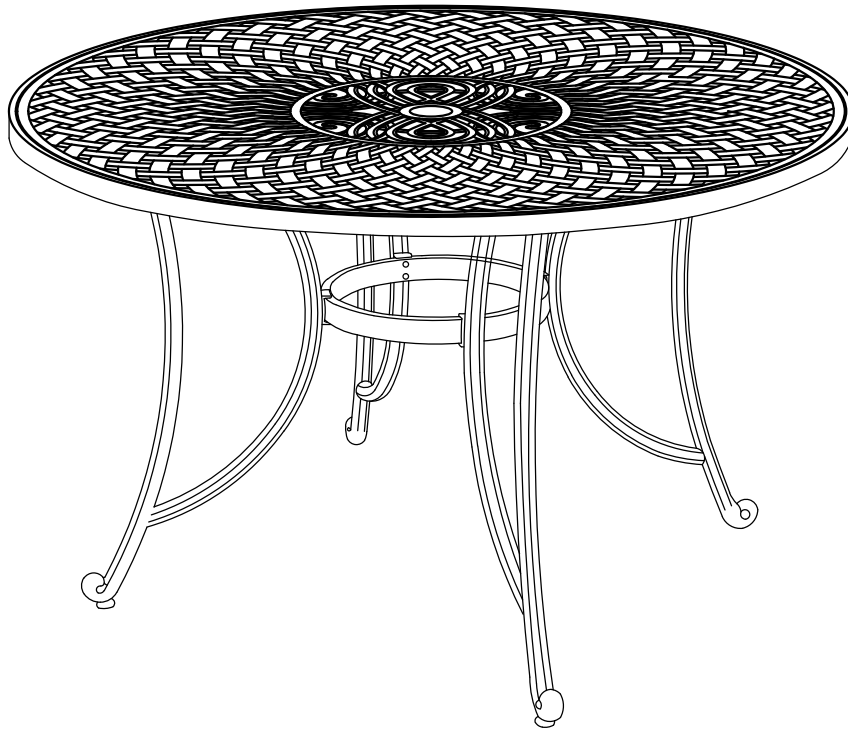

C R O S L E Y

 
 

FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.







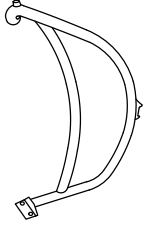


Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PARTS LIST

A	B	C
		
Top 1 PC	Leg 4 PCS	Stretchers 1 PC

 
HARDWARE LIST

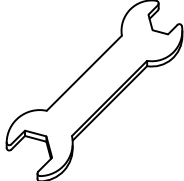1	2	3	4	5
				
Cylinder Bolt (M8*25) 4 PCS	Spring Washer (M8) 4 PCS	Flat Washer (M8) 4 PCS	Nut (M8) 4 PCS	Nut Cap (M8) 4 PCS
6	7	8	9	
				
Bolt (M6*30) 8 PCS	Flat washer (M6) 8 PCS	Bolt cap (M6) 8 PCS	Wrench (M6) 1 PC	

Step 1: Place Top (A)
upside down on a soft cloth.

Insert all Cylinder Bolts (Part #1) into
the pre-drilled holes of Top (A).

 Step 2: Attach two adjacent Legs (B)
to Top (A) by inserting the Cylinder
Bolts (Part #1) through the holes in
the ends of the Legs (B). Now secure
the Legs (B) using Flat Washers
(Part #3), Spring Washers (Part #2)
& Nuts (Part #4).
Note - -Tighten Nuts only half way
using wrench (#9) .

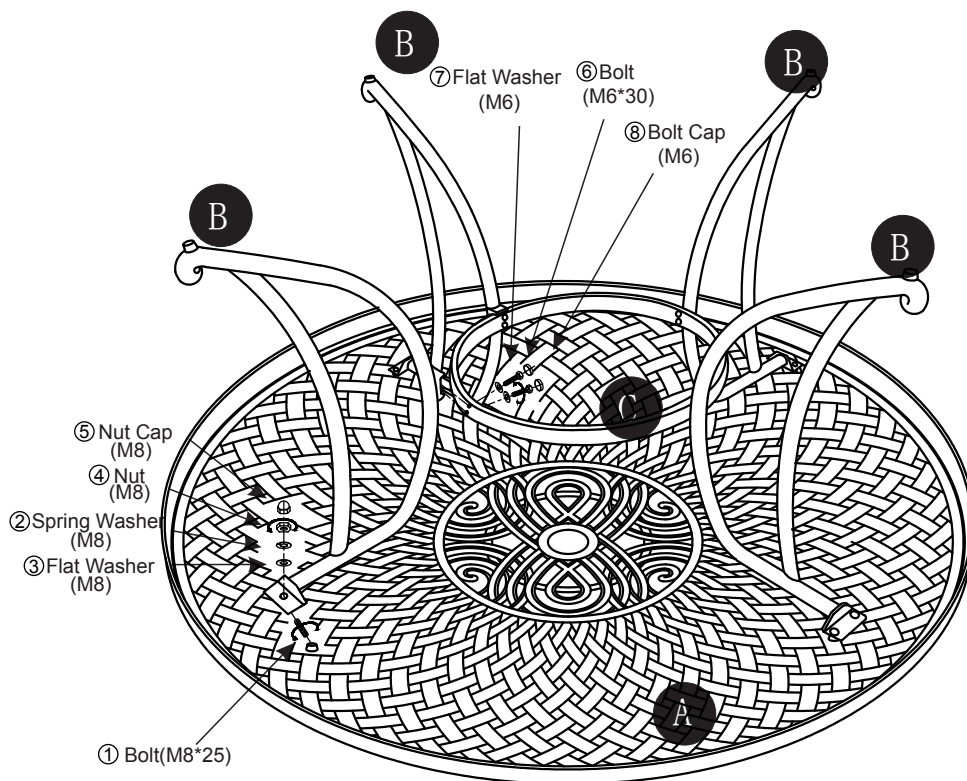

Step 3: Attach Stretcher (C) to
attached Legs (B) using Flat Washers
(Part #7), and Bolts (Part #6) as shown.
Note - Tighten Nuts only half way
with wrench (#9). Now attach the other two
Legs (B) to Top (A) & Stretcher (C)
using the same method as the first
two legs. Tighten all bolts completely
with wrench (#9).

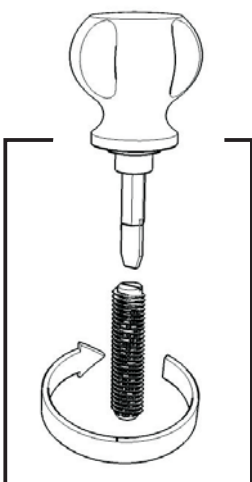 


Figure 1

Flathead screw
driver(not included)

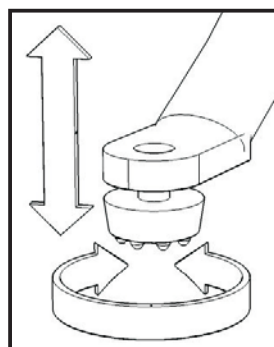 


Figure 2

Step 4: Cover all Nuts and bolts with
Nut Caps (Part #5) & Bolt Caps (Part
#8). Turn the table over into the upright
position.
Congratulations! You are finished.

C R O S L E Y
FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.

C R O S L E Y

FURNITURE

CAST ALUMINUM
HIGHBACK ARM CHAIR
CO6102-BK



C R O S L E Y






FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.





 
 

 

 
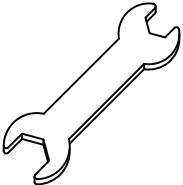 
Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.


PARTS LIST

A	B	C	D	E
				
Seat 1 PC	Back 1 PC	Leg 1 PC	Left Arm 1 PC	Right Arm 1 PC


HARDWAARE LIST

1	2	3	4	5
				
Flat Washer(M6) 4PCS	Flat Washer(M8) 10PCS	Nuts(M6) 4PCS	Nuts(M8) 10PCS	Short phillips Heat Bolt (M6*25) 2PCS
6	7	8	9	10
				
Long phillips Heat Bolt (M6*30) 2PCS	Nut Caps(M6) 4PCS	Nut Caps(M8) 10PCS	Spring Washers (M6)4PCS	Spring Washers (M8)10PCS
11				
				
Wrench (M6 & M8) 1 PC				

 
Step:1 Place seat (A) upside down on a soft cloth. Attach Legs (C) to Seat (A) with, Flat washers(Part #2), Spring washers(Part #10),and Nuts(Part #4).Note - Do not tighten Nuts(Part #4) Completely at this time.

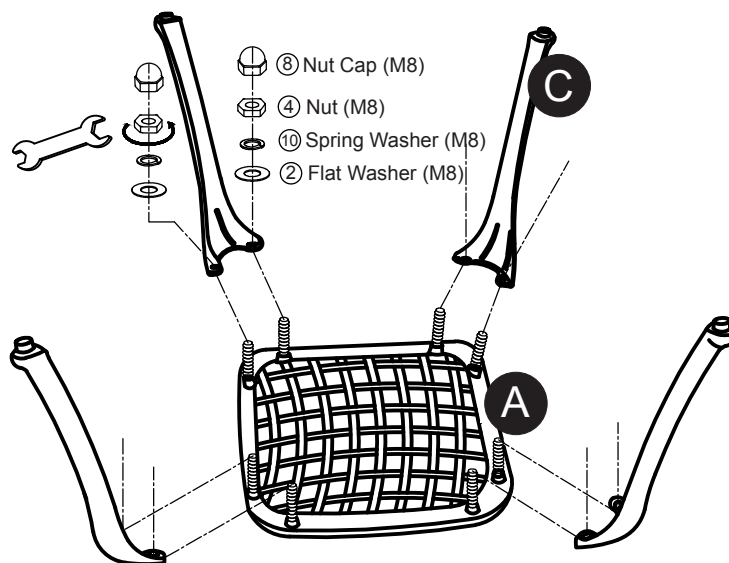

 
Step:2 Attach Back (B) to Seat(A) with Flat Washers(Part #2),Spring Washers(Part #10) & Nuts(Part #4).Note - Do not tighten Nuts(Part #4) completely at this time.

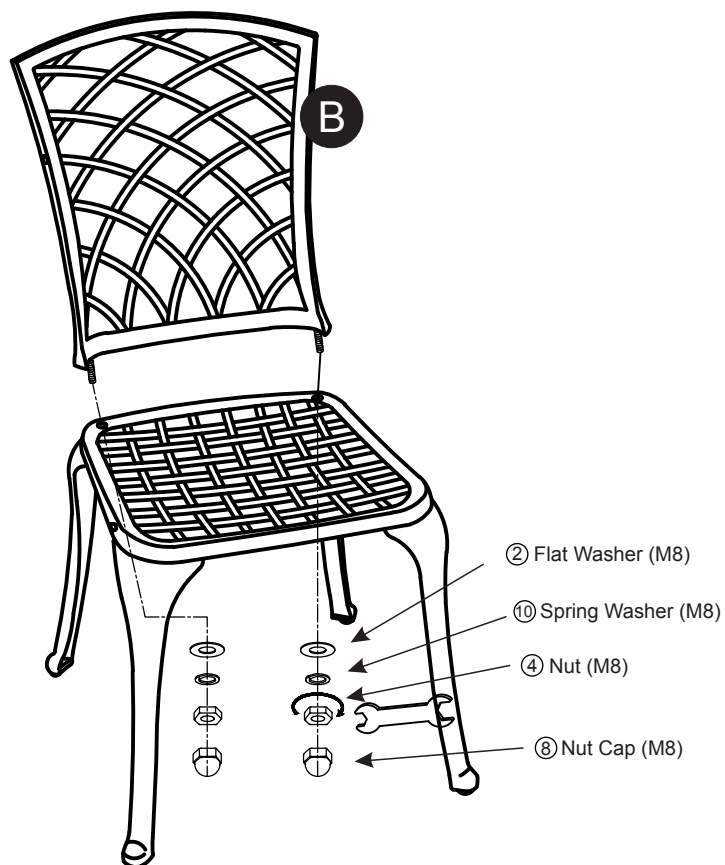

 Step:3 Attach Arms (E&D) with Short Phillips Head Bolts(Part #5), Long Phillips Head Bolts(Part #6),Flat Washers(Part #1), Spring Washers(Part #9) & Nuts(Part #3).Completely tighten all Nuts(Part #'s 3 & 4) and cover with Nut Caps (Part #'s 7 & 8).

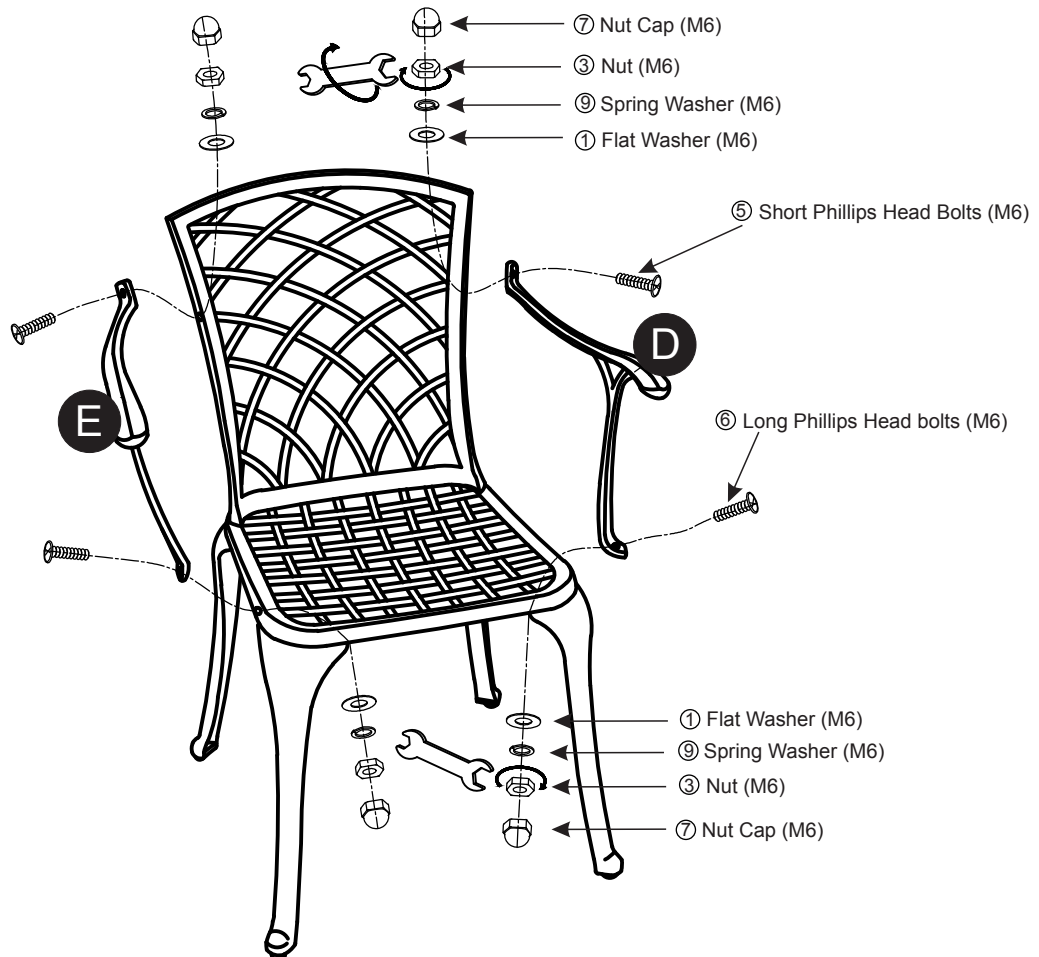

Step:4 Congratulation!
You are finised

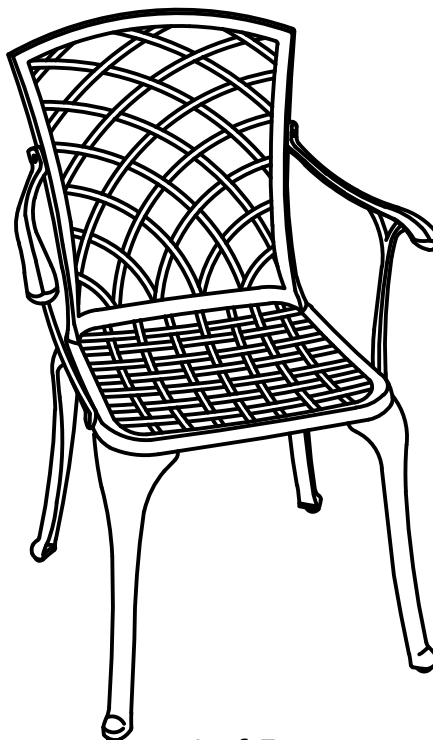 

C R O S L E Y
FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.