

88 5180 101

Art & Crafts

Entertainment Credenza

(Cottage Oak)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

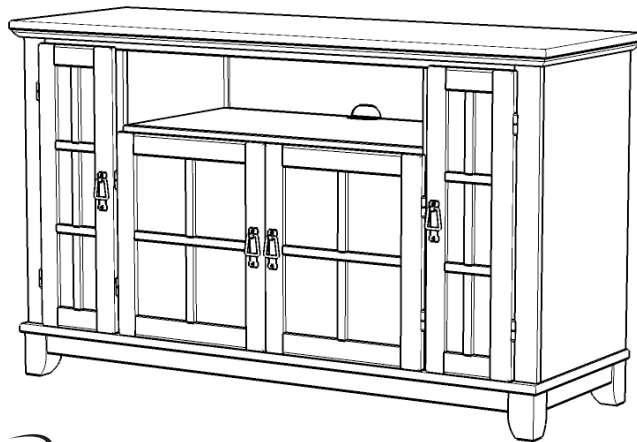

Part List

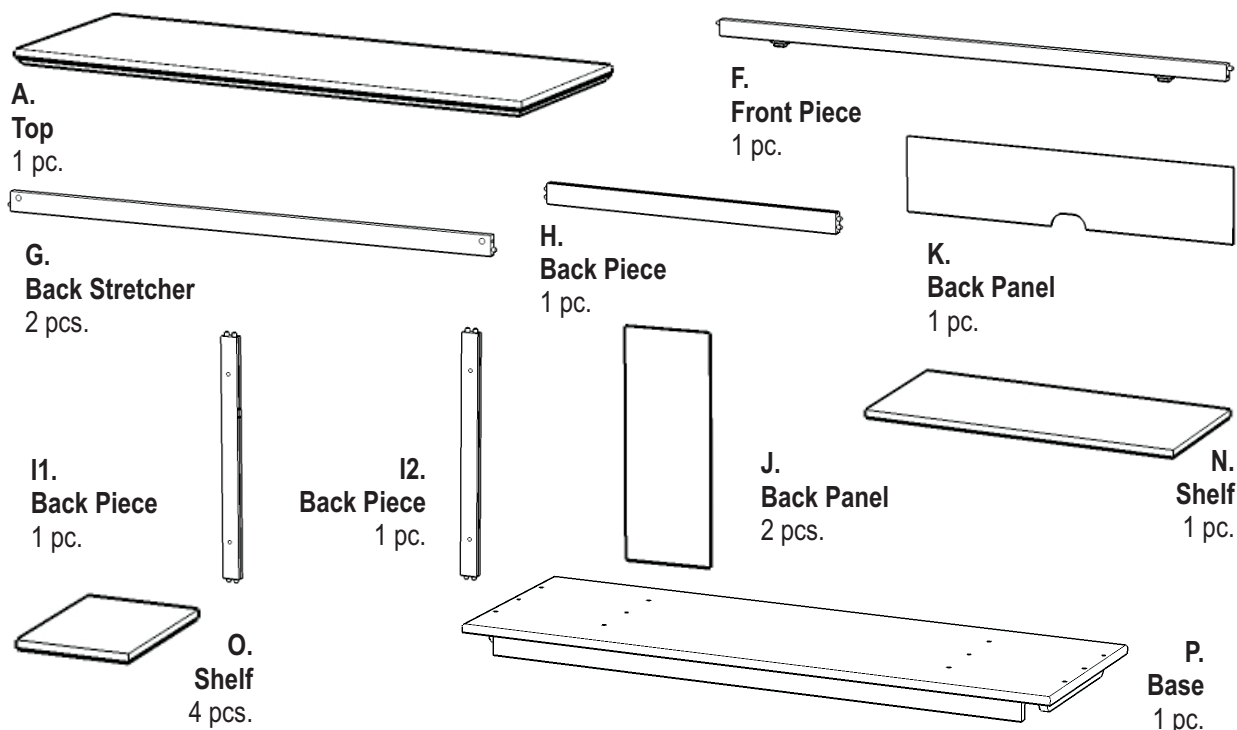

Hardware List

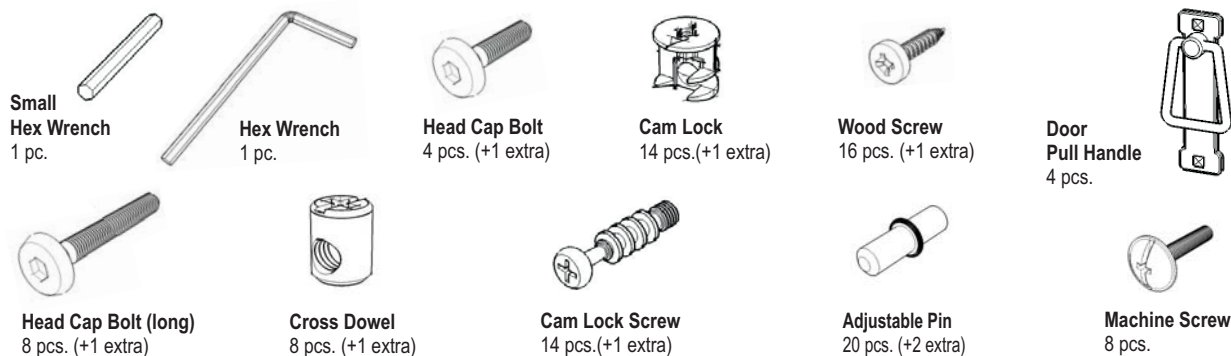

For assembly see instructions in carton 88 5180 102

Tools required for assembly : Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

88 5180 102

Art & Crafts Entertainment Credenza (Cottage Oak)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Casual Attire For Today's Home

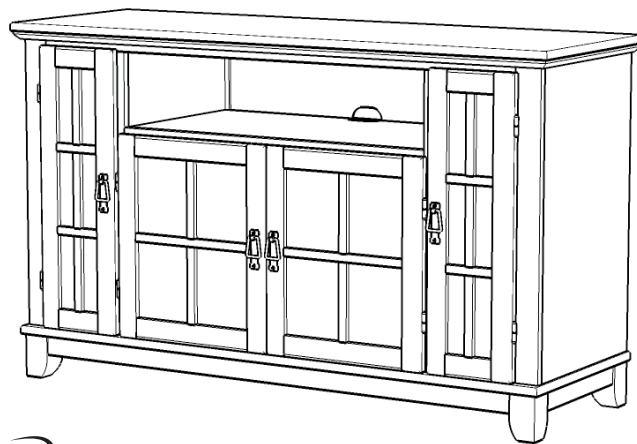

Part List (in this carton)

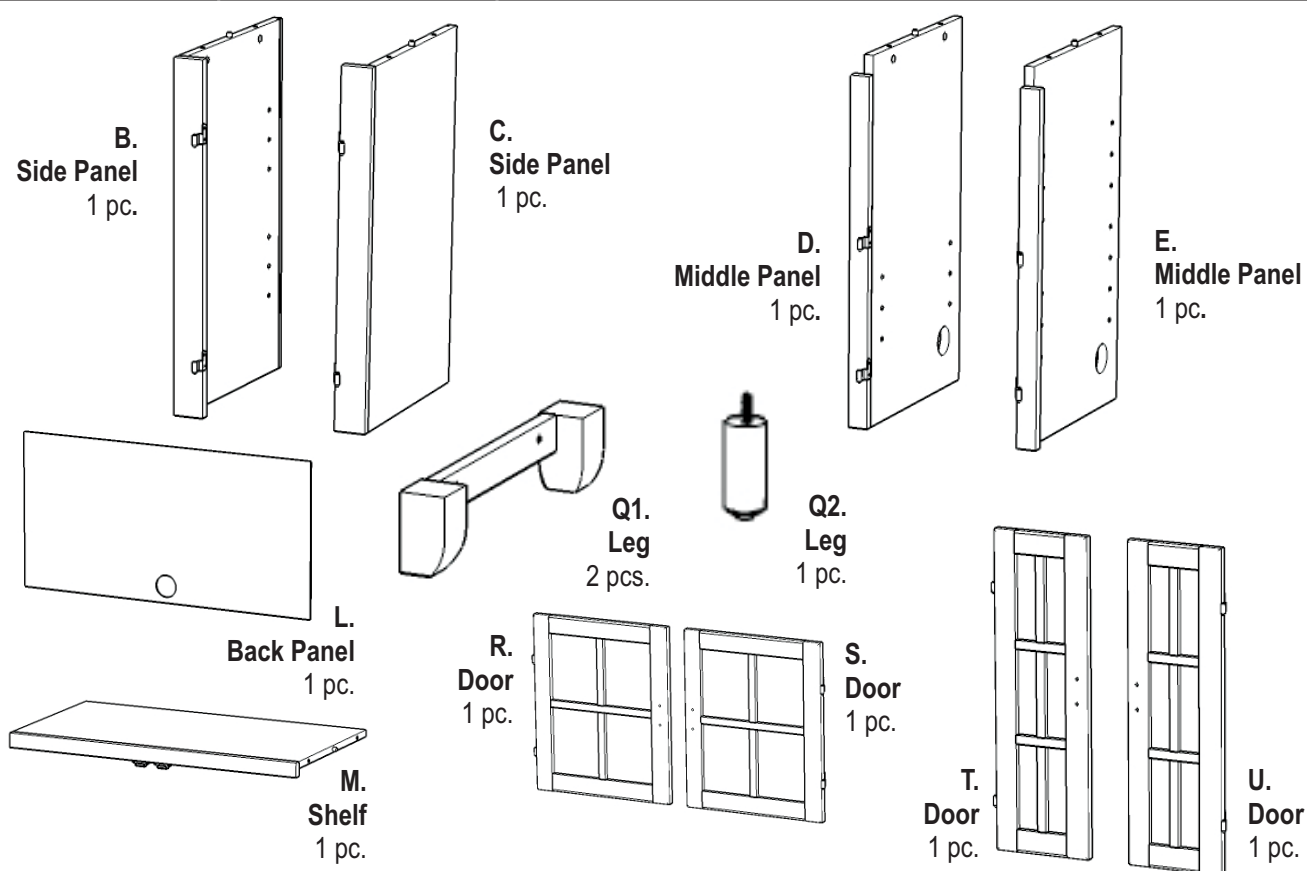

Also need the following from carton 88 5180 101 :

Part List in carton 88 5180 101

Top (A)	1 pc.
Front Piece (F)	1 pc.
Back Stretcher (G)	2 pcs.
Back Piece (H)	1 pc.
Back Panel (K)	1 pc.
Back Piece (I1)	1 pc.
Back Piece (I2)	1 pc.

Part List in carton 88 5180 101

Back Panel (J)	2 pcs.
Shelf (N)	1 pc.
Shelf (O)	4 pcs.
Base (P)	1 pc.

Hardware List in carton 88 5180 101

Hex Wrench	1 pc.
Small Hex Wrench	1 pc.
Head Cap Bolt	4 pcs.
Head Cap Bolt (long)	8 pcs.
Cross Dowel	8 pc.
Cam Lock	14 pc.
Cam Lock Screw	14 pc.

Hardware List in carton 88 5180 101

Wood Screw	16 pc.
Adjustable Pin	20 pc.
Door Pull Handle	4 pcs.
Machine Screw	8 pc.

Tools required for assembly : **Phillips** screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

Assembly Instructions 2/4


IMPORTANT

* Do not tighten up all the screws until each part is properly assembled.

* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.


STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

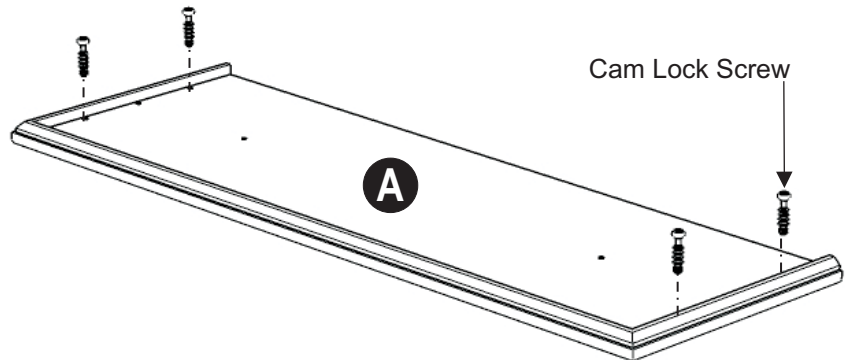


STEP 2

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C) and Middle Panels (D), (E).

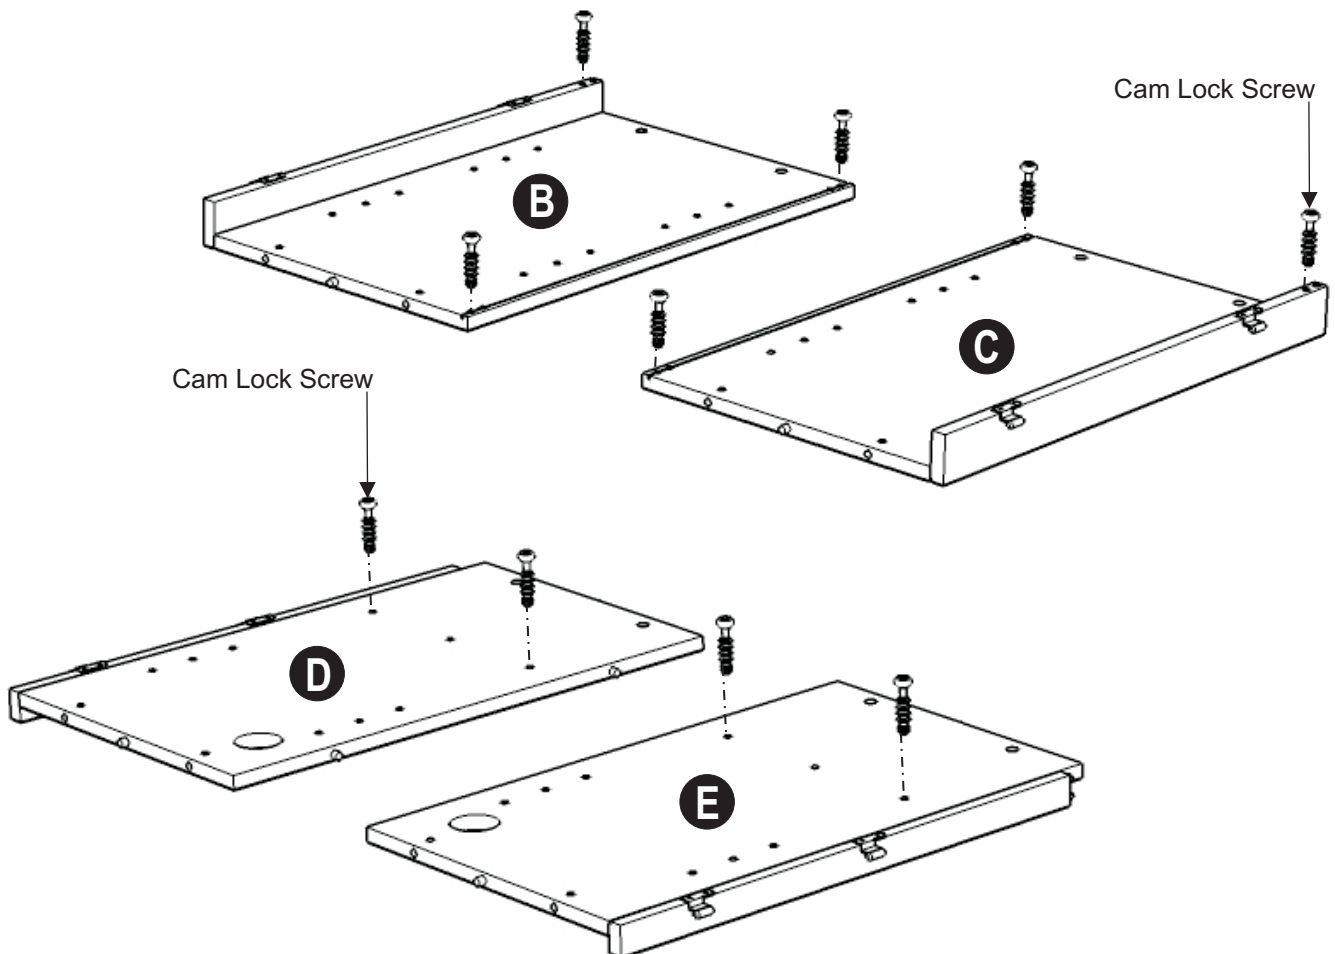

Assembly Instructions 3/4

STEP 3

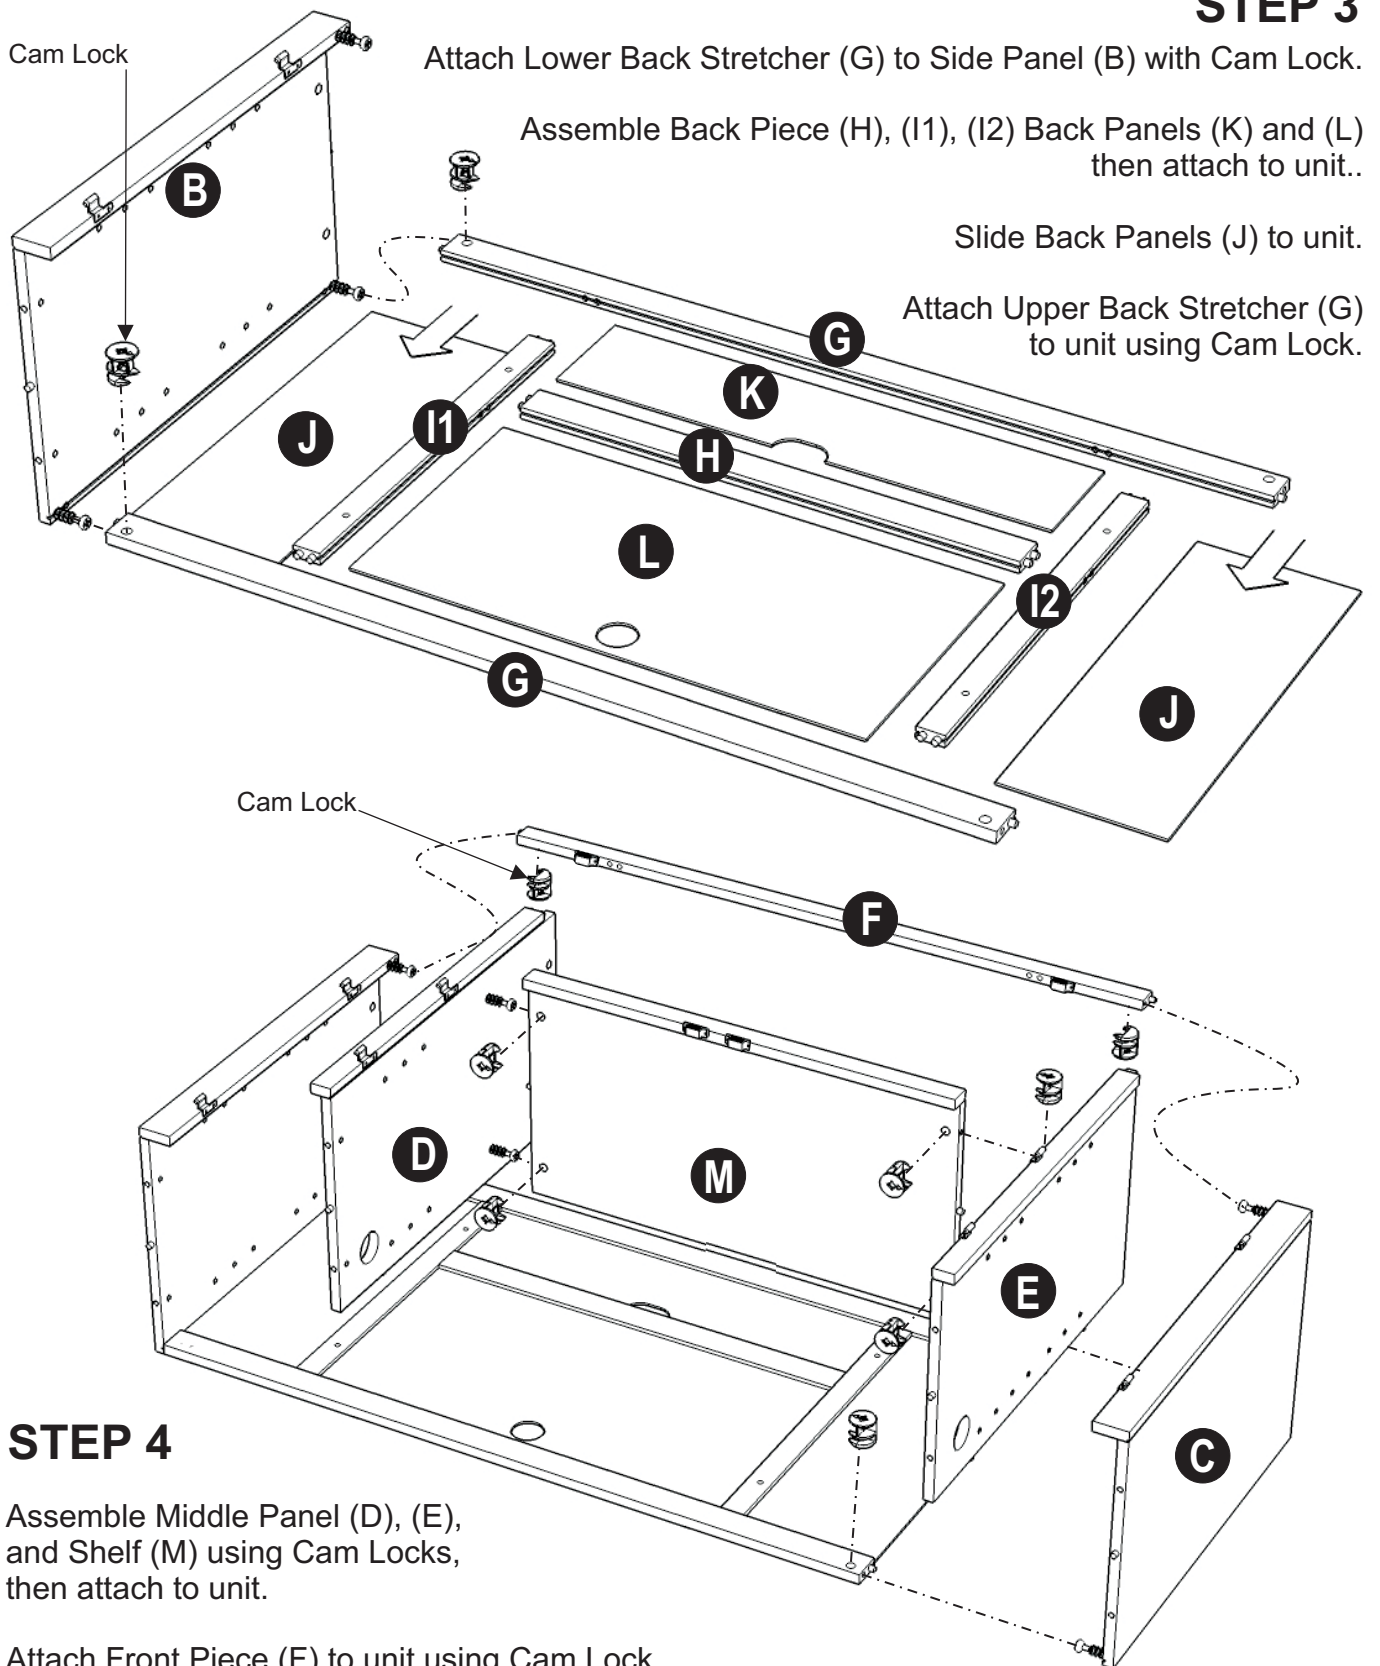

STEP 4

Assemble Middle Panel (D), (E), and Shelf (M) using Cam Locks, then attach to unit.

Attach Front Piece (F) to unit using Cam Lock.

Attach Side Panel (C) to unit using Cam Locks.

Assembly Instructions 4/4

STEP 5

Attach Base (P) to unit with Head Cap Bolts and Cross Dowels.

Attach Legs (Q1) to unit with Head Cap Bolts.

Attach Leg (Q2) to unit.

STEP 6


Place Top (A) onto the unit, using Cam Locks.

Attach Doors (S), (T), (U) and (V) by sliding the door lift hinges into the side panels lift hinges. (see Figure 1)


Assemble Pull Handles to Doors (S), (T), (U) and (V) with Machine Screws. (see Figure 2)

Insert Adjustable Pins into side panels and middle panels at the desired level.


Place Shelves (O) and (N) into position.

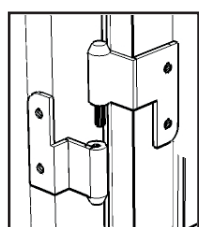

(Figure 1)

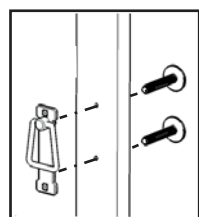

(Figure 2)

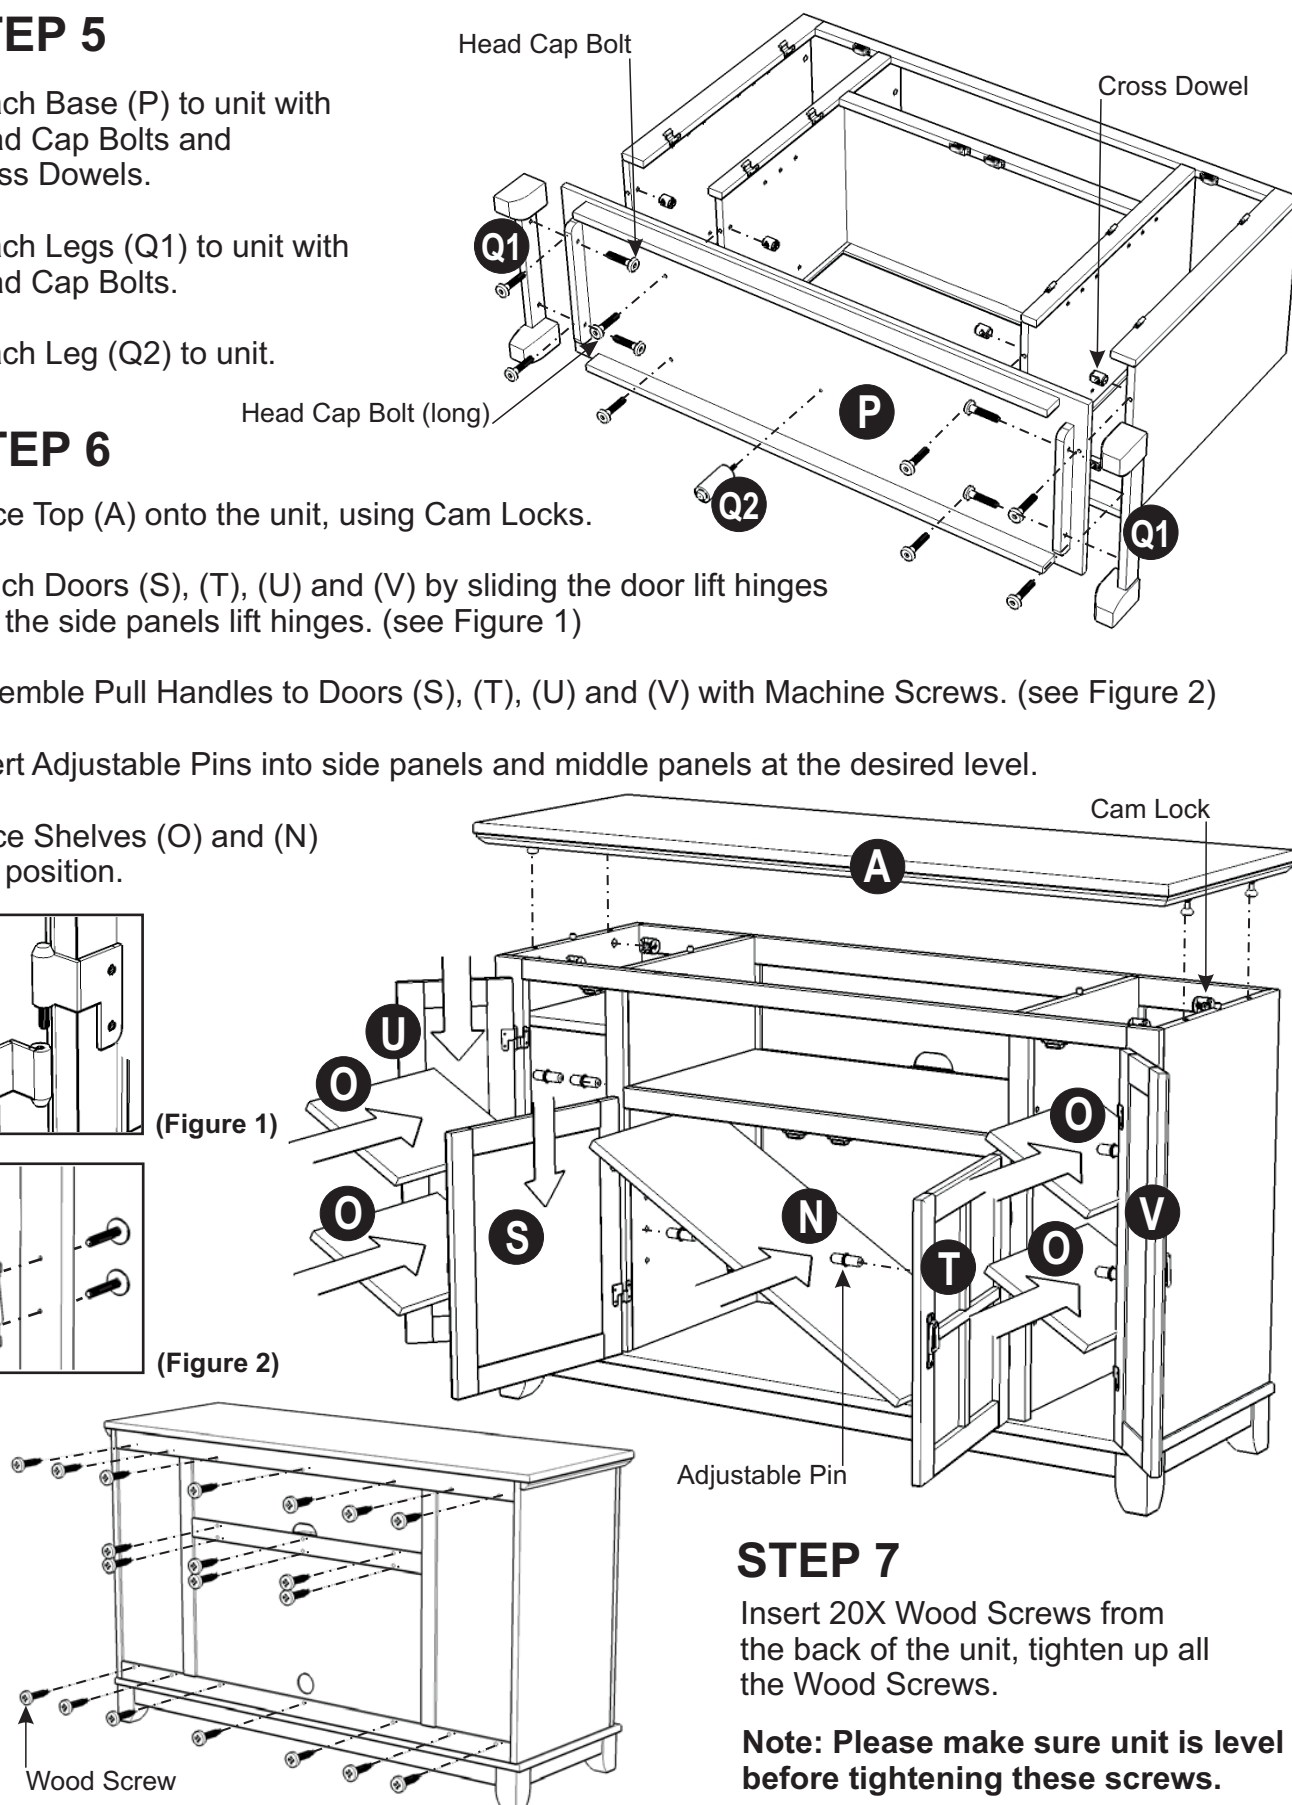

STEP 7

Insert 20X Wood Screws from the back of the unit, tighten up all the Wood Screws.

Note: Please make sure unit is level before tightening these screws.