88 5531 10N Bedford Entertainment Credenza


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Part List




Casual Attire For Today's Home

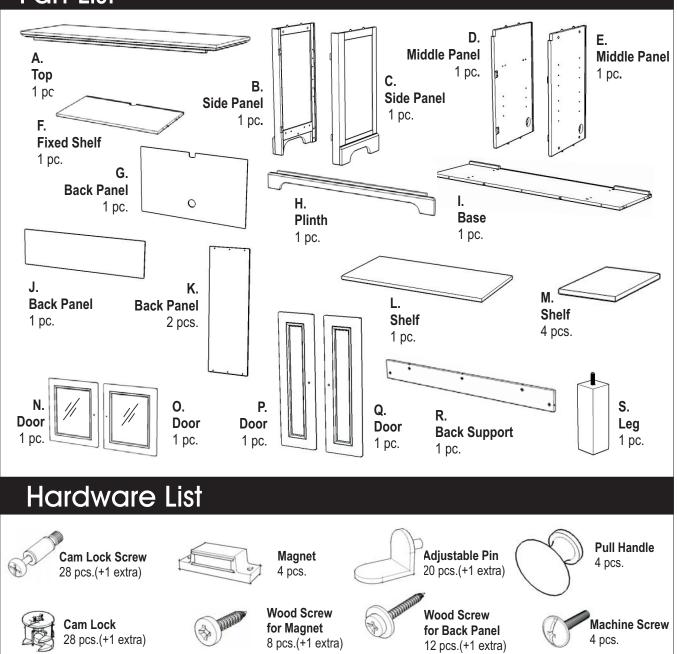

Tools required for assembly : Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com


Assembly Instructions 2/4

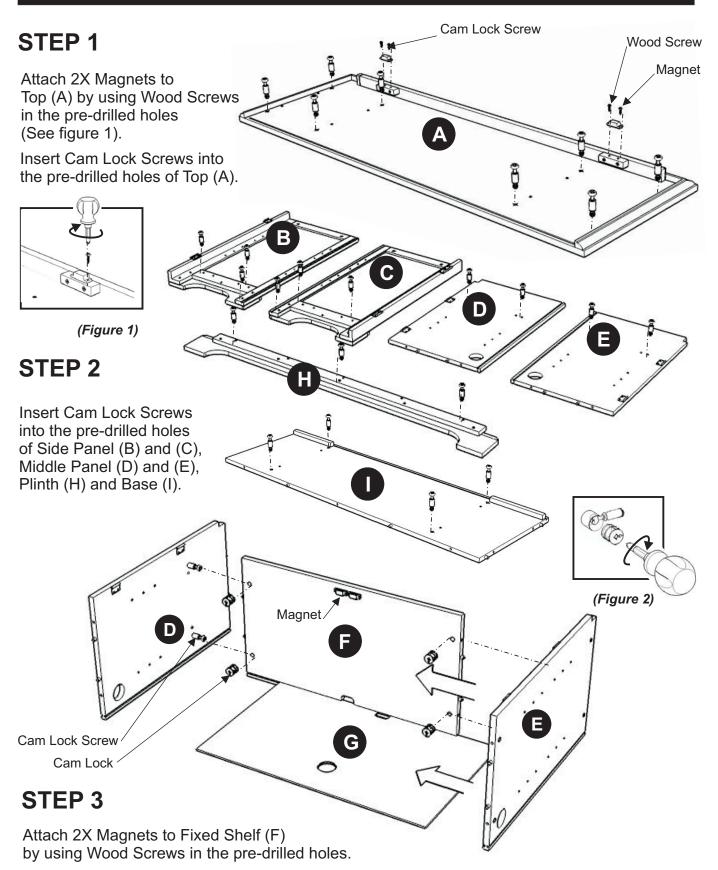

Attach Fixed Shelf (F) to Middle Panel (D) with Cam Locks (See figure 2), then slide Back Panel (G) into position.


Attach Middle Panel (E) to the unit with Cam Locks.

Assembly Instructions 3/4

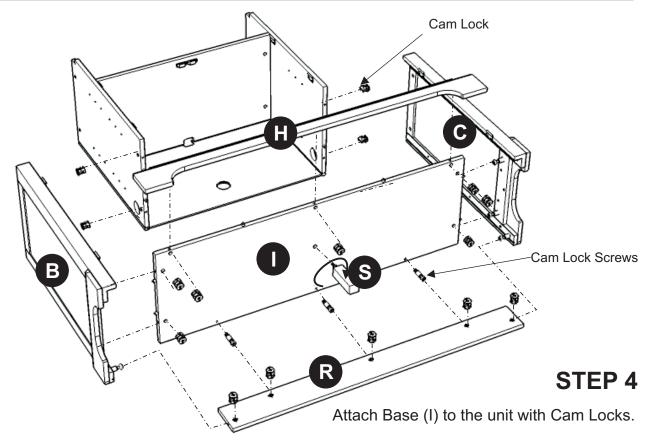


Put 3X Cam Lock Screws into the pre-drelled holes of Base (I) as shown, then attach Back Support (R) to Base (I) with Cam Locks and attach Side Panel (B) and (C), Plinth (H) to the unit with Cam Locks.

Tighten up Leg (S) in the pre-drilled hole of unit as shown.

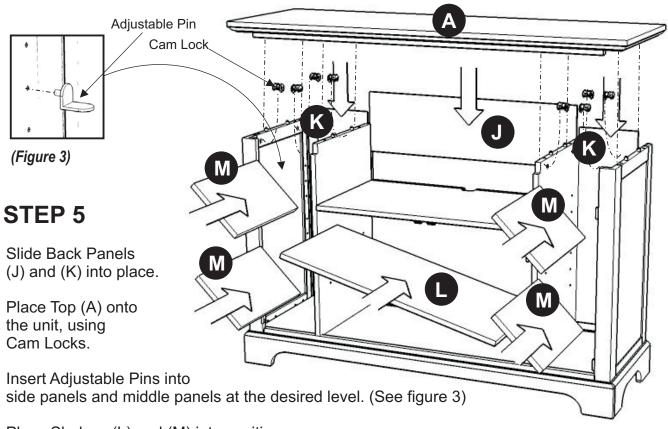


Place Shelves (L) and (M) into position.

Assembly Instructions 4/4

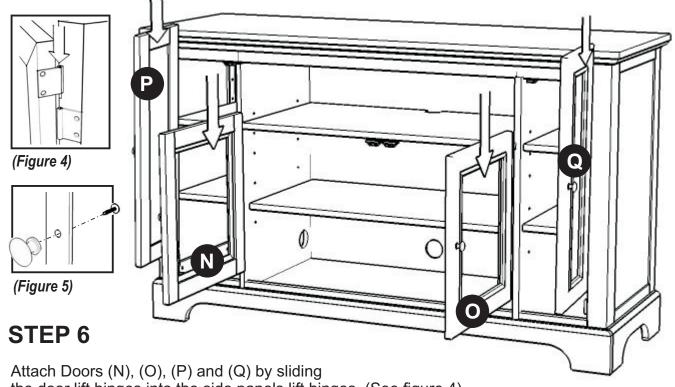

the door lift hinges into the side panels lift hinges. (See figure 4)

Assemble Pull Handles to Doors with Machine Screws. (See figure 5)

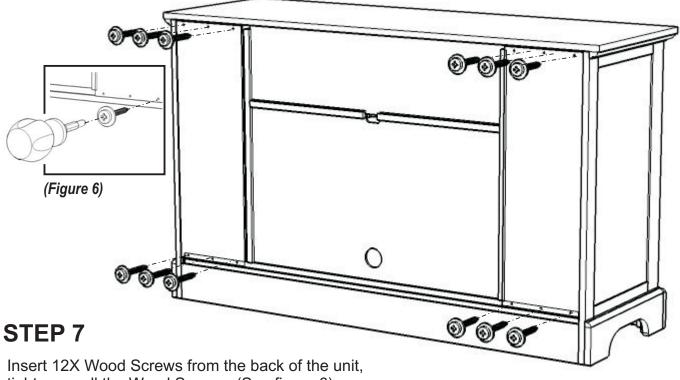

tighten up all the Wood Screws. (See figure 6)

Note: Please make sure unit is level before tightening these screws.