

## Roller Shade Installation Instructions


Thank You for purchasing this high quality shade. You can take pride in the fact that you have made a purchase that will add functional and fashionable beauty to your home.

Your shade installs in most windows in a few easy steps. Please review the instructions completely before installing your shade.

Please read the warning information including in these instructions, and with your shades


### Step 1 - Mount The Brackets - Standard Shade

- If the clutch is on the right side of the shade, mount brackets as shown.
- If clutch is on the left side of the shade, reverse the bracket positions.

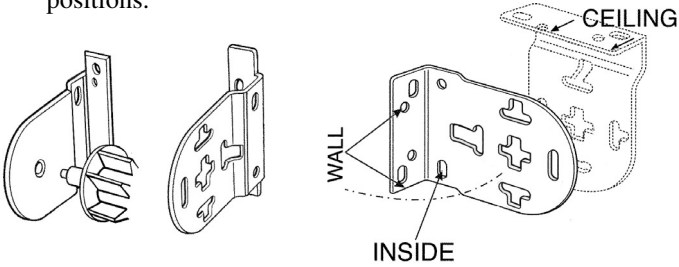

### Step 2 - Install The Shade - Standard Shade


- Hold the blind to the brackets with the fabric hanging up from the back of the shade.
- Fit the spring plunger into its bracket. Push the shade into this bracket, depressing the plunger. With the locating hook pointed downwards, place into the locating slot of the bracket. Allow the hook to drop downwards so that it locks into place in the bracket. (See figure 1)

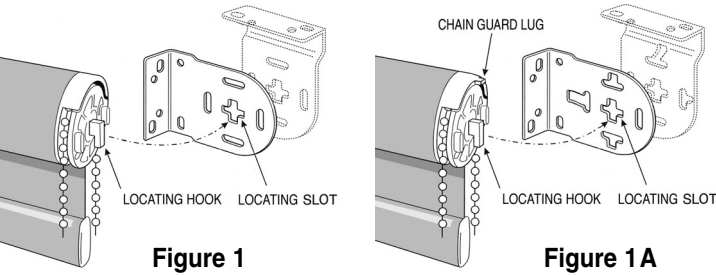

- Fit the spring plunger into its bracket and push the blind into the bracket, depressing the plunger. With the locating hook pointing downwards and the chain guard lug at the top, place the hook into the locating slot of the bracket. Allow the hook to drop downwards so that it locks into place in the bracket. (See figure 1A).

### Step 1A - Mount The Brackets - Fascia Valance

- The open end of each bracket faces downward, as shown in the drawing below. Note: if you have an inside mount and must use “inside mount holes,” you will have to drill your own holes in the side of the bracket. Use at least two screws per bracket, and make sure that the screw heads clear th clutch. Fit fascia valance into top notch of brackets.

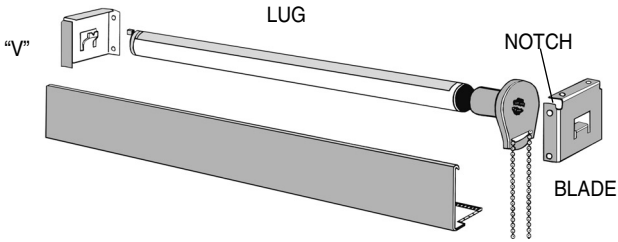


### Step 2A - Install The Shade - Fascia Valance

- Push the clutch straight onto the blade of its bracket. The bottom of the clutch should always point straight down, as shown above. Lower the lug of the end plug onto the “V” of its bracket. The roller should fit in the brackets securely, with just a little play.

### Step 1B - Mount The Brackets - Regular or Executive Valance


#### For Wall Mount:

- Install brackets supplied as shown in diagram. Place valance into clip and snap into place.

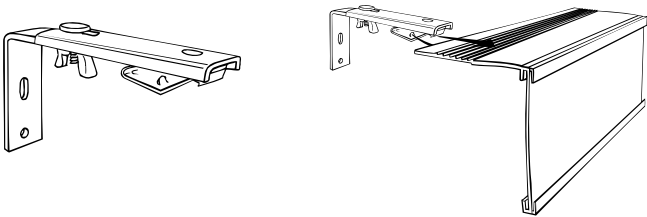

#### For Ceiling Mount:

- Pre-drill valance roof. Position hole of bracket inline with predrilled hole and screw into ceiling.

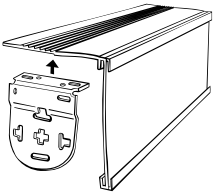


### Step 2B - Install The Shade - Regular or Executive Valance

- Follow instructions in Step 2.

### Step 3 - Install The Tension Device

- This tension device reduces the hazards of strangulation and entanglement by limiting access to the bead chain.
- Anchor the device to the window frame or wall so that young children cannot pull the bead chain around their neck.
  - Lower the shade
  - Hold the tension device in the upright position as shown in the diagram.
  - Position the tension device on the window frame or wall so that the device and the control chain do not interfere with the raising and/or lowering of the shade.
  - Hold the tension device upright, and in position, insert and secure the screw through the hole.

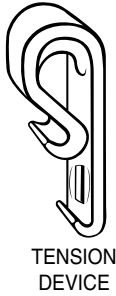

### Step 4 - Operating The Shade

- Pull gently on the chain in one direction to raise the shade; pull in the other direction to lower it.


### Cleaning The Shade

- Roller shades can be cleaned with a soft cloth or sponge using a mild liquid and warm water.

### Useful Tip In Case Your Blind Doesn’t Go Up Straight

#### Operation

- Make sure brackets are mounted level, or shade will roll crooked.**
- If shade veers toward the right. correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the left edge of the roller as possible. It will act as a shim. (See Illustration)
- If shade veers toward the Left. correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the right edge of the roller as possible. It will act as a shim. (See Illustration)

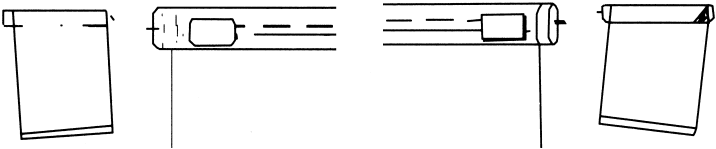

#### Important Notice

It is recommended to guide the blind with your hand while it is rolling up to ensure balanced positioning of the material on the roller.




## DANGER STRANGULATION HAZARD



Keep cords out of the reach of children



Move cribs and furniture away from cords

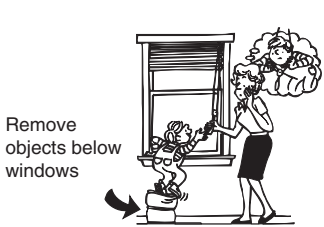


Remove objects below windows



Loops will appear when shade is in raised position



Do not tie cords together

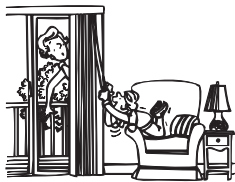

Install the tension device supplied

### EMERGENCY FIRST AID FOR STRANGULATION



- Remove cord from child's neck
- Call 911 or Emergency Center
- Clear throat
- Check breathing and heart beat
- Begin CPR

## LEVOLOR LIFETIME LIMITED WARRANTY

Levolor proudly extends a lifetime limited warranty on the purchased product to the original residential purchaser as long as the product remains in the original window. Levolor will cover the entire product against **manufacturing defects** (i.e. a flaw in the product design, materials or workmanship, that cause the product to no longer function).

This warranty does not include any conditions or damages resulting from accidents, alterations, misuse, abuse or failure to follow our instructions with respect to measurement, installation, cleaning or maintenance. The Levolor Lifetime Limited Warranty does not cover damages caused by cleaning methods that use abrasive solutions or ultrasonic cleaning methods. This warranty also does not apply to conditions or damages caused by normal wear and tear upon the product.

The head rail and working components of all our products (except Specialty and Commercial Applications) are covered under the Lifetime Limited Warranty. **Cellular and Pleated** fabric is covered for a period of 5 years. **Roller Shade** fabric is covered for a period of 5 years. **Vertical PVC** vanes are covered for a period of 3 years and fabric vanes are covered for a period of 5 years. **Metal Blinds** have a limited lifetime warranty on slats. **Perceptions Soft Verticals** fabric and PVC vanes are covered for three years. **Woven Wood/Natural Shades** are a natural product and slight imperfections in the finish and colour are normal characteristics. These natural characteristics let you know you are enjoying the authentic item and not an artificial wood imitation. Levolor cannot guarantee against these natural characteristics of wood, including warpage. Specialty applications and commercial applications are covered for a period of 1 year.

Warranties do not cover removal, installation or shipping costs. X30800LC-REV.10/04