

# HOLIDAY LIVING®

 
Holiday Living & Design® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0585712

## 48 IN TWINKLING SNOWMAN

MODEL #W12L0500

Español p. 9

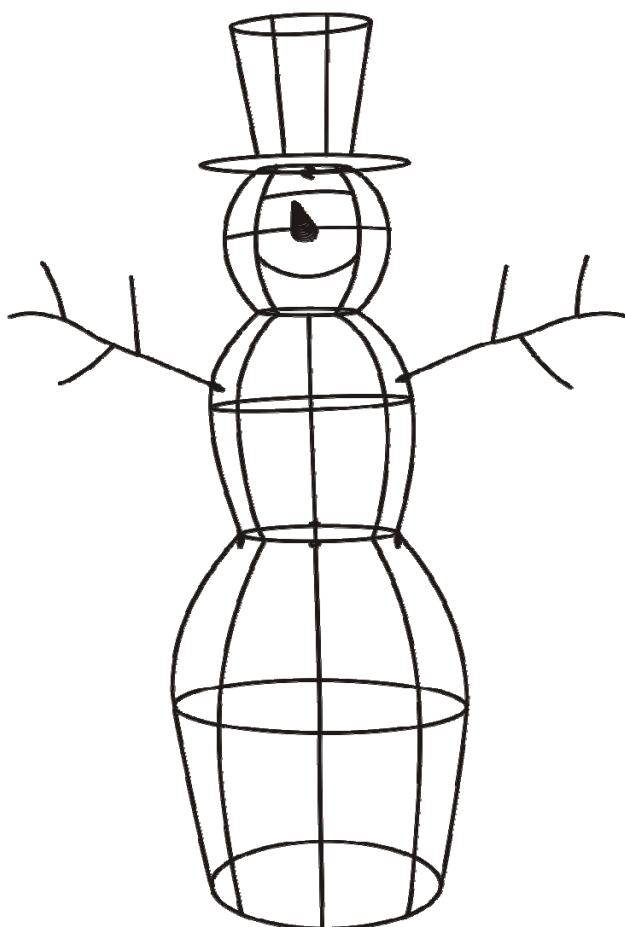


**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

AB15475

LOWES.com **HOLIDAY  
LIVING®**

**PACKAGE CONTENTS**

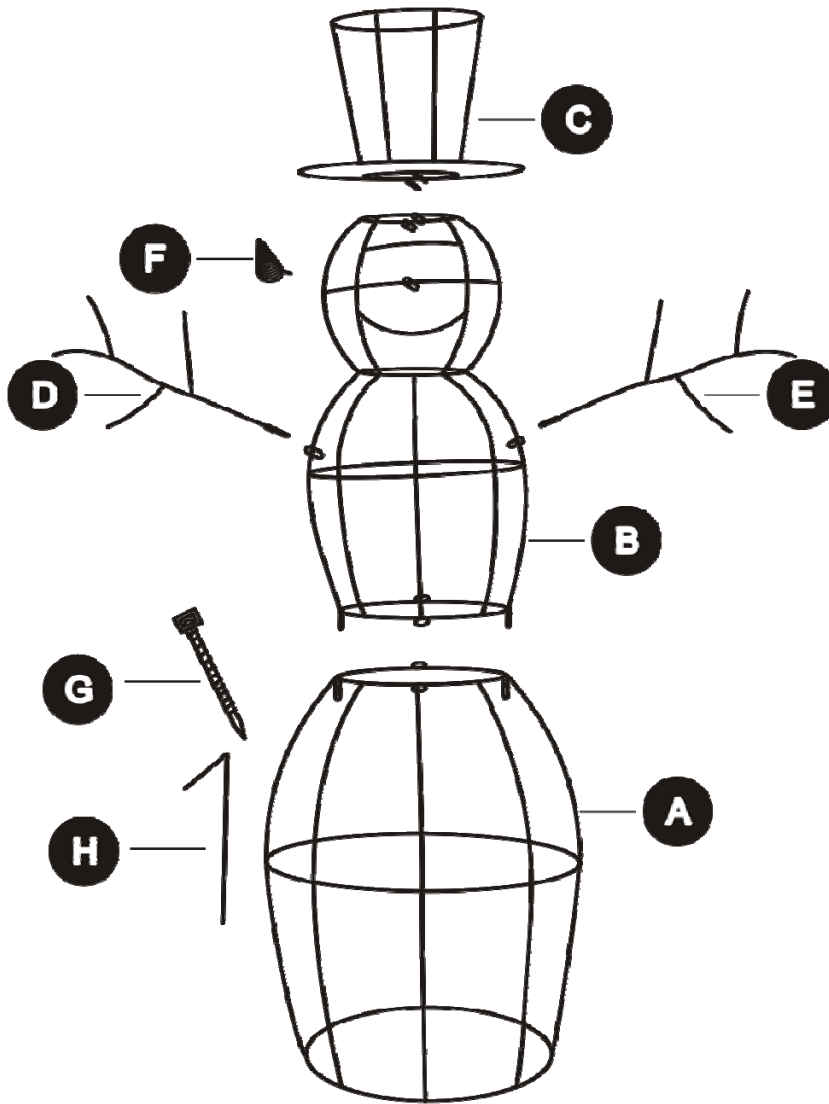 

PART	DESCRIPTION	QUANTITY
A	Lower Body	1
B	Upper Body	1
C	Hat	1
D	Right Hand	1
E	Left Hand	1
F	Nose	1
G	Plastic Tie	3
H	Ground Stake	4

Lowes.com **HOLIDAY LIVING.**

## **IMPORTANT SAFETY INSTRUCTIONS**

---

When using electrical products, basic precautions should always be followed including the following:

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type bulbs. Do not twist bulb.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the User Serving instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.

### **SAVE THESE INSTRUCTIONS.**

## **Federal Communications Commission (FCC) Statement**

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Lowes.com

**HOLIDAY**  
**LIVING.**

## **⚠ SAFETY INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### **WARNING**

To reduce the risk of electric shock or injury:

- Do not plug in the unit before assembly.
- Keep electric wires clear of being pinched or cut during assembly or installation. Discard sets with cut or damaged insulation.
- For indoor and outdoor use.

### **⚠ RISK OF FIRE**

- Do not replace attachment plug. Do not remove the safety device (fuse). Discard product if the attachment plug is damaged.

### **CAUTION**

- To reduce the risk of overheating, replace burned-out bulbs promptly. Use 2-volt / 3-volt LED bulbs only.

## **PREPARATION**

 
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

**Estimated Assembly Time: 30 minutes**

No tools required for assembly.


## **ASSEMBLY INSTRUCTIONS**

1. Insert the upper body (B) into the lower body (A).  
Secure with plastic tie (G).

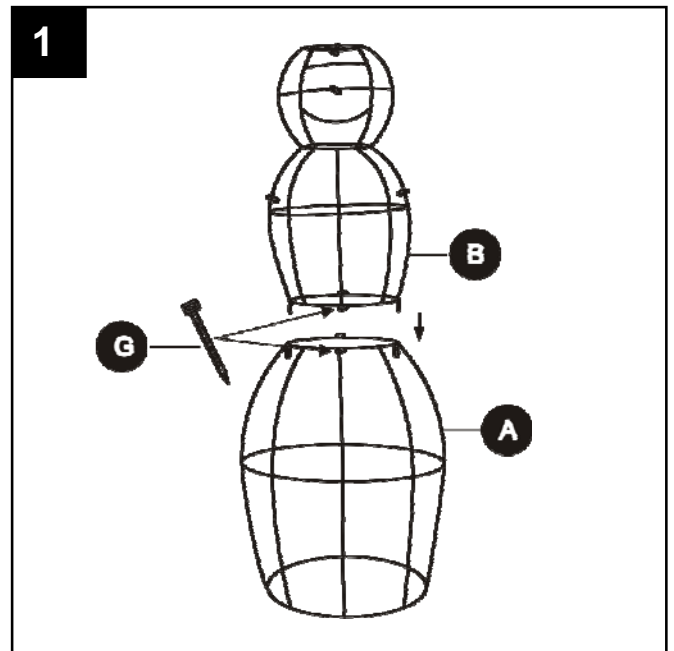


LOWES  
HOLIDAY  
LIVING.  
Lowe's.com

 2. Insert the right hand (D) and the left hand (E) into the upper body (B).

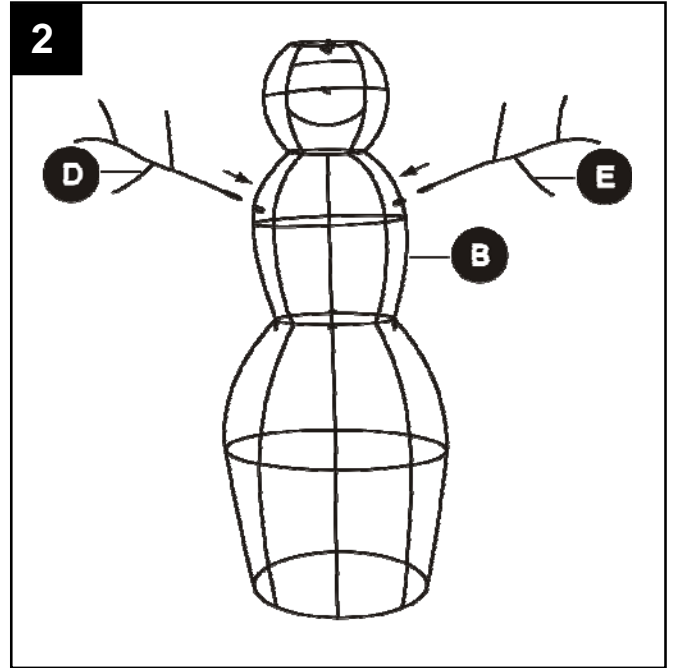


 3. Insert the hat (C) and the nose (F) into the upper body (B).

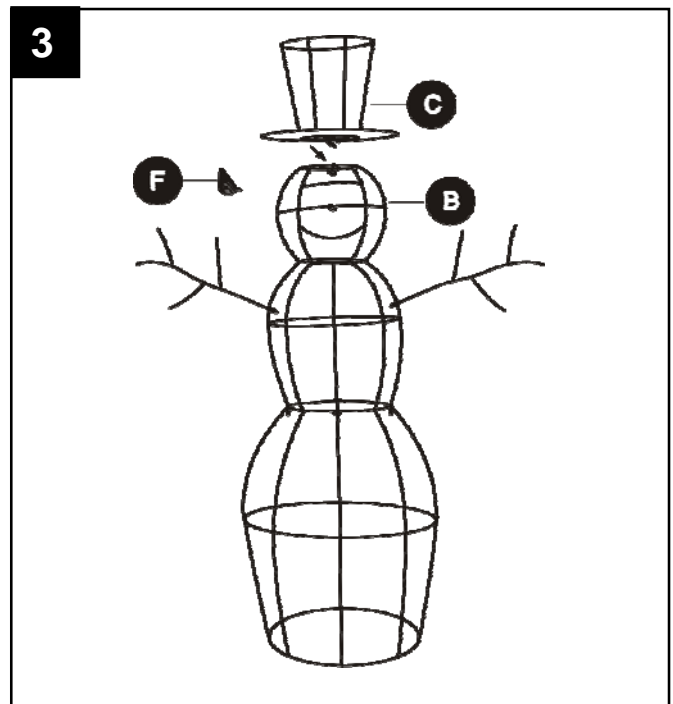

4. Insert the ground stakes (H) through the lower body (A) into the ground.

 Plug the electric cord into a properly grounded outlet.

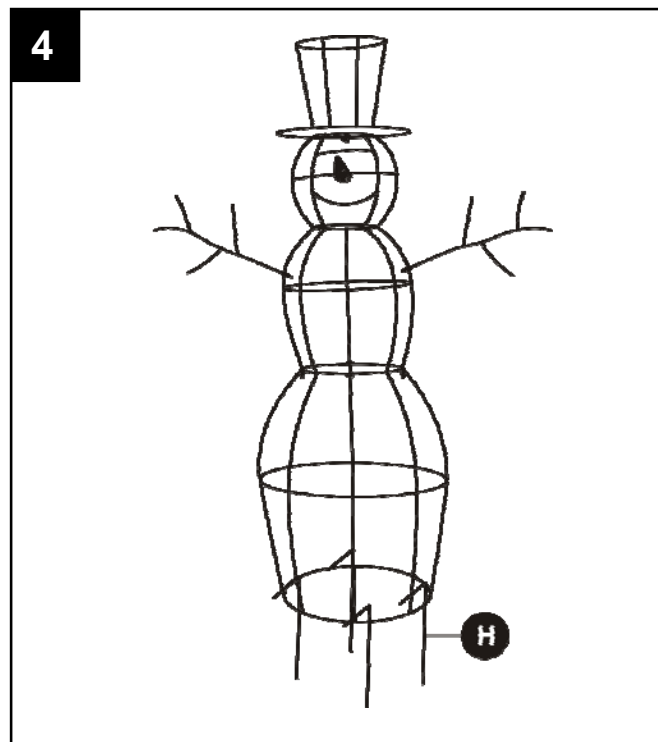


## CARE AND MAINTENANCE

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- To store, unplug the cord from the wall outlet. Place the parts in their original container. Store in a dry place.

## USER SERVICING INSTRUCTIONS

### Replace the lamp.

 
- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Pull bulb and plastic base straight out of lampholder.
- Replace with only 2-volt, 0.04 watt / 3-volt, 0.06 watt LED type bulb (provided with product).

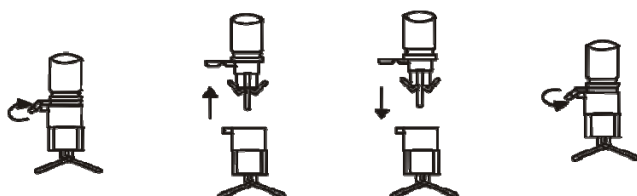

Lowes.com **HOLIDAY**  
LIVING.


If the new lamp base does not fit in lampholder, follow these steps:

 - Remove the base of burned out bulb by straightening lamp leads, and gently pulling bulb out.
- Thread leads of new bulb through holes in old base with one lead in each hole.
- After bulb is fully inserted into base, bend each lead up so that the leads will touch the contacts inside the lampholder.

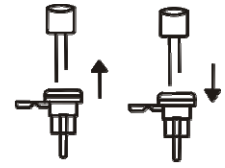


### Replace the fuse

 - Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Open fuse cover. Slide open the fuse access cover on top of attachment plug toward blades.
- Remove fuse carefully.
- Risk of fire. Replace with only 3 Amp, 125 volt fuse (provided with product).
- Close fuse cover. Slide close the fuse access cover on top of attachment plug.

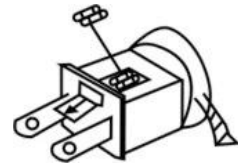

### To Control the Color Changing Feature

 - a) Rotate the round button to the STEADY position and both the white and colored lights will remain illuminated.
- b) When you slowly rotate the button to the slower position, the white and colored lights will begin to quickly cascade. The further you rotate the button to the SLOWER position, the slower the cascade will become.

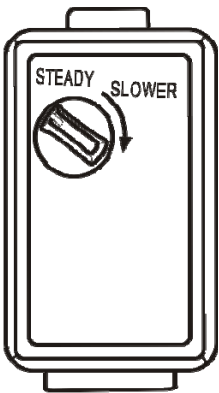



## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The product does not light.	1. One or more of the bulbs are loose or out of the sockets.	1. Unplug the product. Starting with the first unlit bulb, gently push (don't twist) each bulb firmly into the socket. At the same time, look and feel for a broken bulb in the socket or an empty socket where a bulb has fallen out.
A bulb is broken.	1. The bulb was impacted or shifted during transport.	1. Mark it with a piece of tape and unplug the product before removing the bulb socket and any fragments. Replace the broken bulb. Should a light flicker while doing this, you have probably found the faulty bulb. Replace with a new bulb.
A bulb is burned out.	1. Incorrect bulb or voltage is too high.	1. The remaining bulbs will stay lit; however, it is best to replace any burned out bulbs as soon as you find them.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

  PART	DESCRIPTION	PART #
I	FUSE	W12L0500-F
J	BULB	W12L0500-B

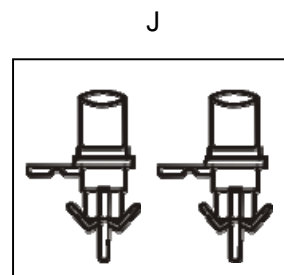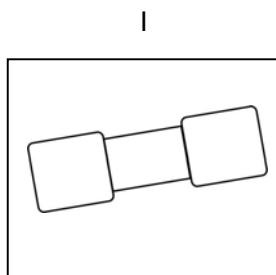

UL MODEL #L-067S

Printed in China

Holiday Living & Design® is a registered trademark of LF, LLC. All Rights Reserved.

Lowes.com **HOLIDAY LIVING**