

HOLIDAY LIVING®

 
Holiday Living & Design® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0585899

50 CT CHILI PEPPER LIGHTS

MODEL #W11H0043

Español p. 5

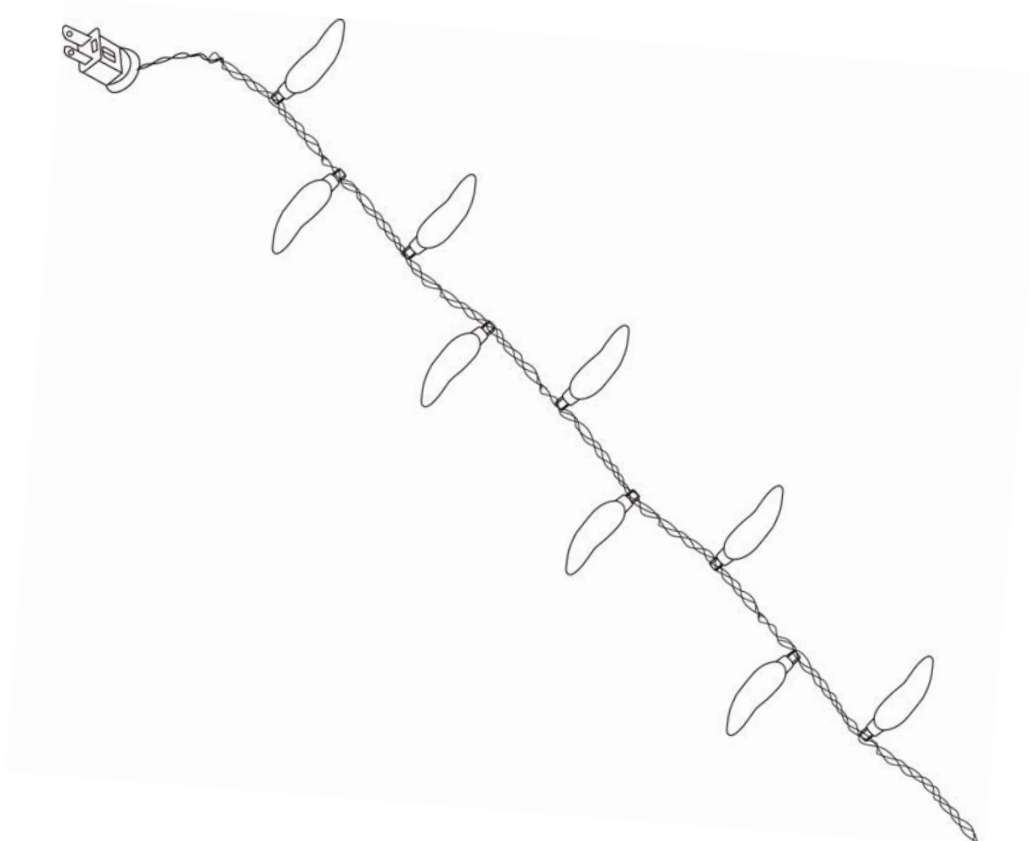

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

AB15228

Lowes.com

HOLIDAY
LIVING®

SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type lamps. Do not twist lamp.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the User Servicing Instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.
- For indoor and outdoor use.

SAVE THESE INSTRUCTIONS

CAUTION

- To reduce the risk of overheating, replace burned-out lamps promptly. Use 2.5 volt lamps only.
- To reduce the risk of fire and electric shock: a) do not install on trees that have needles, leaves or branch coverings of metal or materials which look like metal, and b) do not mount or support strings in a manner that can cut or damage wire insulation.
- This string is rated 20.4 watts (0.17 Amps); do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage rating (found on the tag within 6 inches of the plug), calculate the wattage as follows:

Multiply the current which is on the flag type label located within 6 inches of the plug by 120.

For example: Lighting string is rated 120 volts, 60 hertz, 0.17 Amps.

 
$0.17 \times 120 = 20.4$ watts.

Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts).

USER SERVICING INSTRUCTIONS

Replace the fuse.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling
- Open fuse cover. Slide open fuse access cover on top of attachment plug toward blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse with only a 3 Amp, 125 volt fuse (provided with product).
- Close fuse cover. Slide close the fuse access cover on top of attachment plug.

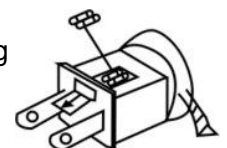

Lowes.com

HOLIDAY
LIVING

CAUTION: Risk of fire. Do not replace attachment plug.

Do not remove the safety device (fuse). Discard product if the attachment plug is damaged.

 
Replace the lamp.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Remove pepper cover.
- Pull lamp and plastic base straight out of lampholder.
- Replace lamp with only 2.5 volt, 0.425 watt super bright type lamp (provided with product).



If the new lamp base does not fit in lampholder, follow the steps below before step 3:

- Remove the base of burned out lamp by straightening lamp leads and gently pulling lamp out.
- Thread leads of new lamp through holes in old base with one lead in each hole.
- After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.



CARE AND MAINTENANCE

- When the product is placed on a live tree, keep the tree well-maintained, fresh, secure, and stable. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever you placed it, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- Store neatly in a cool, dry location protected from sunlight.

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The product does not light.	1. One or more of the bulbs are loose or out of the sockets.	1. Unplug the product. Starting with the first unlit bulb, gently push (don't twist) each bulb firmly into the socket. At the same time, look and feel for a broken bulb in the socket or an empty socket where a bulb has fallen out.
The bulb is broken.	1. The bulb was impacted or shifted during transport.	1. Mark it with a piece of tape and unplug the product before removing the bulb socket and any fragments. Replace the broken bulb. Should a light flicker while doing this, you have probably found the faulty bulb. Replace with a new bulb.
A bulb has burned out.	1. Incorrect bulb or voltage is too high.	1. The remaining bulbs will stay lit; however, it is best to replace any burned out bulbs as soon as you find them.

REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	FUSE	W11H0043-F
B	BULB	W11H0043-B

 A

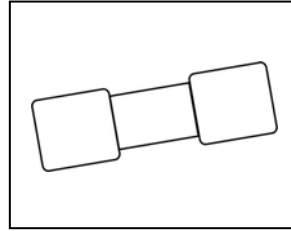

B

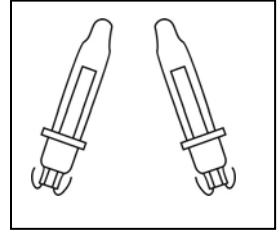 

UL MODEL #W-F50-F78

Printed in China

Holiday Living & Design® is a registered trademark of LF, LLC. All Rights Reserved.

Lowes.com **HOLIDAY
LIVING®**