



THIN & THICK DOOR ADJUSTMENTS


KNOBS

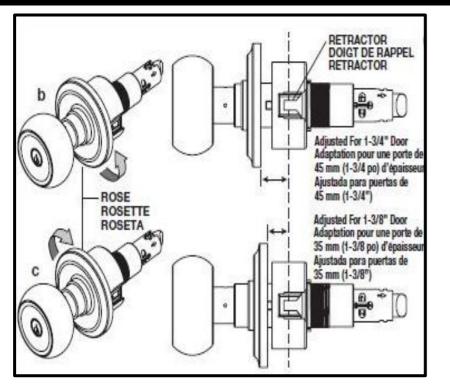


- * Entry knobs are preset for THICK doors (1 3/4")
- * Privacy and Passage knobs are preset for THIN doors (1 3/8")
- * To adjust knobs for door thickness simply turn (threaded) outside rose

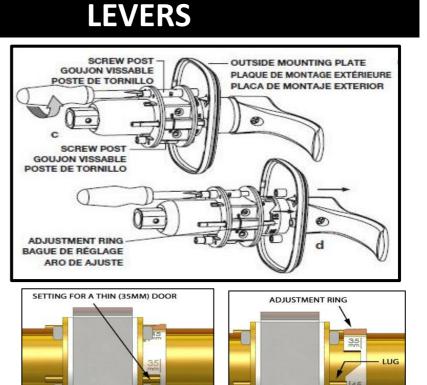



- * Passage levers in the COMBO PACKS are preset for thick doors (1 3/4")
- * Privacy and Passage levers are preset for THIN doors (1 3/8")
- * To adjust levers for door thickness rotate outside screw posts to desired thickness

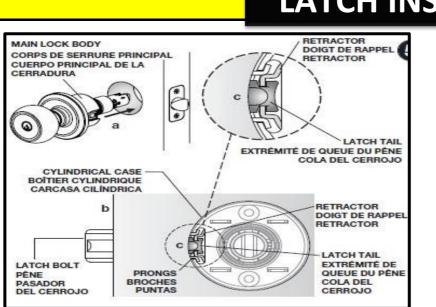

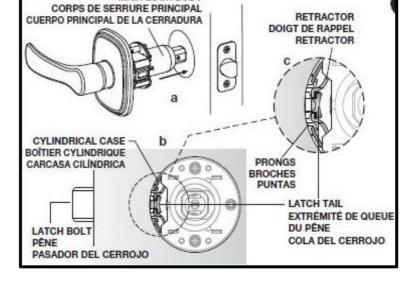

1) Determine if you need a 2 3/8" or 2 3/4" backset for your latch

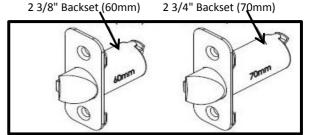

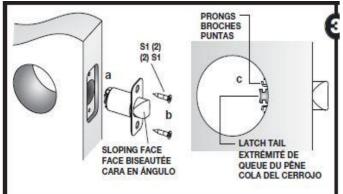

2) install latch so that the bevel (sloping face) on the latch bolt faces the strike lip

- 3) When installing screws in latch don't tighten screws completely YET
- 4) Adjust the outside rose so that the chassis is centered in the door.
- 5) install the chassic from the outside of the door
- 6) install the inside rose, rose ring, knob and strike plate
- 7) Now tighten down screws on the latch

BHS thin&thick door 11/30/2012