

Assembly Instruction Sheet #IS-TFAT2821VA For Style TFAT2821VA

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) Medium Base 100W bulb Maximum, Alternate bulb (3) 23W CFL Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

▲ Care of Tiffany Style Shade

A new tiffany lamp shade has an oil film applied to the shade that protects the tiffany shade from scratches during shipment. If the oil applied is too heavy you can remove the excess oil film with a paper towel. Gently wipe away the excess oil.

For general cleaning of tiffany shades use a gentle lemon oil-based furniture polish applied to a soft cloth and wipe gently.

If a white powder appears on the soldered joints of the tiffany shade this is a normal oxidation process. Use a small amount of lemon oil or mineral oil applied directly to oxidized areas and the soldered area will return to like new.

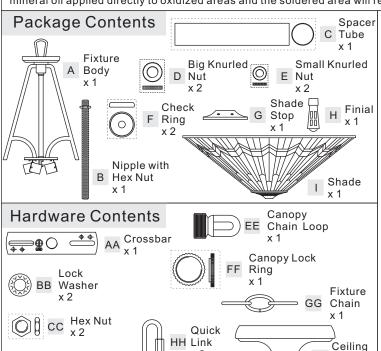


STEP 1 - Install Crossbar

DD

© 2015 Quoizel Inc.

Nipple

 A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.



x 2

STEP 2 - Install Canopy Chain Loop and Nipple


* Pliers is required for this step.

A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at least 0.25" from the end. Pass one Lock Washer (BB) over the end of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the Canopy Chain Loop (EE) and hand tighten until snug.

B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). Place another Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar

(AA). C. Remove the Canopy Lock Ring (FF) from the Canopy Chain Loop (EE). Place the Ceiling Canopy (II) over the Canopy Chain Loop (EE) against the ceiling to determine the correct position of the Nipple (DD). Thread the Canopy Lock Ring onto the Canopy Chain Loop (EE). Adjust the Nipple (DD) to allow the Ceiling Canopy (II) to rest against the ceiling when held in place by the Canopy Lock Ring (FF).

D. Remove the Canopy Lock
Ring (FF) and the Ceiling
Canopy (II). Tighten the Hex
Nut (CC) against the Crossbar
(AA) to secure in place.

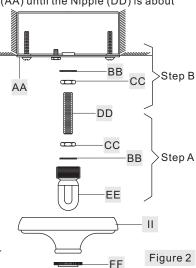

STEP 3 - Install Fixture Chain and Ceiling Canopy

- A. Adjust the Fixture Chain (GG) to your desired length by removing links if needed.
- * Pliers is required for this step.
- B. With the Fixture Chain (GG) not attached to the Fixture Loop and the Canopy Chain Loop (EE), pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

Canopy

November 2015

(Step 3 Continued)

Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.

C. Attach one end of the Fixture Chain (GG) to the fixture loop on the top end of the Fixture Body (A) with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up and attach the other end of the Fixture Chain (GG) onto the Canopy Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely. Close the chain

loop at the Ceiling Canopy Loop (EE).


- D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving Approximately 8" of wire extending from the Outlet Box.
- E. Refer to Step 4 for wire connections.
- F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight.

Suggested chain length for Ceiling height:

8' ceiling: use 2 links of chain and 2 quick links 9' ceiling: use 11 links of chain


and 2 quick links 10' ceiling: use 20 links of chain

and 2 quick links

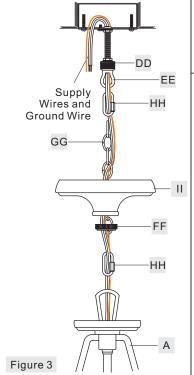

STEP 4 - Wire Connections

 A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.



STEP 5 - Install Shade and Bulbs

 
- A. Screw the Hex Nut end of the Nipple with Hex Nut (B) into the hex coupling underside of the Fixture Body (A). By using pliers, thread the Hex Nut against the hex coupling and hand tighten until snug.
- B. Place Spacer Tube (C) and Check Ring (F) onto the Nipple, secure by threading Small Knurled Nut (C) onto the Nipple. Thread the Big Knurled Nut (D) onto the Nipple and adjust it to proper location for rest components. Pass the Shade Stop (G) over the end of the Nipple (B). Thread another Big Knurled Nut (D) onto the Nipple (B) and adjust it until there is about 1.5" nipple extruding from it.
- C. Pass the Shade (I) over the end of the Nipple (B) and secure with the Finial (H).
- D. Place the Shade Stop (G) against the inside bottom of the Shade (I) and tighten with the
- base. Maximum 100 watts. Insert bulb and screw snugly into place.

D Knurled Nut (D) at the middle of the Nipple (B) E. This fixture uses standard bulb with medium Figure 5

Your fixture is now assembled and ready to

TFAT2821VA

FINISH: VALIANT BRONZE




NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"



\bigcup					
(3) 100W Medium					
Base Bulbs (Not Supplied)					

© 2015 Quoizel Inc.

	NO.	PART NUMBER	REPLACEMENT PART	REQ.
ſ	1	M1195CHVA	CHAIN	1
ſ	2	G12104SH	SHADE	1

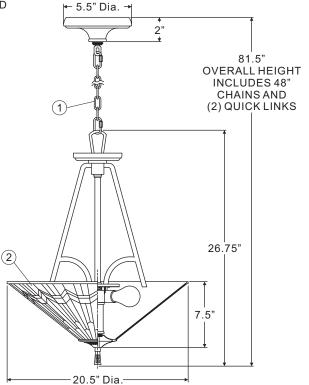

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

November 2015