


WS682400TX
Silver Sphere Grid Wall
Sculpture
Assembly Instructions



Southern
ENTERPRISES

For assistance with assembly contact:
Southern Enterprises, Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com


 

 
PO# :

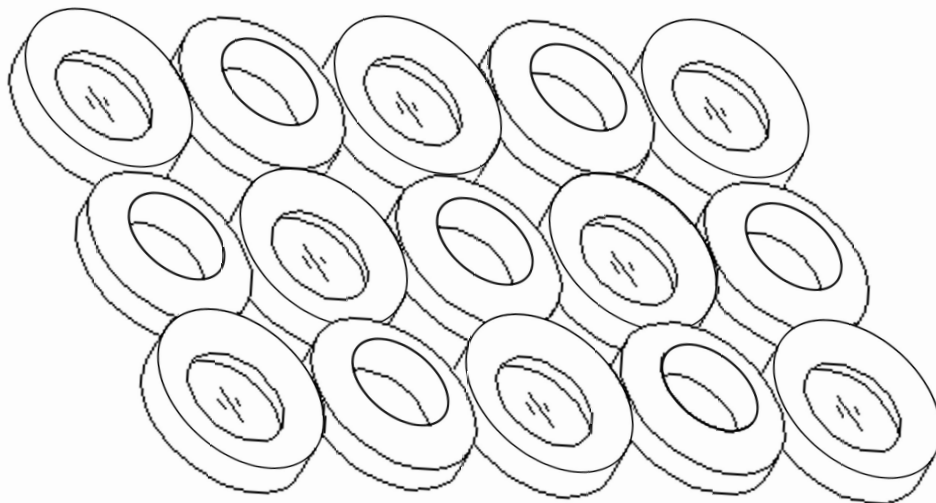

Silver Sphere Grid Wall Sculpture

Parts List


Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

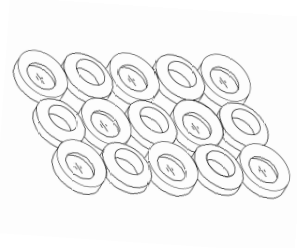1  Silver Sphere Grid Wall Sculpture	Quantity of 1	A.  Plastic Anchor	Quantity of 4
B.  Screw Dia7mmx1-1/2"L	Quantity of 4		
Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.		For replacement parts or questions, please call customer service at 1-800-633-5096.	
Assembly Tool Required No.2 Phillips Screwdriver (Not Included)			

Tool List: 3/16" Drill Bit, Drill, Tape Measure and Pencil.

Silver Sphere Grid Wall Sculpture Assembly Instructions

Note: No drilled hole or plastic anchor required when mounting to wood wall use screw only. We do not supply hardware for mounting on concrete walls.

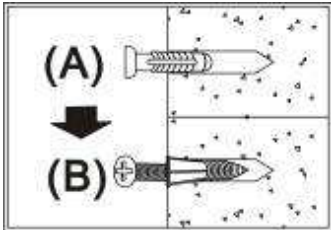

"The hole measurement on wall must match with the hole measurement on back of the unit"

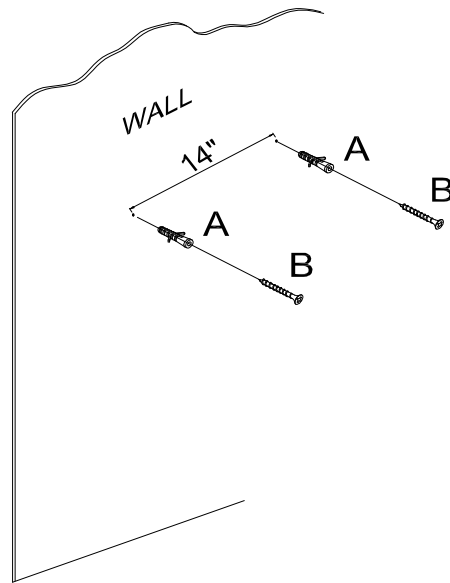


Figure 1

Find a desired location and mark 2 locations for screws on wall.

One screw (for each unit) must be attached directly into a wall stud. Wall anchor is not needed when mounting to wall stud.

Drill one of the markings with a 3/16" drill bit.

Insert Plastic Anchor **(A)** into the hole on wall as shown. (When doing this, you will need a hammer help you).

Using the Phillips head screwdriver, install Screw **(B)** into the Anchor **(A)** and into the remaining marked hole.

Turn the Screws **(B)** until there is a gap of approximately 3mm between the head of the screw and the wall.

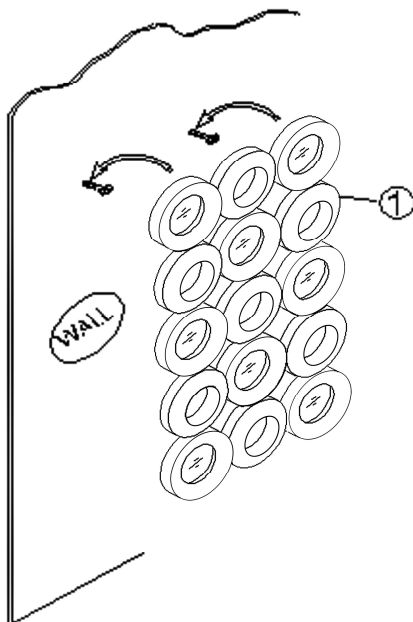



Figure 2

Hang the wall sculpture onto the Screws **(B)** and verify the sculpture is resting securely on the mounting screw.

Now your Silver Sphere Wall Sculpture is ready to use.

If you prefer to hang this product in horizontal configuration, please follow below instructions.

Note: No drilled hole or plastic anchor required when mounting to wood wall use screw only. We do not supply hardware for mounting on concrete walls.

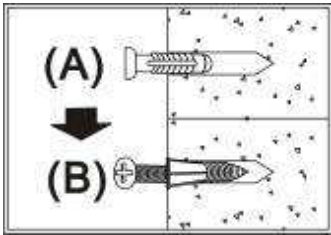

"The hole measurement on wall must match with the hole measurement on back of the unit"

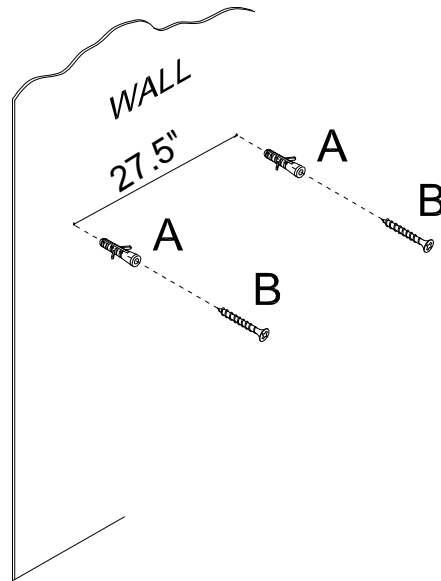


Figure 3

Find a desired location and mark 2 locations for screws on wall.

One screw (for each unit) must be attached directly into a wall stud. Wall anchor is not needed when mounting to wall stud.

Drill one of the markings with a 3/16" drill bit.

Insert Plastic Anchor **(A)** into the hole on wall as shown. (When doing this, you will need a hammer help you).

Using the Phillips head screwdriver, install Screw **(B)** into the Anchor **(A)** and into the remaining marked hole.

Turn the Screws **(B)** until there is a gap of approximately 3mm between the head of the screw and the wall.

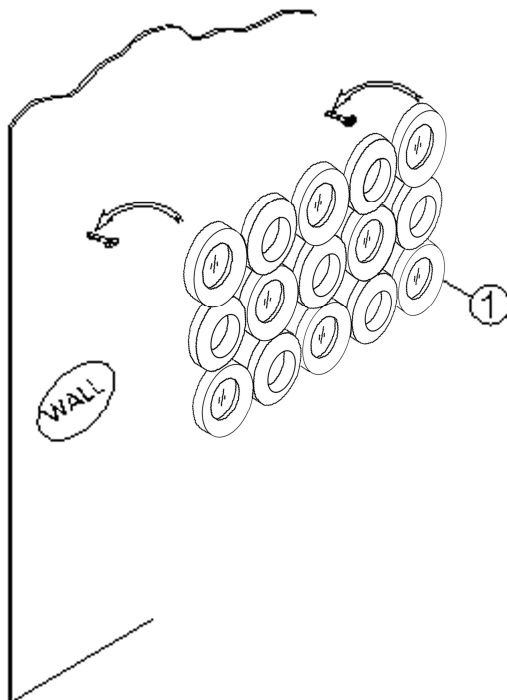


Figure 4

Hang the wall sculpture onto the Screws **(B)** and verify the sculpture is resting securely on the mounting screw.

Now your Silver Sphere Wall Sculpture is ready to use.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019