

FA9016A0TX
Locksley Fireplace -
Classic Mahogany
Assembly Instructions



Southern
ENTERPRISES

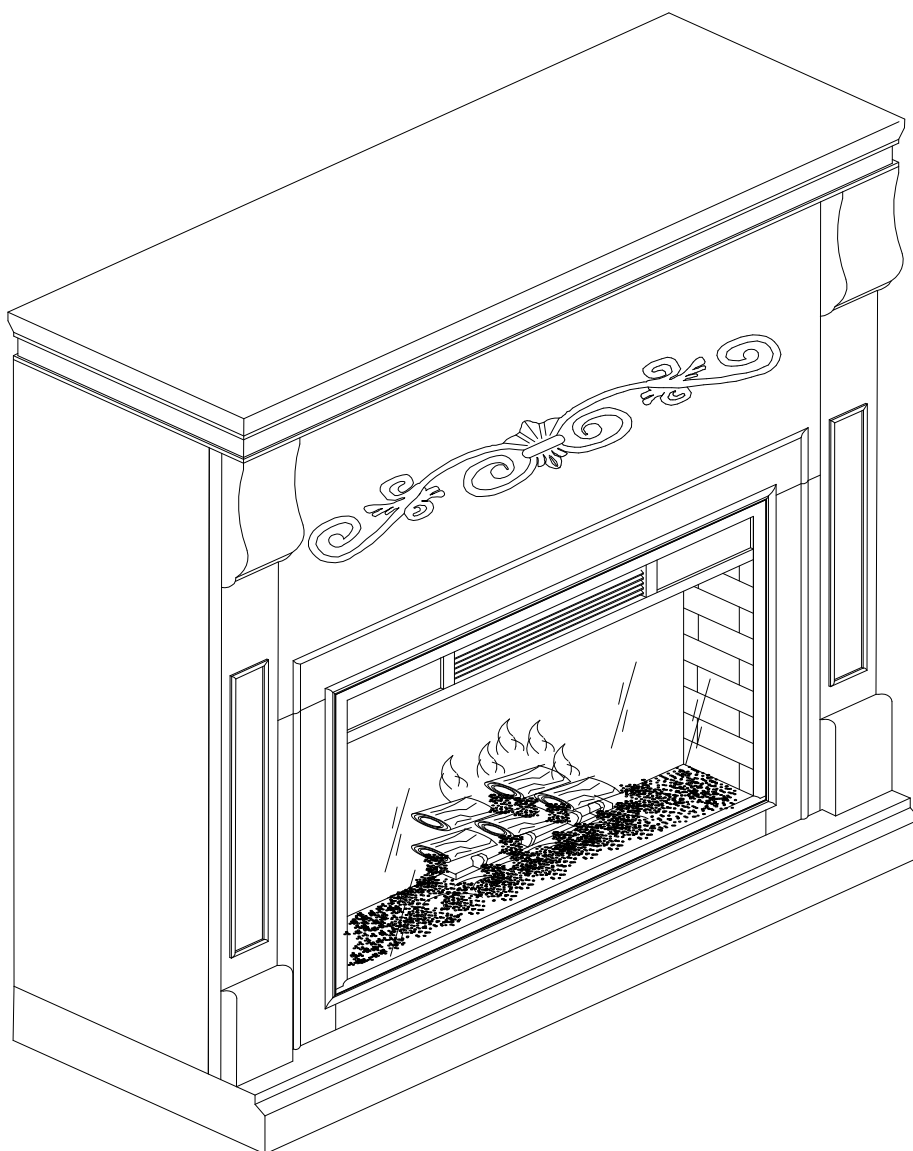 
For assistance with assembly contact:
Southern Enterprises Inc.

Customer Service 1-800-633-5096

service@seidal.com

www.seidal.com

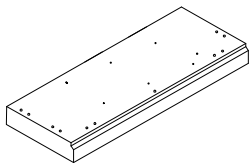 
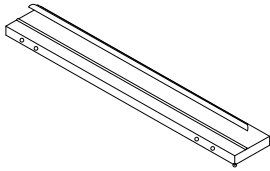 
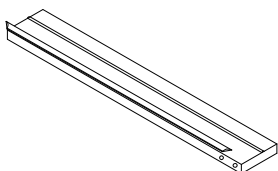 
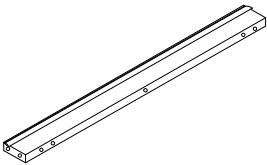 
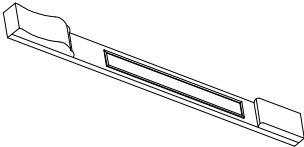 
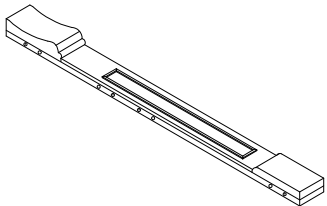 
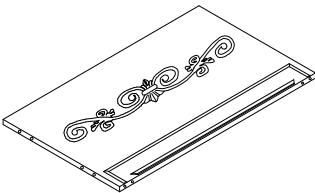 
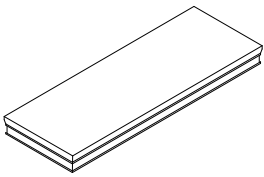 
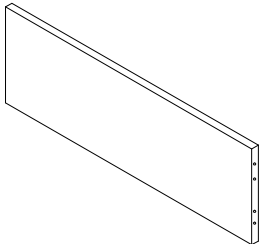 
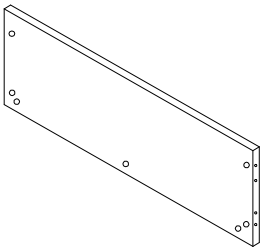 
 
 
PO#:

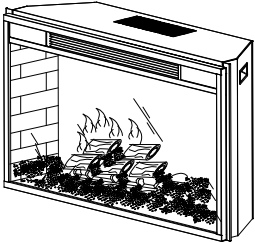 



 


 
 

 


Locksley Fireplace Parts List

Please check packaging for all parts and hardware before discarding.


Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

| | | |
|--|---|--|
| <p>(1) Quantity Of 1</p>  <p>Base</p> | <p>(2) Quantity Of 1</p>  <p>Left Vertical Panel</p> | <p>(3) Quantity Of 1</p>  <p>Right Vertical Panel</p> |
| <p>(4) Quantity Of 1</p>  <p>Cross Panel</p> | <p>(5) Quantity Of 1</p>  <p>Left Front Panel</p> | <p>(6) Quantity Of 1</p>  <p>Right Front Panel</p> |
| <p>(7) Quantity Of 1</p>  <p>Middle Front Panel</p> | <p>(8) Quantity Of 1</p>  <p>Top Panel</p> | <p>(9) Quantity Of 1</p>  <p>Left Side Panel</p> |
| <p>(10) Quantity Of 1</p>  <p>Right Side Panel</p> | <p>(11) Quantity Of 3</p>  <p>Rail</p> | <p>(12) Quantity Of 2</p>  <p>Wood Block</p> |


| | | |
|---|---|---|
| <p>(13) Quantity Of 1</p>  <p>Firebox (in separate carton)</p> | | |
| <p>A Quantity Of 31</p>  <p>Wood Dowel Dia 8 x 30mm</p> | <p>B Quantity Of 29</p>  <p>Cam Bolt</p> | <p>C Quantity Of 29</p>  <p>Cam Lock</p> |
| <p>D Quantity Of 10</p>  <p>Screw Dia 1/8" x 1" L</p> | <p>E Quantity Of 2</p>  <p>Plastic Strap</p> | <p>F Quantity Of 4</p>  <p>Bracket</p> |
| <p>G Quantity Of 4</p>  <p>Anchor</p> | <p>H Quantity Of 4</p>  <p>Screw Dia 1/8" x 1-1/2" L</p> | <p>I Quantity Of 4</p>  <p>Screw Dia 1/8" x 5/8" L</p> |
| <p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p> | | <p>For replacement parts or questions, please call Customer Service at 1-800-633-5096.</p> |
| <p>Assembly Tool Required No.2 Phillips Screwdriver (Not Include)</p> | |  |

Locksley Fireplace

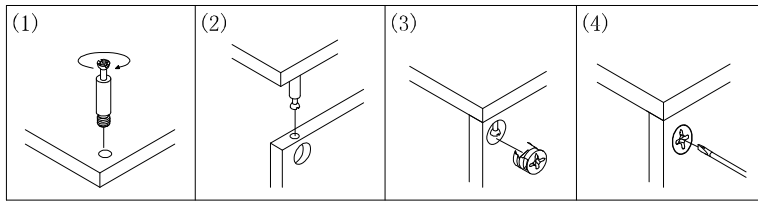 Assembly Instructions



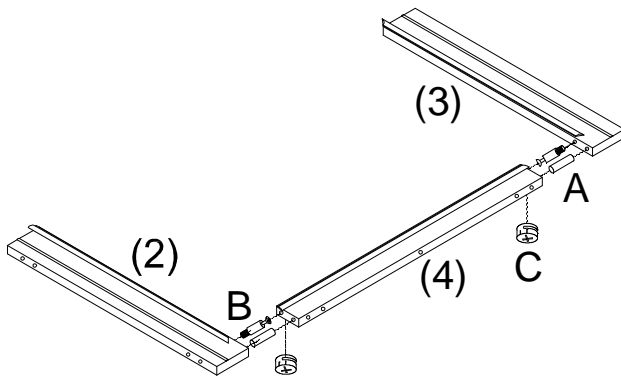 "Please do not over tighten cambolts. Please stop when you feel tight"




Insert cam locks (C) into holes on cross panel (4).

Screw cam bolts (B) into holes on left vertical panel (2) and right vertical panel (3).

Attach cross panel (4) to left vertical panel (2) and right vertical panel (3) by inserting wood dowels (A) and cam bolts (B) into corresponding holes until left vertical panel (2) and right vertical panel (3) and cross panel (4) meet.


Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

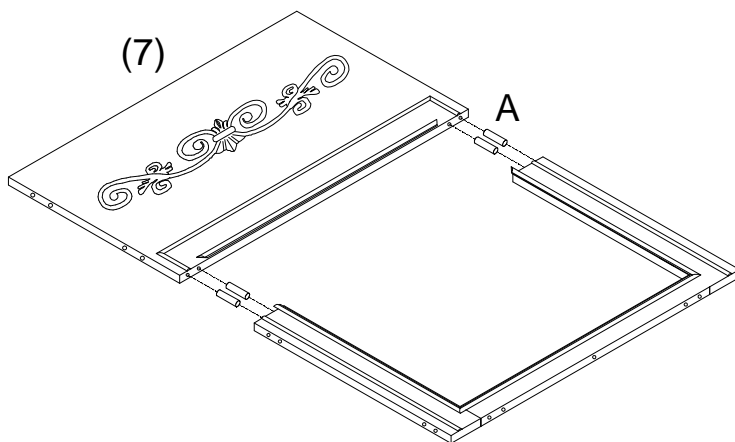 Figure 1



Attach assembled unit to middle front panel (7) by inserting wood dowels (A) into corresponding holes until middle front panel (7) and assembled unit meet.

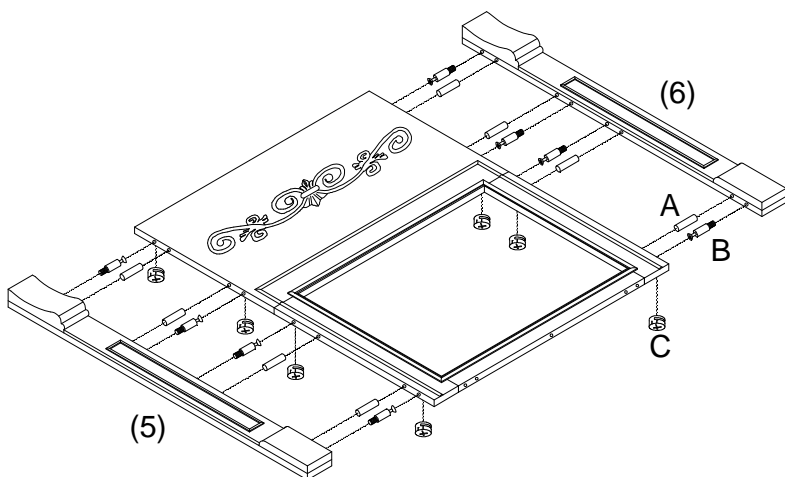 Figure 2




Insert cam locks (C) into holes on assembled unit.

Screw cam bolts (B) into holes on left front panel (5) and right front panel (6).

Attach assembled unit to left front panel (5) and right front panel (6) by inserting wood dowels (A) and cam bolts (B) into corresponding holes until left front panel (5) and right front panel (6) and assembled unit meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

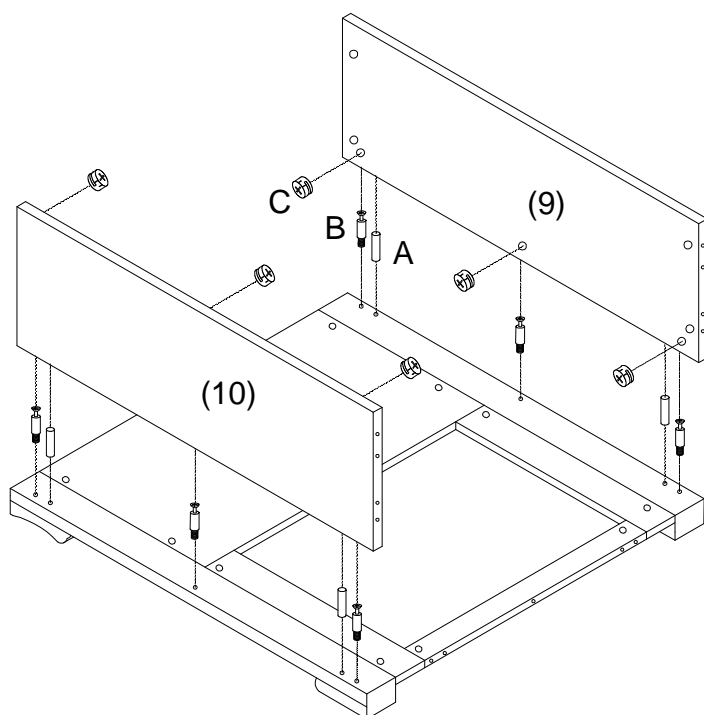 Figure 3



Insert cam locks (C) into holes on left side panel (9) and right side panel (10).

Screw cam bolts (B) into holes on assembled unit.

Attach left side panel (9) and right side panel (10) to assembled unit by inserting wood dowels (A) and cam bolts (B) into corresponding holes until left side panel (9) and right side panel (10) and assembled unit meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Figure 4

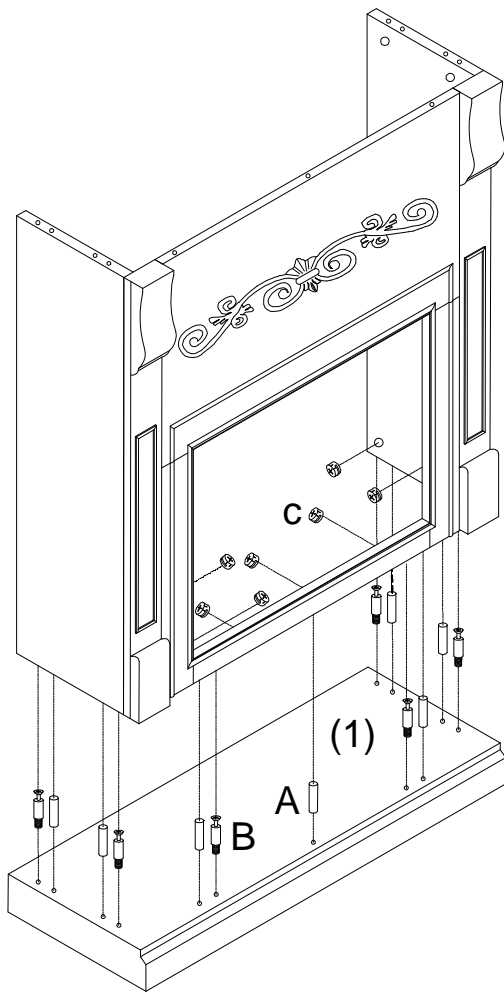 


Figure 5

Insert cam locks (C) into holes on assembled unit.

Screw cam bolts (B) into holes on base (1).

Attach assembled unit to base (1) by inserting wood dowels (A) and cam bolts (B) into corresponding holes until base (1) and assembled unit meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

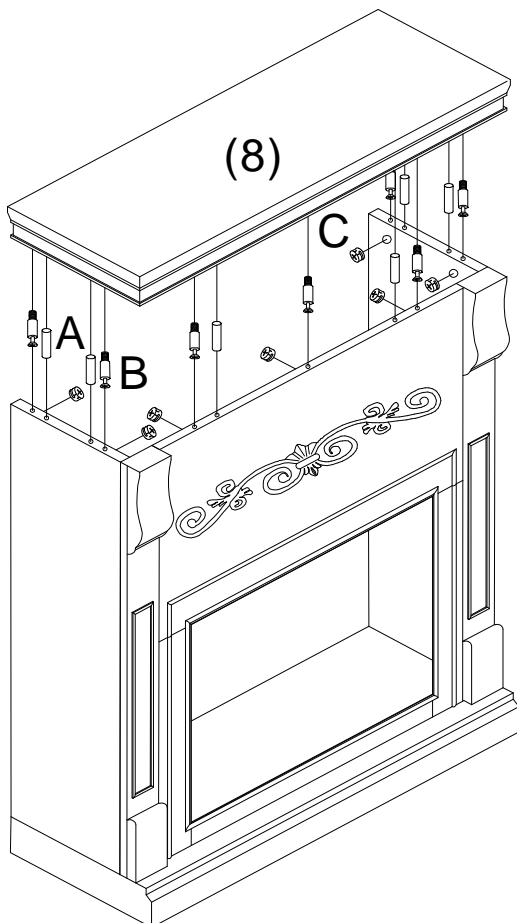 



Figure 6

Insert cam locks (C) into holes on assembled unit.

Screw cam bolts (B) into holes on top panel (8).

Attach top panel (8) to assembled unit by inserting wood dowels (A) and cam bolts (B) into corresponding holes until top panel (8) and assembled unit meet.

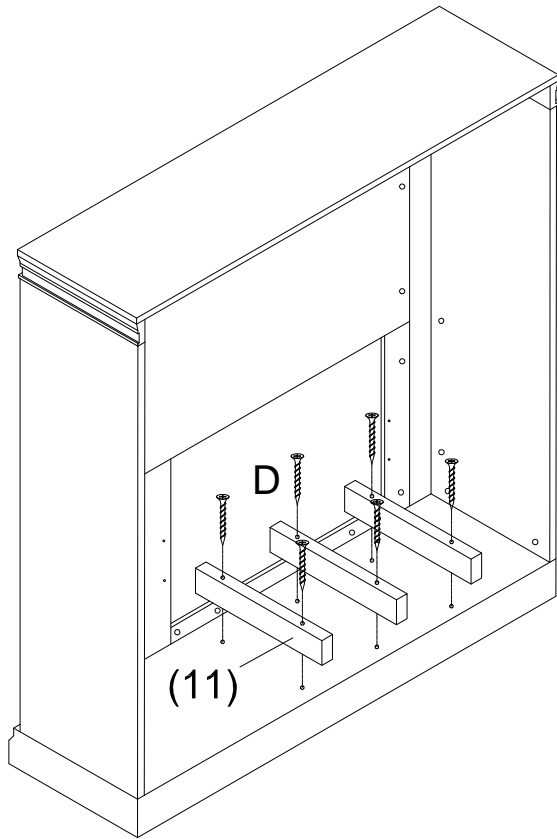 
Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.



Use screws (D) to connect rail (11) to base (1).

Tighten screws (D) with Phillips screwdriver.

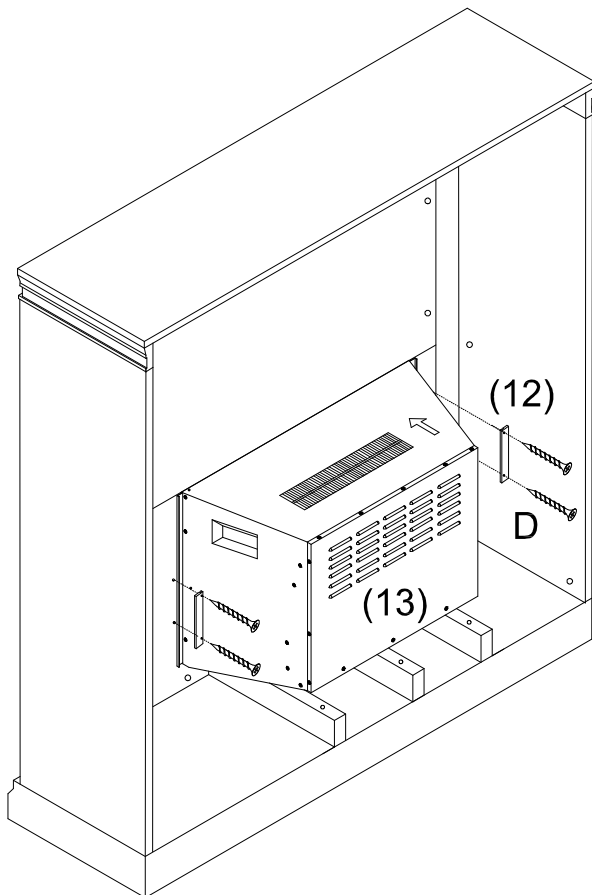 Figure 7



Place firebox (13) into the back of the unit.

Use screws (D) to connect wood block (12) to left vertical panel (2) and right vertical panel (3).

Tighten screws (D) with Phillips screwdriver.

Figure 8

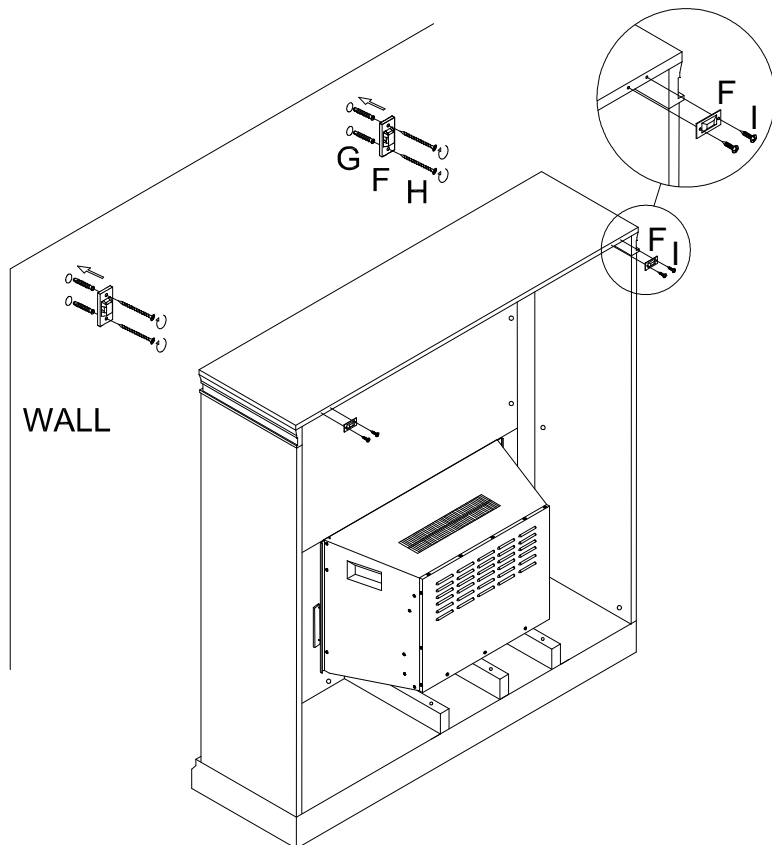 


Figure 9

Attach Bracket (F) to the back of the top panel (8) with screws (I).

Tighten screws (I) using Phillips screwdriver.

Mark two desired locations on the wall and drill two 3/16" holes.

Insert anchors (G) into the two holes on wall as shown. Use a hammer to insert the plastic anchors until they are flush with the wall.

Then attach the brackets (F) onto the wall using screws (H).

Tighten screws (H) using Phillips screwdriver.

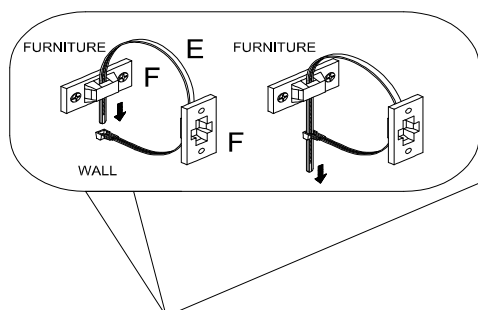 


Figure 10

Move this item close to the wall bracket (F) and tie in all brackets (F) together with plastic strap (E) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

Top supports up to 85 lb.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

| Style No | Parts Letter | Parts Description | Quantity Needed |
|----------|--------------|-------------------|-----------------|
|----------|--------------|-------------------|-----------------|

| | | | |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
|----------------------|----------------------|----------------------|----------------------|

| | | | |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
|----------------------|----------------------|----------------------|----------------------|

| | | | |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
|----------------------|----------------------|----------------------|----------------------|

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019

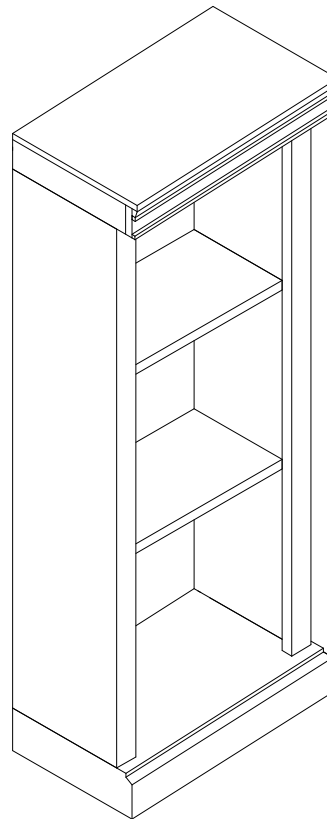 
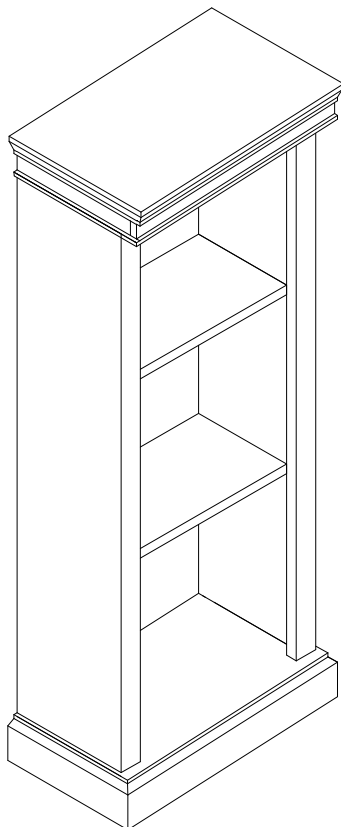 
FA9016B0TX
Locksley Pair Of Bookcase -
Classic Mahogany
Assembly Instructions



Southern
ENTERPRISES

For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com

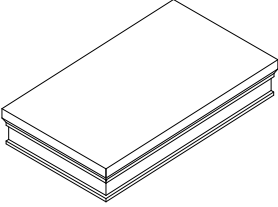 
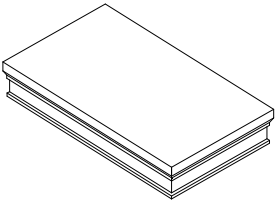 
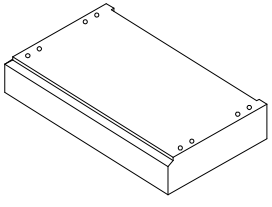 
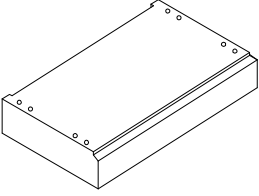 

 





PO#:



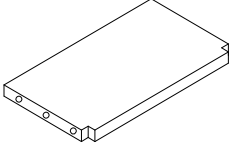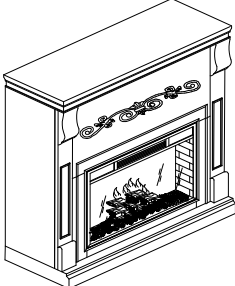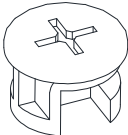    
 
 

 
 
 
 
 


Locksley Pair Of Bookcase

Parts List


Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

| | | |
|---|--|--|
| <p>(1) Quantity Of 1</p>  <p>Left Bookcase Top</p> | <p>(2) Quantity Of 1</p>  <p>Right Bookcase Top</p> | <p>(3) Quantity Of 1</p>  <p>Left Bookcase Base</p> |
| <p>(4) Quantity Of 1</p>  <p>Right Bookcase Base</p> | <p>(5) Quantity Of 1</p>  <p>Left Side Of Left Bookcase</p> | <p>(6) Quantity Of 1</p>  <p>Right Side Of Left Bookcase</p> |
| <p>(7) Quantity Of 1</p>  <p>Left Side Of Right Bookcase</p> | <p>(8) Quantity Of 1</p>  <p>Right Side Of Right Bookcase</p> | <p>(9) Quantity Of 4</p>  <p>Fixed Shelf</p> |
| <p>(10) Quantity Of 2</p>  <p>Back Panel</p> | <p>Quantity Of 1</p>  <p>FA9016A0TX</p> | |

| | | |
|---|---|--|
| <p>A</p> <p>Quantity Of 32</p>  <p>Wood Dowel Dia 8 x 30mm</p> | <p>B</p> <p>Quantity Of 24</p>  <p>Cam Bolt</p> | <p>C</p> <p>Quantity Of 24</p>  <p>Cam Lock</p> |
| <p>D</p> <p>Quantity Of 16</p>  <p>Plastic Cover</p> | <p>E</p> <p>Quantity Of 28</p>  <p>Screw Dia 1/8" x 1/2"L</p> | <p>F</p> <p>Quantity Of 2</p>  <p>Plastic Strap</p> |
| <p>G</p> <p>Quantity Of 4</p>  <p>Bracket</p> | <p>H</p> <p>Quantity Of 4</p>  <p>Anchor</p> | <p>I</p> <p>Quantity Of 4</p>  <p>Screw Dia 1/8"x1-1/2"L</p> |
| <p>J</p> <p>Quantity Of 4</p>  <p>Screw Dia 1/8"x5/8"L</p> | | |
| <p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p> | | <p>For replacement parts or questions, please call Customer Service at 1-800-633-5096.</p> |
| <p>Assembly Tool Required No.2 Phillips Screwdriver (Not Include)</p> | |  |

Locksley Pair Of Bookcase

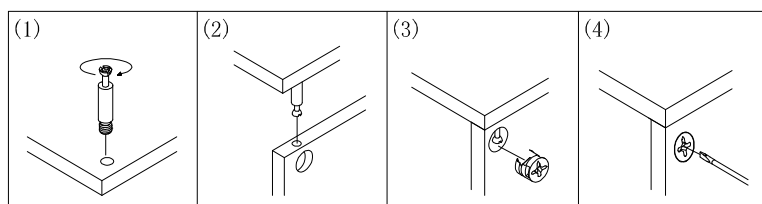 Assembly Instructions



"Please do not over tighten cambolts. Please stop when you feel tight"

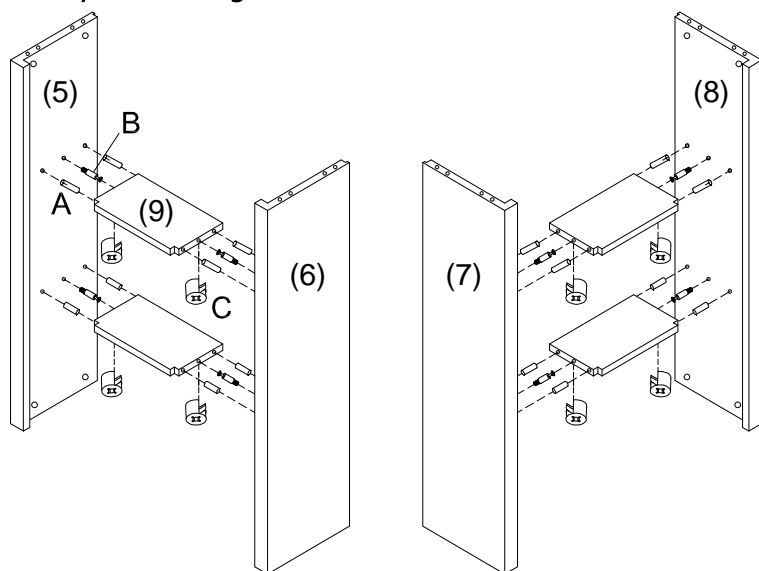 


Figure 1

Insert cam locks (C) into holes on fixed shelves (9).

Screw cam bolts (B) into holes on side panels (5), (6), (7) and (8).

Attach fixed shelves (9) to side panels (5), (6), (7) and (8) by inserting wood dowels (A) and cam bolts (B) into corresponding holes until side panels (5), (6), (7), (8) and fixed shelves (9) meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

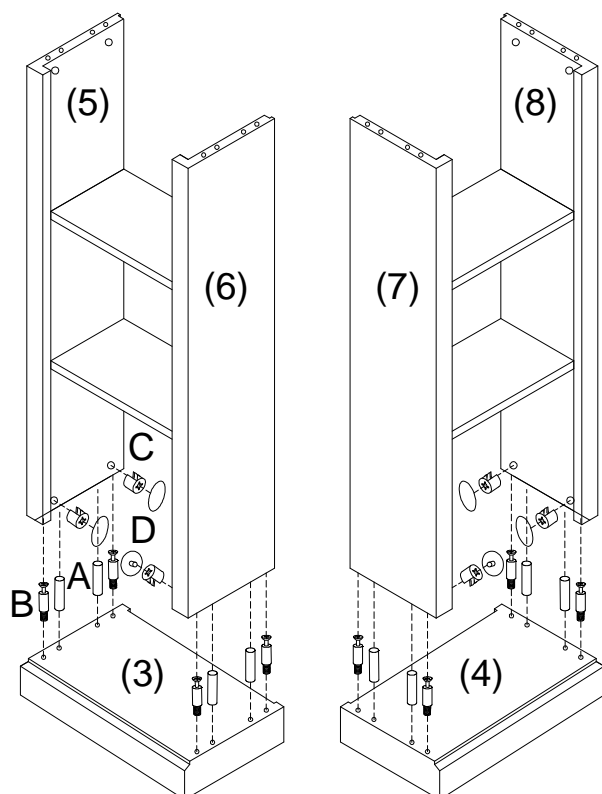 


Figure 2

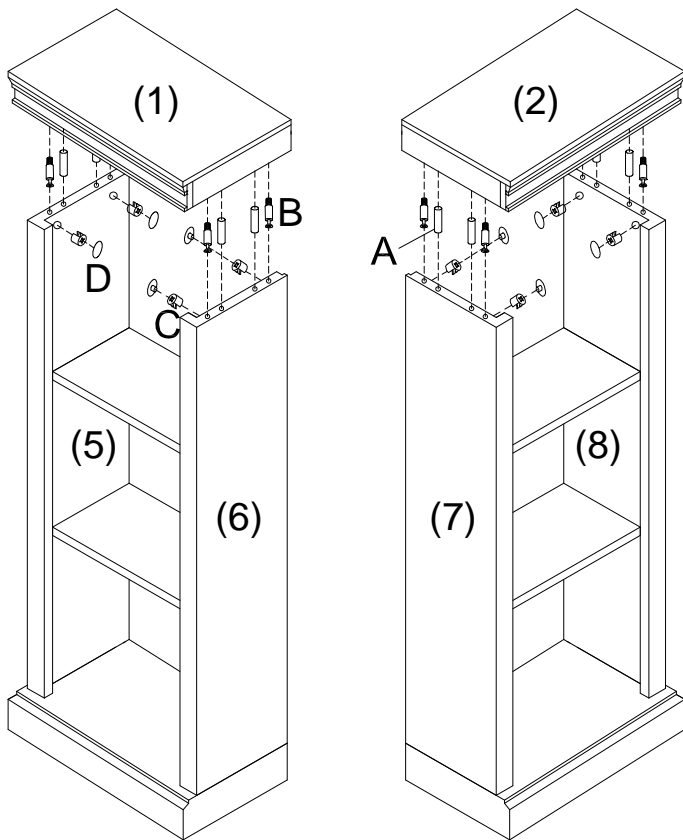 
Insert cam locks (C) into holes on assembled unit.

Screw cam bolts (B) into holes on left bookcase base (3) and right bookcase base (4).

Attach assembled unit to left bookcase base (3) and right bookcase base (4) by inserting wood dowels (A) and cam bolts (B) into corresponding holes until left bookcase base (3) and right bookcase base (4) and assembled unit meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Plug plastic cover (D) into cam locks (C).



Insert cam locks (C) into holes on assembled unit.


Screw cam bolts (B) into holes on left bookcase top (1) and right bookcase top (2).

Attach bookcase top (1) and (2) to assembled unit by inserting wood dowels (A) and cam bolts (B) into corresponding holes until bookcase top (1), (2) and assembled unit meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Plug plastic cover (D) into cam locks (C).

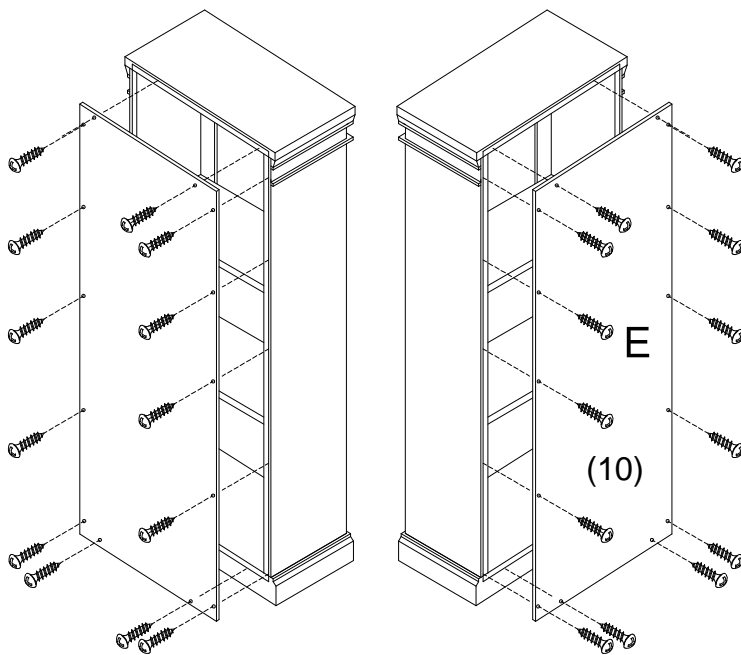 Figure 3



Attach back panel (10) to the back of the units with screws (E).

Figure 4

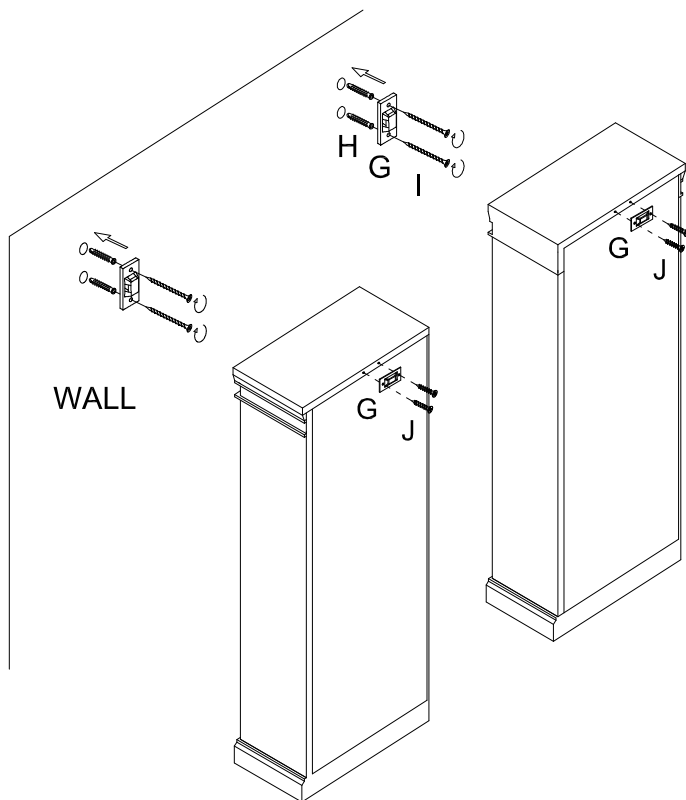 


Figure 5

Attach Bracket (G) to the Left Bookcase Top (1) & Right Bookcase Top (2) with Screw (J).

Tighten Screw (J) using Philips screwdriver.

Mark two desired locations on the wall and drill two 3/16" holes.

Insert anchors (H) into the two holes on wall as shown. Use a hammer to insert the plastic anchors until they are flush with the wall.

Then attach the brackets (G) onto the wall using Screw (I).

Tighten Screw (I) using Philips screwdriver.

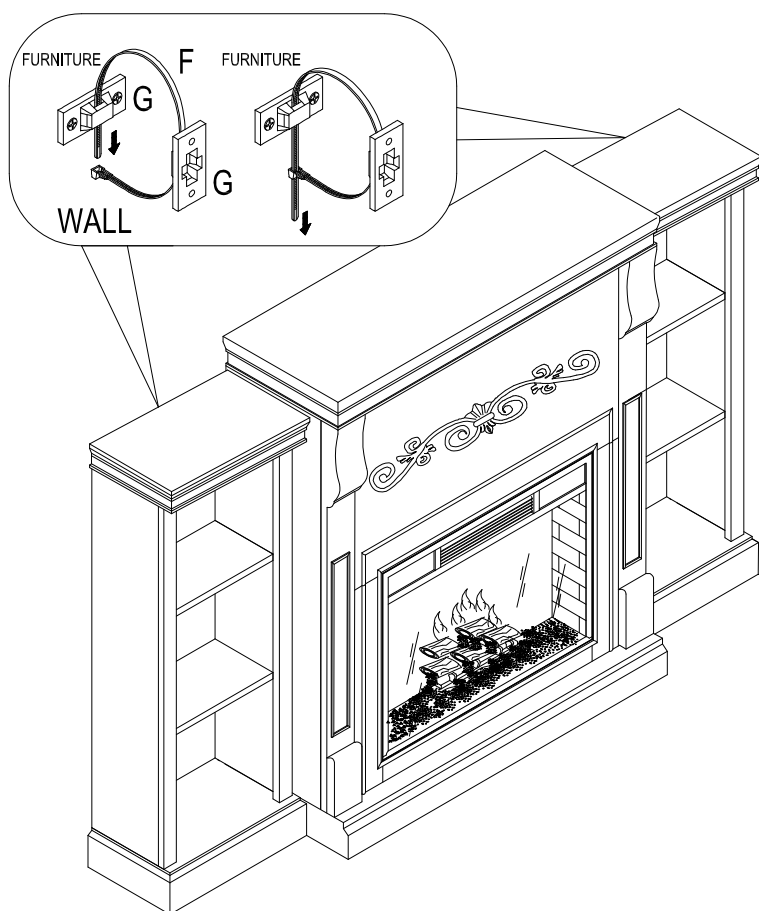 


Figure 6

Place the bookcase beside the FA9016A0TX and move this item close to the wall Bracket (G) and tie in all brackets (G) together with plastic strap (F) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

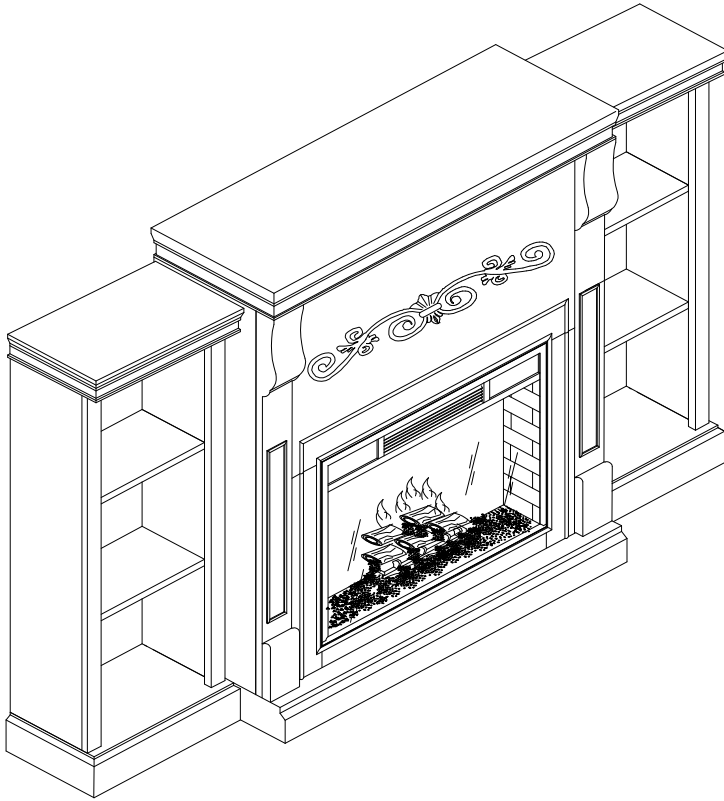 


Figure 7

Now your new Locksley Bookcase
Fireplace is ready to use.

**Bookcase shelves support up to 15
lb.**

Bookcase tops support up to 15 lb.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

| Style No | Parts Letter | Parts Description | Quantity Needed |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019