

Please go to [www.quoizel.com](http://www.quoizel.com) for product cleaning tips. Go to the **Care + Maintenance** selection.

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** Integrated 32W LED and Integrated 16WLED

**Compatible Dimmer Switches:** Lutron DVELV-300P or Lutron SELV-300P.

**Estimated Assembly Time:** 20-30 minutes


**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## ⚠️ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

### Package Contents

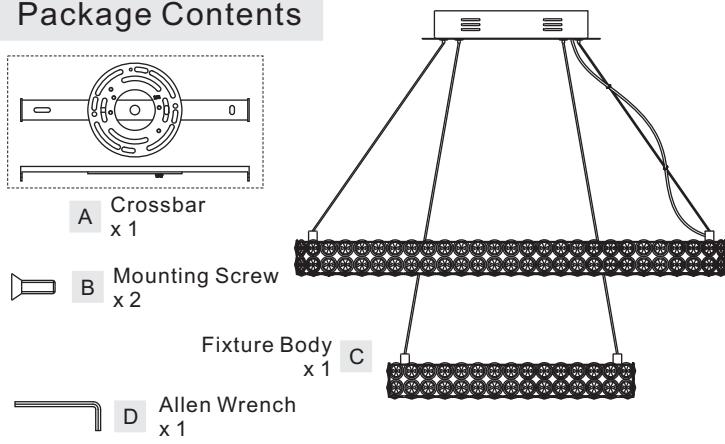

### (Step 1 Continued)

and then tighten the Set Screw with the Allen Wrench (D).  
 C. Use the same process to adjust all Steel Cables to level each ring.  
 D. Adjust the Wire in or out of the Ceiling Canopy to make sure there are no slack wires between Ceiling Canopy and Rings. Move the Slider on the Wire close to inside surface of the Ceiling Canopy.

### STEP 2 – Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

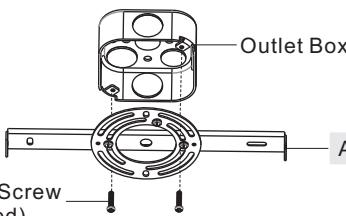


Figure 2

### STEP 1 – Adjust Fixture Height

A. Unlock Set Screw on the Rope Clamp by using the Allen Wrench (D).  
 B. Push the Pin underside of the Ceiling Canopy, adjust the Steel Cable in or out of the Ceiling Canopy to achieve your desired hanging height. Once your desired hanging height is achieved, move the Rope Clamp close to hex nut inside of the Ceiling Canopy,

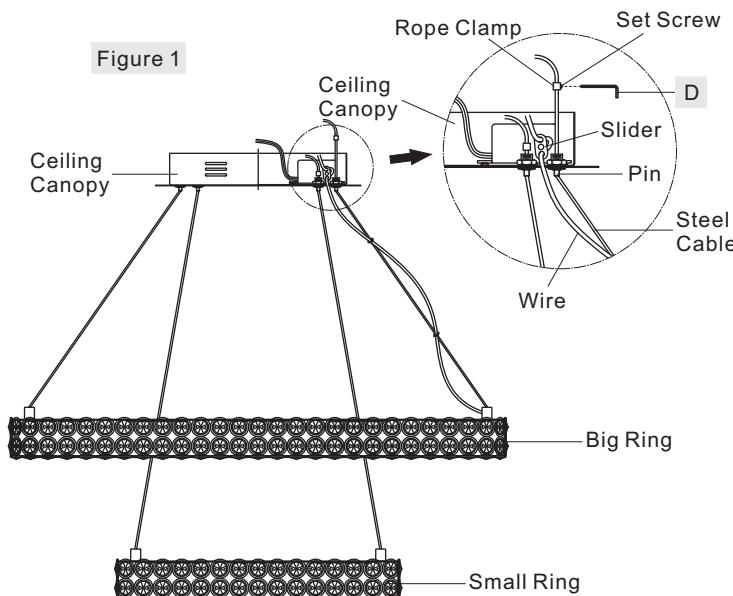


Figure 1

### STEP 3 – Make Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

**Note:** If the electrical wire is going to be cut shorter than provided. Please leave approximately 10" of wire extruding from the Ceiling Canopy. You will need to identify the "L" line wire and the "N" wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this strip back the clear wire covering the 2 fixture wires as far as you need to. This will expose each fixture wire individually. Separate the "L" wire from the other one and re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed. Do the same labeling with the "N" wire.

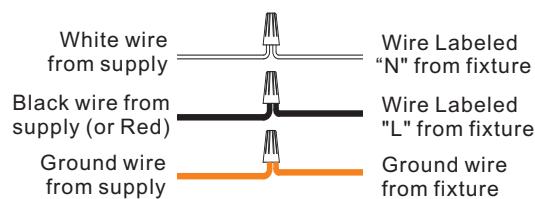


Figure 3

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

#### STEP 4 – Attach Fixture Body to Crossbar

A. Fit excess cord and electrical wires in the ceiling canopy of Fixture Body (C) properly. Line up the holes on the side of the Ceiling Canopy of Fixture Body (C) to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B). Tighten until snug.

The fixture is now assembled and ready to use. Enjoy!


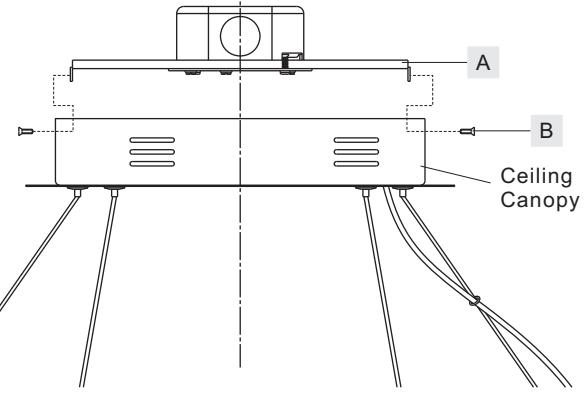


Figure 4

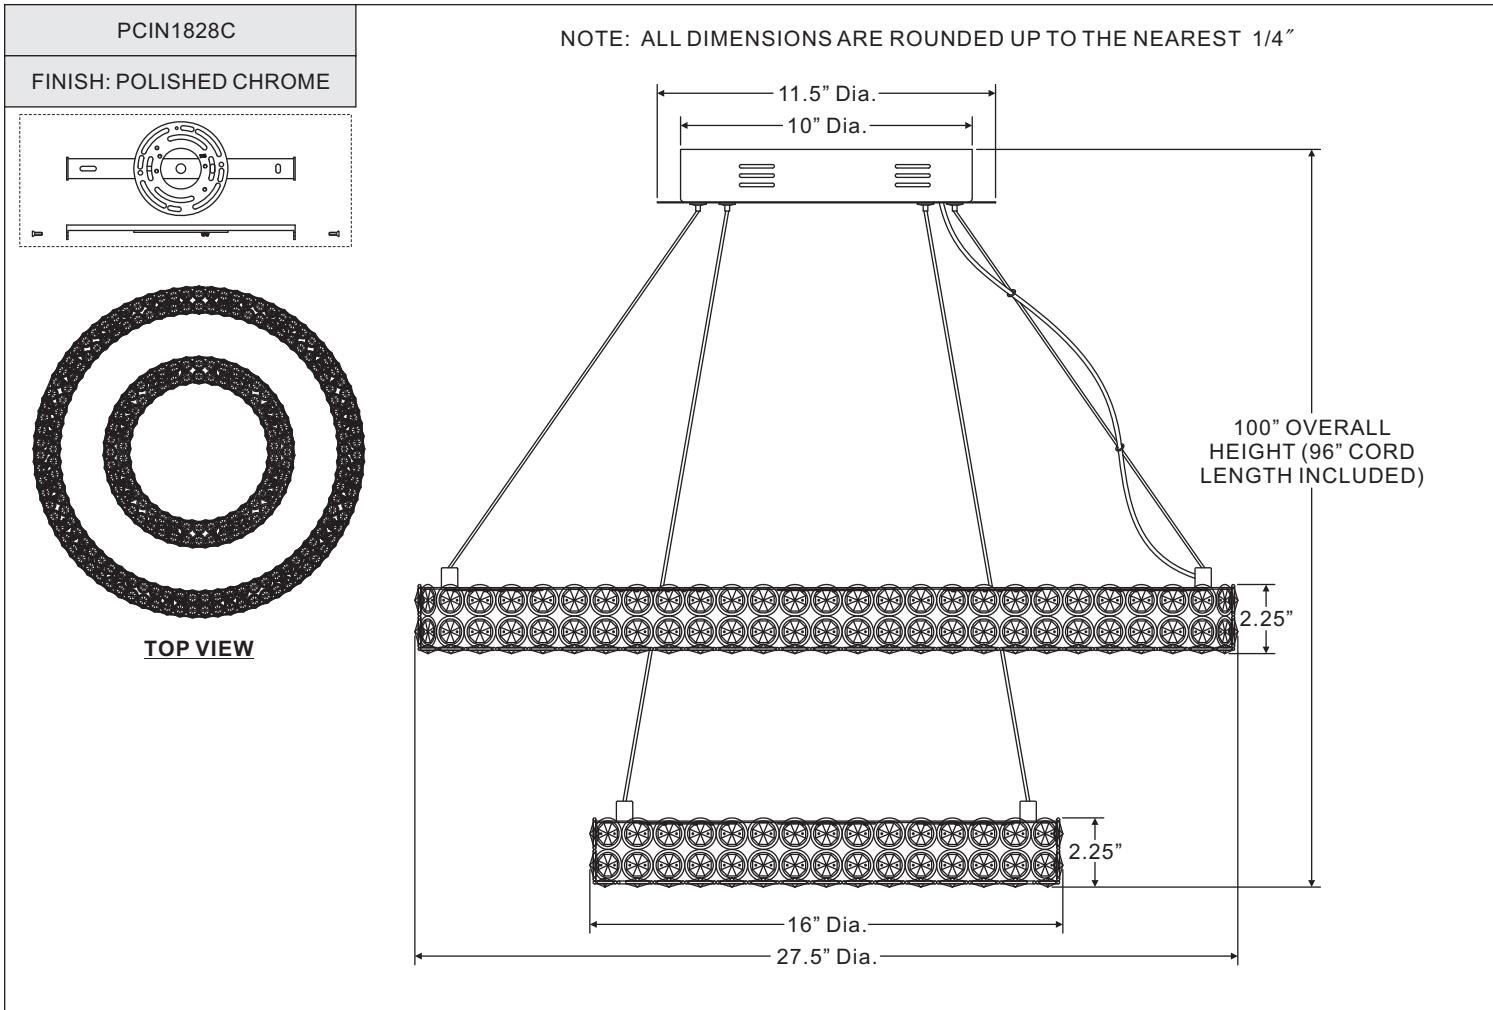

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)