

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (4) G9 Base Frosted Xenon Bulbs 40W Maximum.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

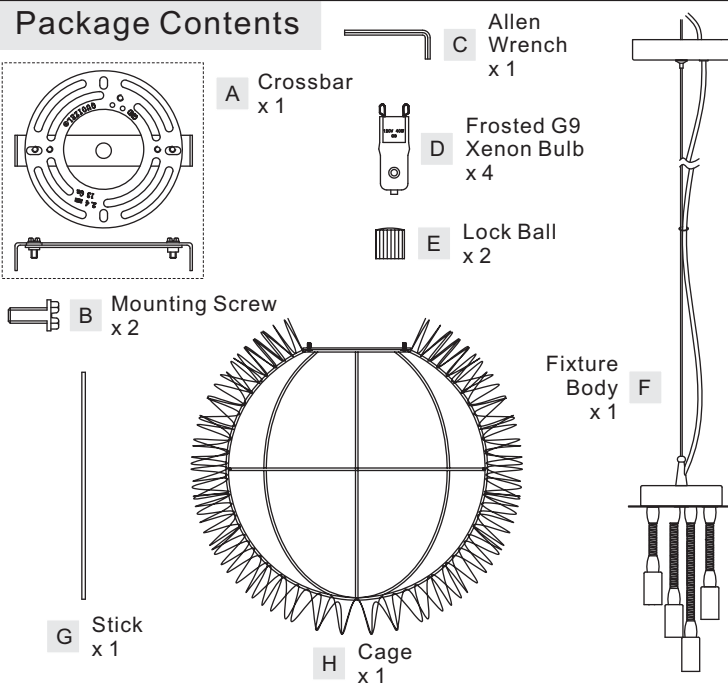

STEP 2 – Adjust Fixture Height

- Unlock Set Screw on the Rope Clamp by using the Allen Wrench (C).
- With screwdrivers, remove the Screw to open the Wire Clasp in the ceiling canopy.
- Push the Pin on the bottom center of the Ceiling Canopy, adjust the Steel Cable in or out of the Ceiling Canopy to achieve your desired hanging height. Once your desired hanging height is achieved, move the Rope Clamp close to hex nut inside of the Ceiling Canopy, and then tighten the Set Screw with the Allen Wrench (C).
- Insert slack wires into Ceiling Canopy. Attach Wire to Wire Clasp in the Ceiling Canopy and secure with the Screw previously removed. Tighten until snug with screwdrivers.

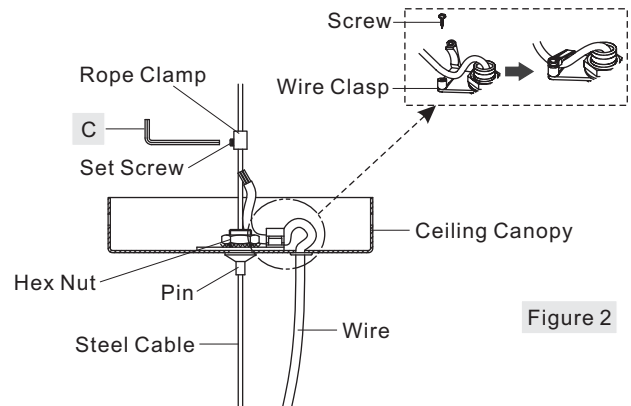


Figure 2

STEP 1 – Install Bulbs and Assemble Fixture Body to Cage

- Insert bulbs (D) into sockets and push snugly into place.
IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.
- Carefully insert all sockets with bulbs into the Cage (H) and place the bottom of Junction Box over Bolts. Secure by threading Lock Balls (E) onto Bolts. Hand tighten until snug.

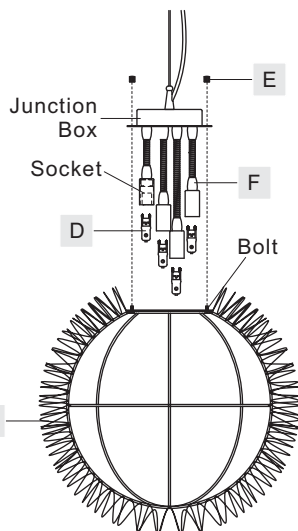


Figure 1

STEP 3 – Attach Crossbar to Outlet Box

- Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

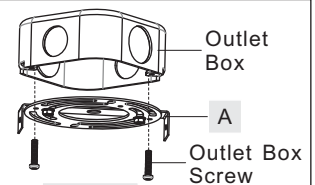


Figure 3

STEP 4 – Make Wire Connections

- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

Note: If the electrical wire is going to be cut shorter than provided. Please leave approximately 10" of wire extruding from the Ceiling Canopy. You will need to identify the "L" line wire and the "N" wire

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com

(Step 4 Continued)

before you cut the excess wire off. One is labeled N and the other labeled L. The third wire has a green stripe on it. To do this strip back the clear wire covering the 3 fixture wires as far as you need to. This will expose each fixture wire individually. Separate the "L" wire from the other two and re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed. Do the same labeling with the "N" wire.

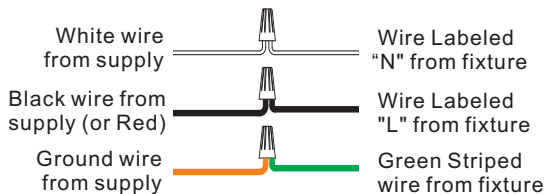


Figure 4

STEP 5 – Attach Ceiling Canopy to Crossbar

- A. Fit excess cord and electrical wires in the ceiling canopy properly. Line up the holes on the side of the ceiling canopy to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B). Tighten until snug.

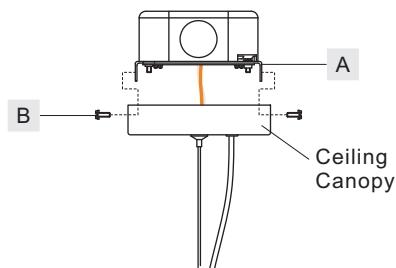


Figure 5

STEP 6 – Adjust Sockets

Please be very careful during this step or the bulbs will be destroyed.

- A. Insert the Stick (G) into the Cage (H). Attach to the Socket Cup which you want to adjust. Carefully adjust the socket to your desired direction. Remove the Stick (G) after you complete adjustment.

Your fixture is now assembled and ready to use. Enjoy!

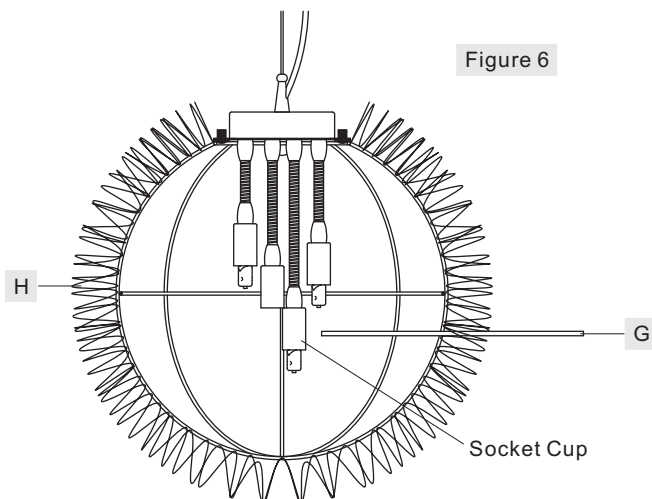



Figure 6

CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.



PCPG2816C

FINISH: POLISHED CHROME

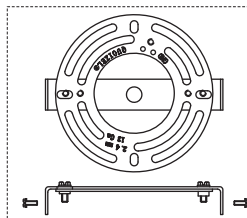

4.75" Dia.

113.5" OVERALL
HEIGHT (96" CORD
LENGTH INCLUDED)

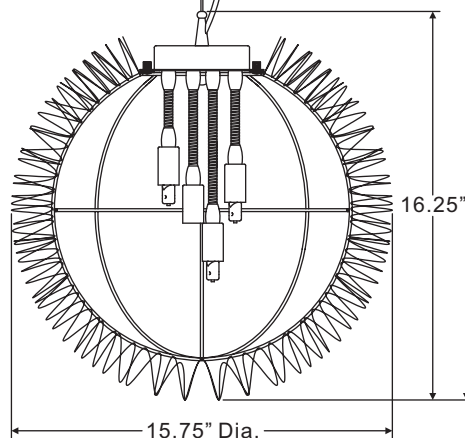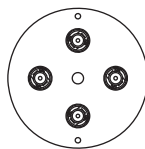

NOTE: ALL DIMENSIONS ARE ROUNDED UP
TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com