

 
MS555200TX
Porter Gaming/Media Console
Espresso Finish
Assembly Instructions



Southern
ENTERPRISES

For assistance with assembly, contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
PO#:

 
 
 
 
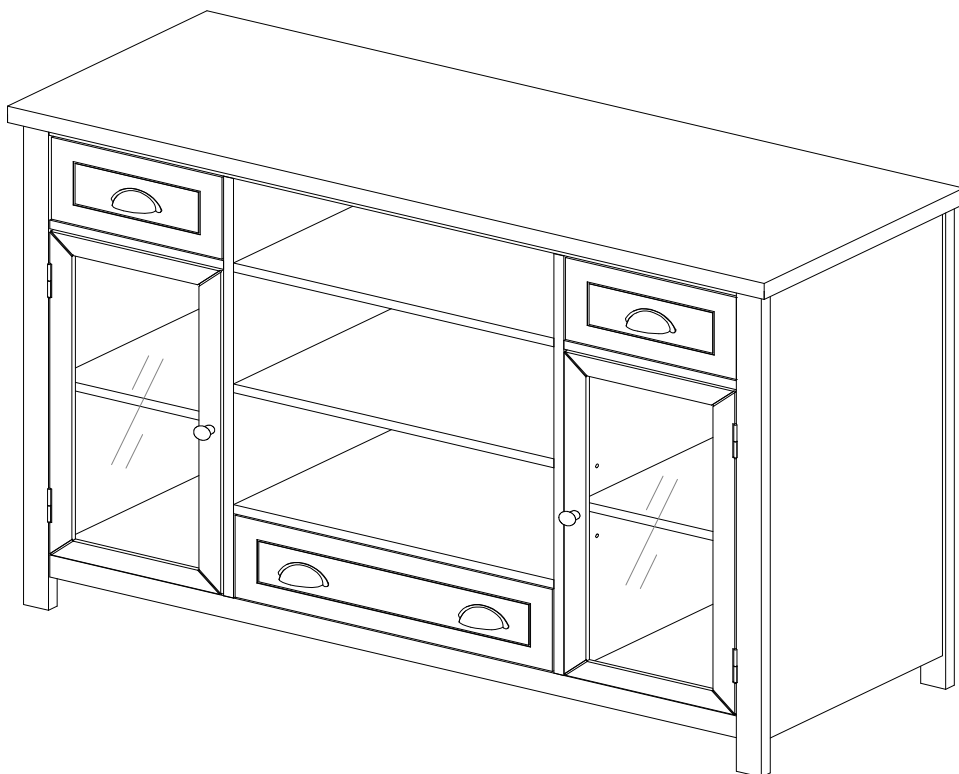 

 
 
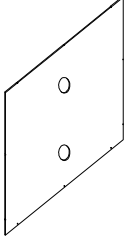 
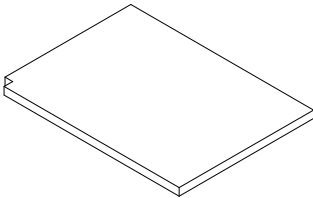 
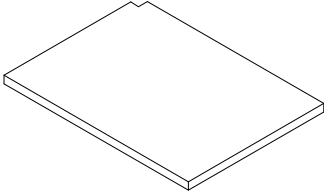 



 

 
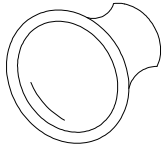 


 
 

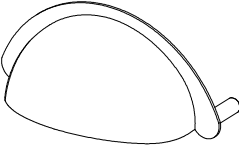 
 
 
 
 


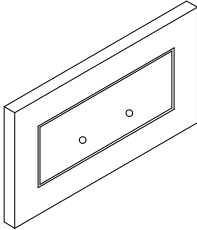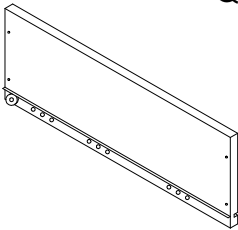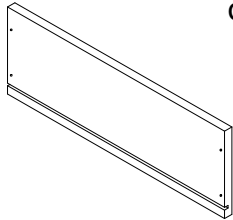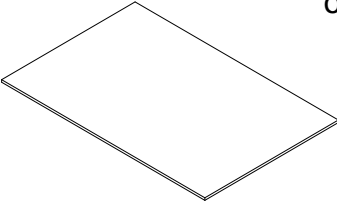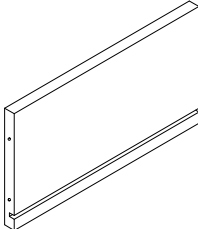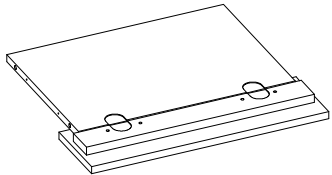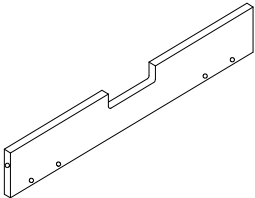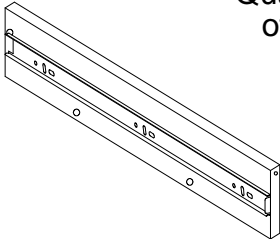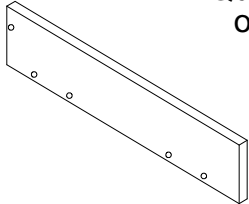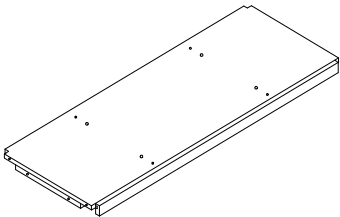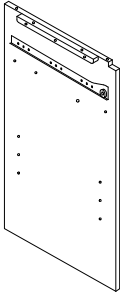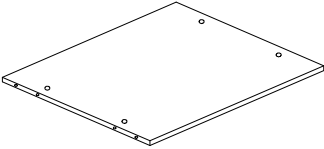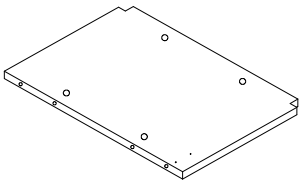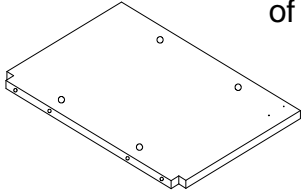 


 
 
 
Porter Gaming/Media Console

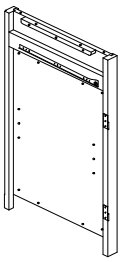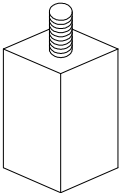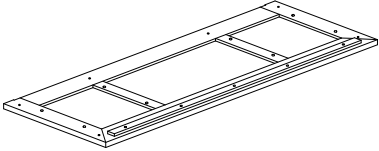Parts List

 
Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

A  <p>Quantity of 2</p> <p>Drawer Front Panel</p>	B  <p>Quantity of 2</p> <p>Drawer Left Side Panel</p>	C  <p>Quantity of 2</p> <p>Drawer Right Side Panel</p>
D  <p>Quantity of 2</p> <p>Drawer Bottom Panel</p>	E  <p>Quantity of 2</p> <p>Drawer Back Panel</p>	F  <p>Quantity of 1</p> <p>Lower Drawer Bottom Panel</p>
G  <p>Quantity of 1</p> <p>Lower Drawer Back Panel</p>	H  <p>Quantity of 1</p> <p>Lower Drawer Left Side Panel</p>	I  <p>Quantity of 1</p> <p>Lower Drawer Right Side Panel</p>
J  <p>Quantity of 1</p> <p>Bottom Panel</p>	K  <p>Quantity of 1</p> <p>Left Middle Panel</p>	L  <p>Quantity of 1</p> <p>Right Middle Panel</p>
M  <p>Quantity of 3</p> <p>Middle Fixed Shelf</p>	N  <p>Quantity of 1</p> <p>Left Fixed Shelf</p>	O  <p>Quantity of 1</p> <p>Right Fixed Shelf</p>

P  <p>Left Side panel</p>	Q  <p>Right Side panel</p>	R  <p>Support Leg</p>
S  <p>Top Panel</p>	T  <p>Left Door</p>	U  <p>Right Door</p>
V  <p>Side Back Panel</p>	W  <p>Upper Middle Back Panel</p>	X  <p>Lower Middle Back Panel</p>
Y  <p>Left Adjustable Shelf</p>	Z  <p>Right Adjustable Shelf</p>	1  <p>Cam Bolt $\phi 9/32"$x1-1/2"L</p>
2  <p>Cam Lock $\phi 5/16"$x1/2"L</p>	3  <p>Wood Dowel $\phi 5/16"$ x1-1/4"L</p>	4  <p>Long Wood Dowel $\phi 5/16"$x2"L</p>
5  <p>Small Wood Dowel $\phi 1/4"$x1-1/4"L</p>	6  <p>Bolt $\phi 1/4"$x1"L</p>	7  <p>Metal Knob</p>
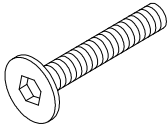
<p>8 Quantity of 2</p>  <p>Bolt $\phi 5/32'' \times 3/4''$ L</p>	<p>9 Quantity of 2</p>  <p>Magnet</p>	<p>10 Quantity Of 41</p>  <p>Screw $\phi 1/8'' \times 1/2''$ L</p>
<p>11 Quantity of 4</p>  <p>Handle</p>	<p>12 Quantity of 8</p>  <p>Bolt $\phi 5/32'' \times 1/2''$ L</p>	<p>13 Quantity of 8</p>  <p>Shelf Pin</p>
<p>14 Quantity of 20</p>  <p>Screw $\phi 5/32'' \times 1''$ L</p>	<p>15 Quantity of 4</p>  <p>Bracket</p>	<p>16 Quantity of 4</p>  <p>Screw $\phi 1/8'' \times 5/8''$ L</p>
<p>17 Quantity of 4</p>  <p>Plastic Anchor</p>	<p>18 Quantity of 4</p>  <p>Screw $\phi 5/32'' \times 1-1/2''$ L</p>	<p>19 Quantity of 2</p>  <p>Plastic Strap</p>
<p>20 Quantity of 1</p>  <p>Allen Wrench</p>	<p>21 Quantity of 4</p>  <p>Metal Nut</p>	<p>22 Quantity of 4</p>  <p>Bolt $\phi 1/4'' \times 1-1/2''$ L</p>
<p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>		<p>For replacement parts or questions, please call customer service at 1-800-633-5096.</p>
<p>Assembly Tool Required No.2 Phillips Screwdriver (Not Included)</p>		

Porter Gaming/Media Console Assembly Instructions

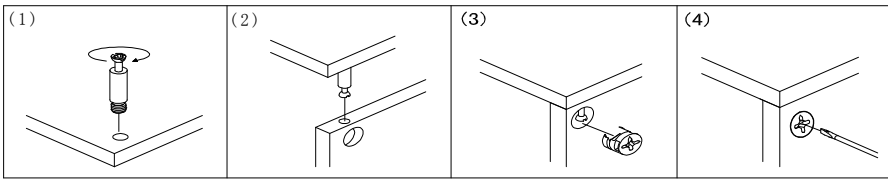

Please do not over tighten cam bolts.
 Please stop when you feel tight"

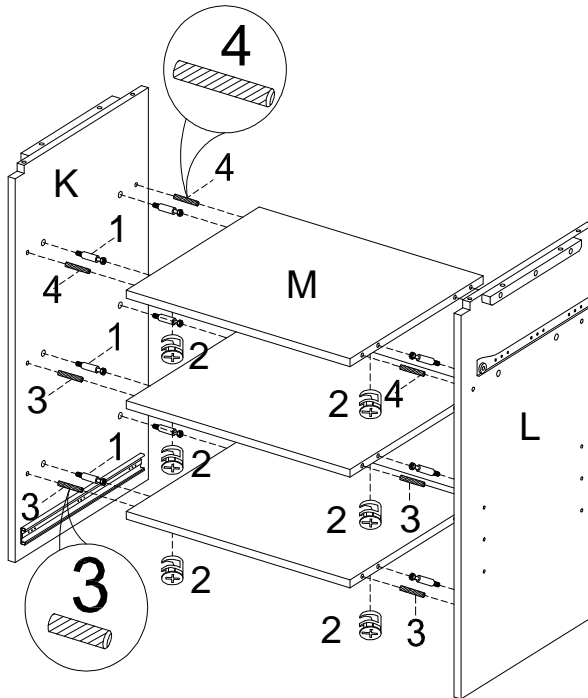 


Figure 1

Insert cam locks (2) into holes on middle fixed shelves (M).

Screw cam bolts (1) into holes on left middle panel (K) and right middle panel (L).

Attach middle fixed shelf (M) to left middle panel (K) and right middle panel (L) by inserting cam bolts (1), wood dowels (3), and wood dowels (4) into corresponding holes until fixed shelf (M), left middle panel (K) and right middle panel (L) meet.

Tighten by rotating cam locks (2) clockwise with Phillips screwdriver.

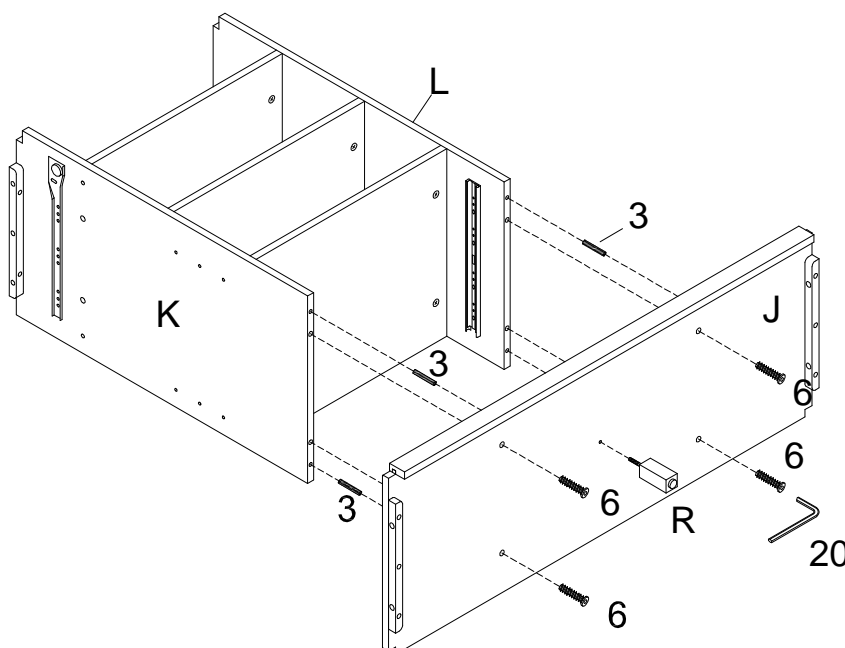 


Figure 2

Attach bottom panel (J) to assembled unit by inserting wood dowels (3) into corresponding holes until assembled unit and bottom panel (J) meet.

Use screws (6) to connect bottom panel (J) to assembled unit.

Tighten by rotating bolts (6) clockwise with Allen wrench (20).

Attach support leg (R) to assembled unit by hand.

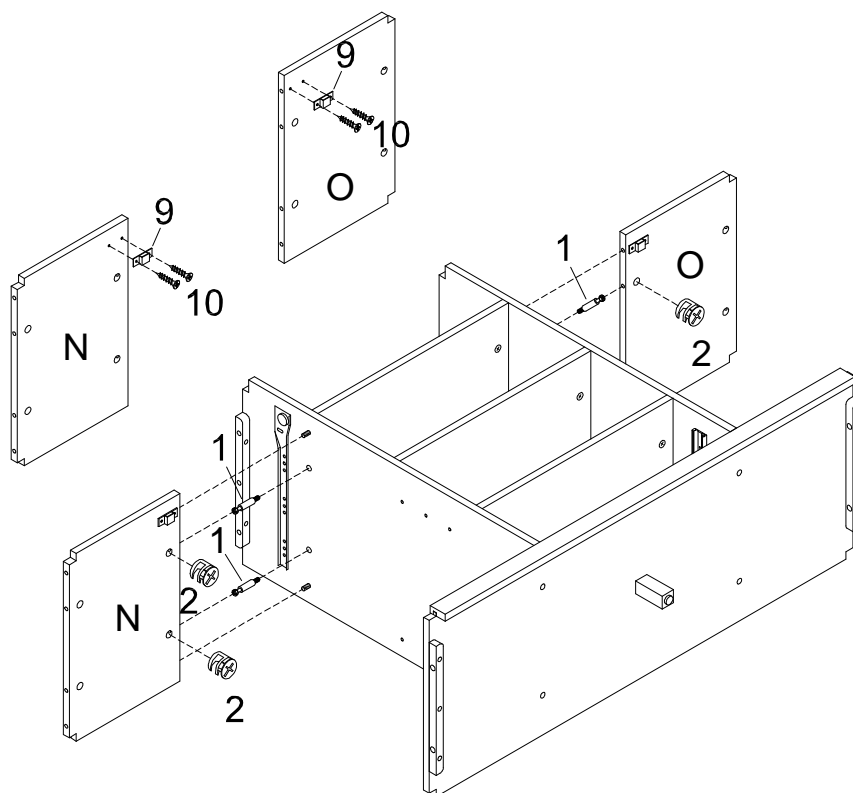 


Figure 3

Attach magnets (9) to predrilled holes on fixed shelves (N) and (O) with screws (10), then fasten them.

Insert cam locks (2) into left fixed shelf (N) and right fixed shelf (O).

Screw cam bolts (1) into holes on assembled.

Attach left fixed shelf (N) and right fixed shelf (O) to assembled unit by inserting cam bolts (1) into corresponding holes until fixed shelf (N), right fixed shelf (O), and assembled unit meet.

Tighten by rotating cam locks (2) clockwise with Phillips screwdriver.

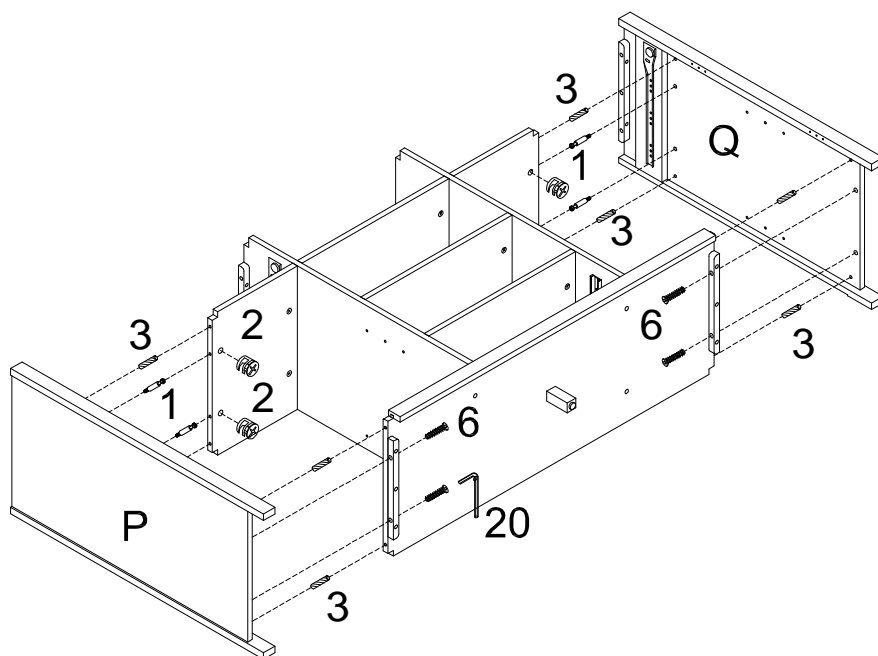 


Figure 4

 
Insert cam locks (2) into holes on assembled unit.

Screw cam bolts (1) into holes on left side panel (P) and right side panel (Q).

Attach left side panel (P) and right side panel (Q) to assembled unit by inserting cam bolts (1) and wood dowels (3) into corresponding holes until left side panel (P), right side panel (Q), and assembled unit meet.

Use screws (6) to connect bottom panel to side panels (P) and (Q).

Tighten by rotating cam locks (2) and bolts (6) clockwise with Phillips screwdriver and Allen wrench (20).

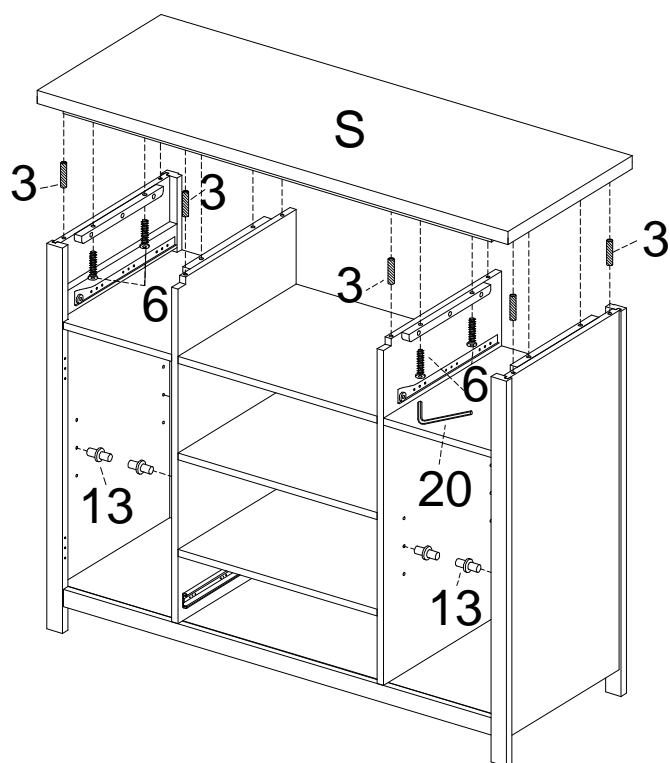

 
Insert wood dowels (3) into holes on assembled unit as shown.

Attach top panel (S) to assembled unit with bolts (6).

Tighten by rotating bolts (6) clockwise with Allen wrench (20).

Insert the shelf pins (13) into desired holes of inner side panels (P) and (Q) and middle panels (K) and (L).

Figure 5

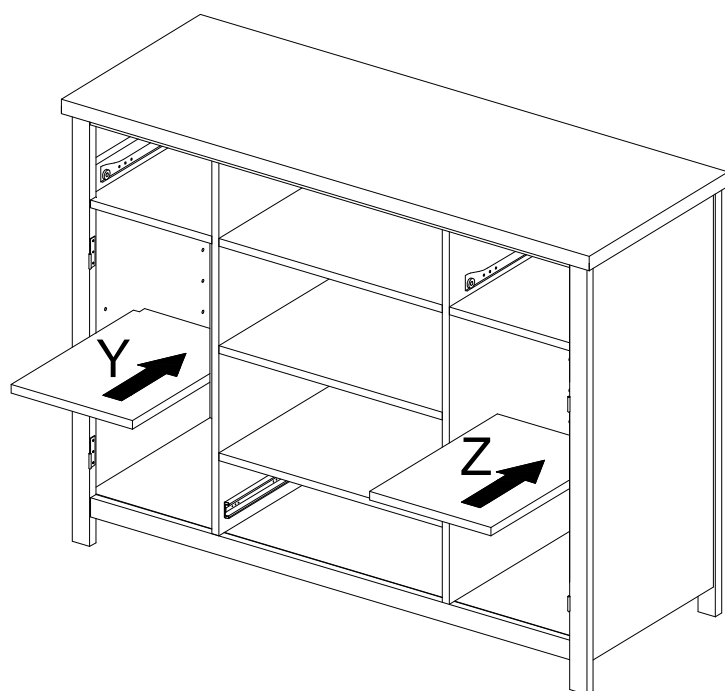

Place adjustable shelves (Y) and (Z) onto the shelf pins (13) in each section.

Figure 6

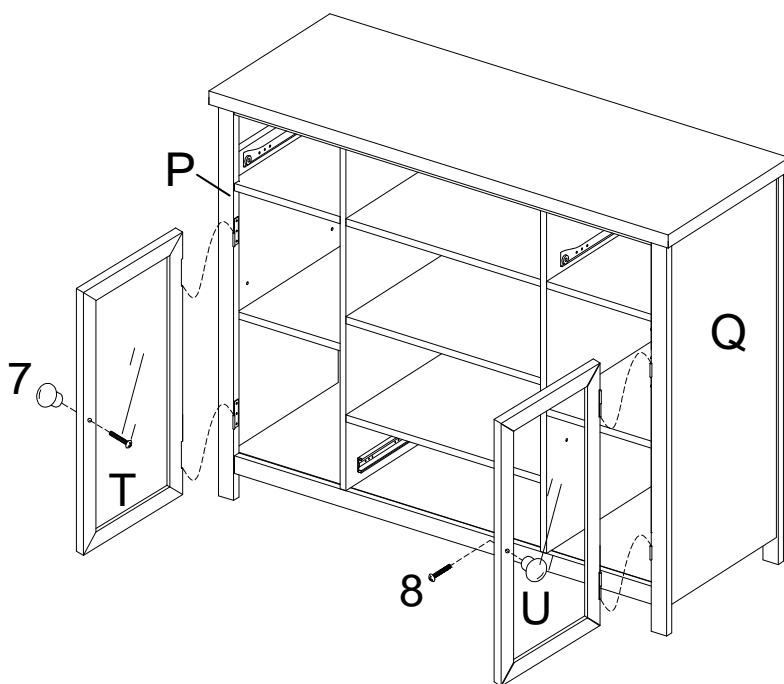 


Figure 7

Attach left door (T) to left side panel (P) and right door (U) to right side panel (Q).

Attach metal knob (7) to doors (T) and (U) with bolts (8).

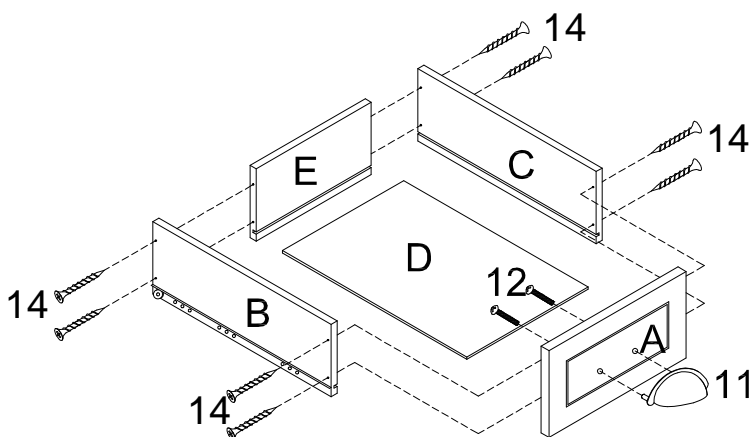 


Figure 8

Attach drawer side panels (B) and (C) to drawer back panel (E) using screws (14).

Tighten screws (14) with Phillips screwdriver.

Insert drawer bottom panel (D) into the grooves of panels (B), (C), and (E).

Attach drawer front panel (A) to the assembled unit using screws (14).

Finally, attach handle (11) to the drawer front panel (A) using bolts (12).

Tighten screws (12) with Phillips screwdriver.

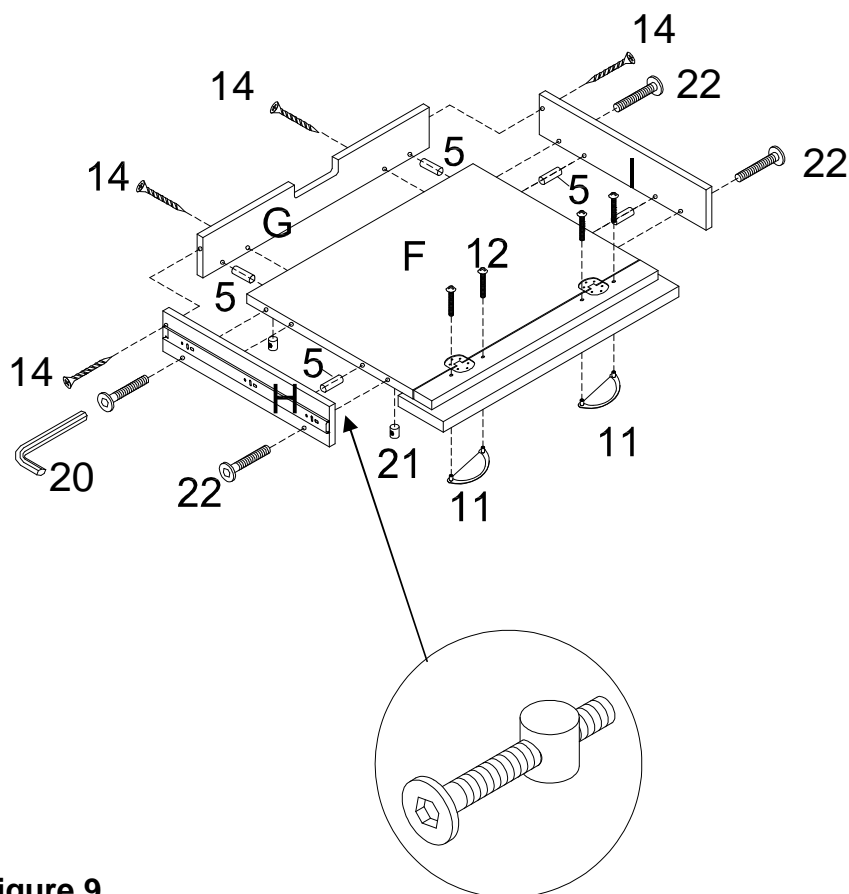 


Figure 9

Attach lower drawer back panel (G) to lower drawer bottom (F) by inserting small wood dowels (5) into corresponding holes until the panels meet. Then use screws (14) to connect them together.

Tighten screws (14) with Phillips screwdriver.

Attach lower drawer side panels (H) and (I) to assembled unit by inserting small wood dowels (5) into corresponding holes until all the panels meet. Then use bolts (22) and metal nuts (21) and screws (14) to connect lower side panels (H) and (I) and lower bottom (F) together.

Tighten bolts (22) and screws (14) with Allen wrench (20) and Phillips screwdriver.

Finally, attach handle (11) to the lower drawer bottom (F) using bolts (12).

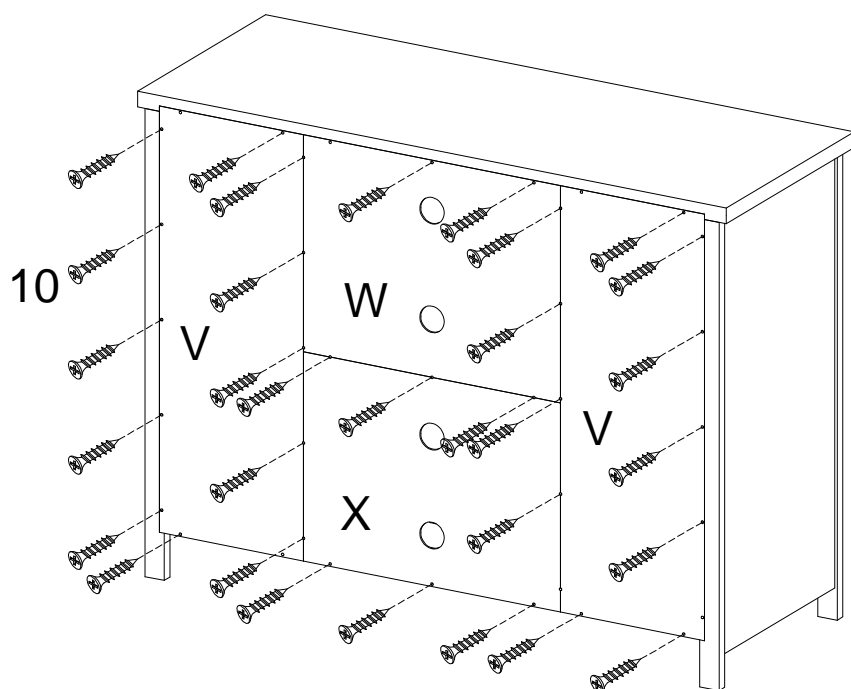 


Figure 10

Attach back panels (V), (W) and (X) to the back of the unit with screws (10) as shown.

Tighten screws (10) with Phillips screwdriver.

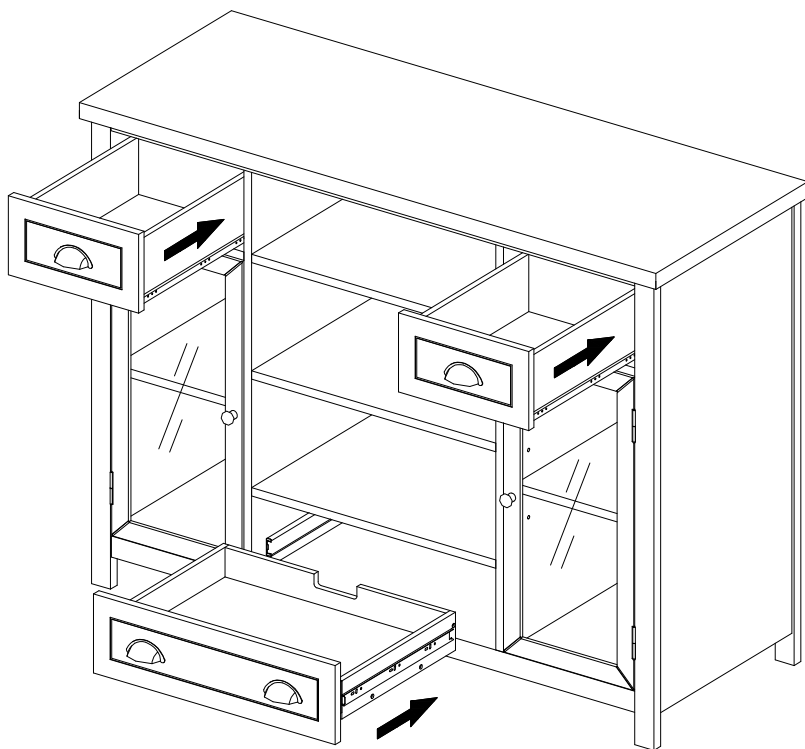 


Figure 11

Insert drawers into assembled unit as shown.

Make sure all slides glide smoothly in and out.

Note: There is a lever located on the male slide for bottom drawer slide. Push the lever to the either side in order to detach the male slide from the female slide.

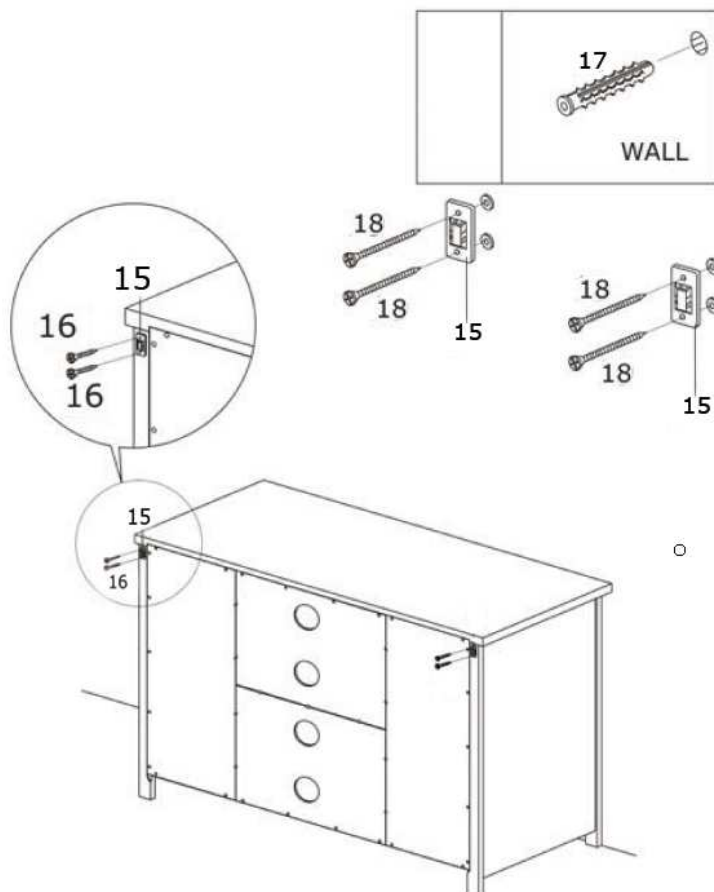 


Figure 12

Attach brackets (15) to back panel using screws (16).

Tighten screws (16) using Phillips screwdriver.

Mark two desired locations on the wall and drill two 3/16" holes.

Insert plastic anchors (17) into the two holes on wall as shown. Use a hammer to insert the plastic anchors until they are flush with the wall.

Then attach the brackets (15) onto the wall using screws (18).

Tighten screws (18) using Phillips screwdriver.

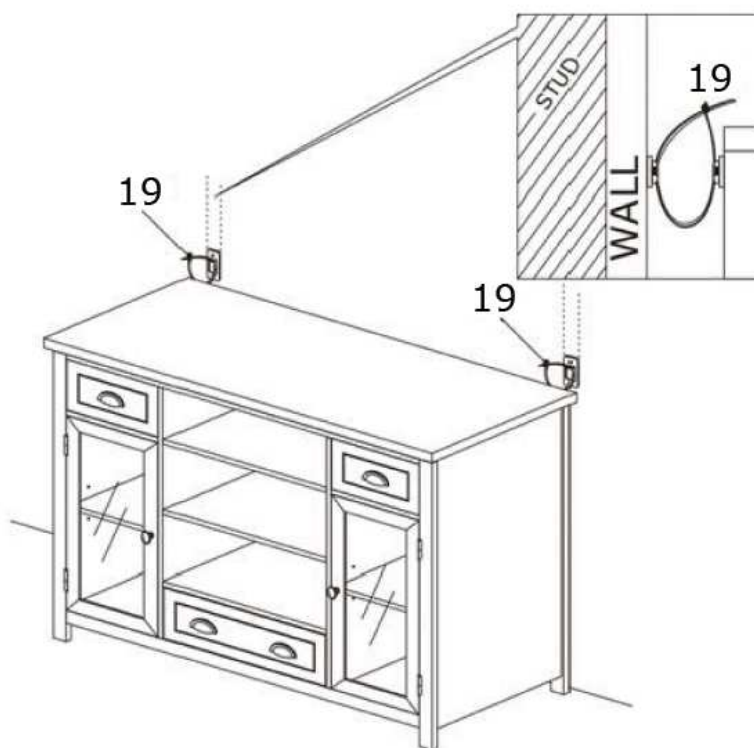 


Figure 13

Move this item close to the wall brackets (15) and tie in all brackets (15) together with plastic strap (19) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

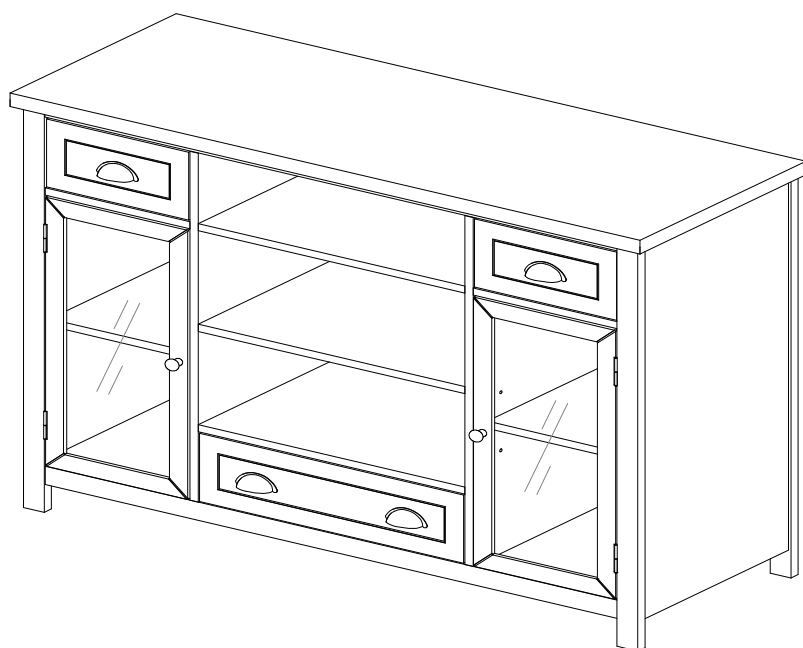 


Figure 14

Now your multicolor apothecary console/TV stand is ready to use.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019



CAUTION

The top shelf is intended for a flat screen television with a maximum overall width of 50" and supports up to 175 lb.

The top shelf is NOT INTENDED for tube televisions.

Each center shelf should not be loaded with more than 20 lb, Each side shelf should not be loaded with more than 15 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on underside of top shelf or inside drawer.

Do not allow children under 16 years to move the cart.

Model: MS555200TX
MULTICOLOR APOTHECARY CONSOLE/TV STAND
Southern Enterprises, Inc
600 Freeport Parkway,
Suite 200 Coppell, Texas, 75019
Manufacture Date: 08/5/2014