MS990700TX


"Remington" TV/Media Stand-Mission Oak Finish

Assembly Instructions



For assistance with assembly contact:
 Southern Enterprises Inc.
Customer Service 1-800-633-5096
 <u>service@seidal.com</u>
 www.seidal.com


PO:11283

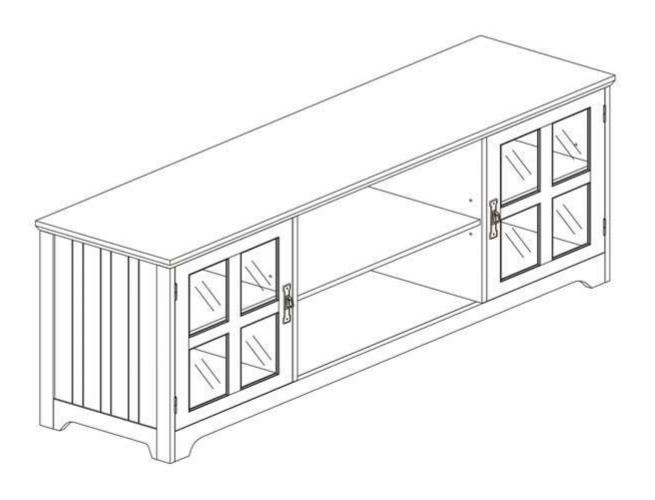

"Remington" TV/Media Stand Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware.


Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

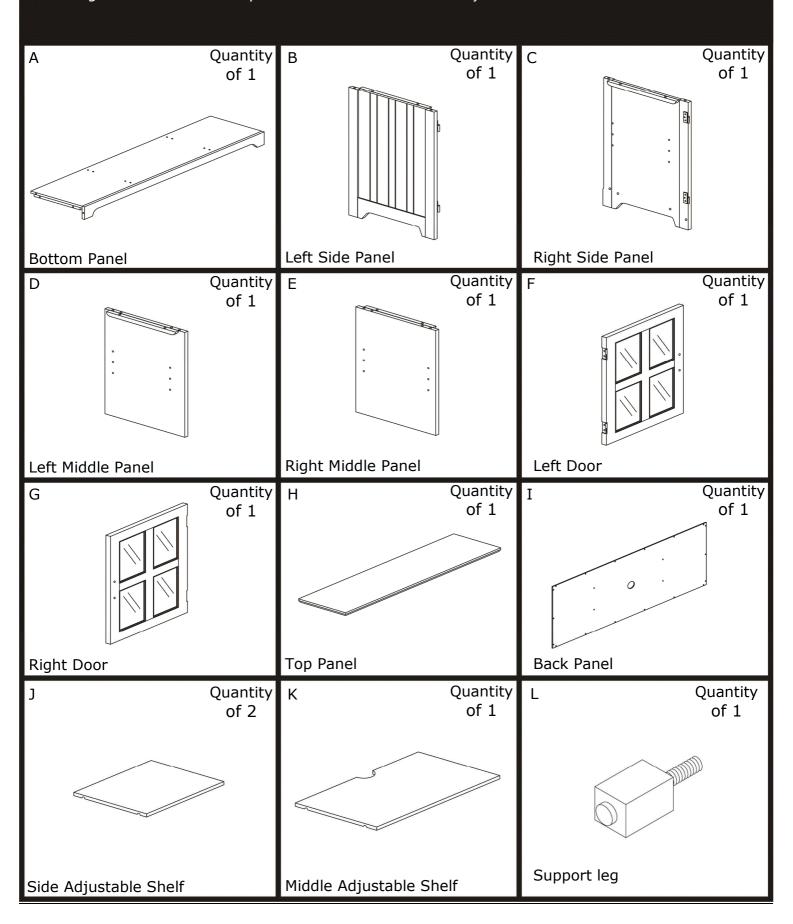

"Remington" TV/Media Stand Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware.

Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

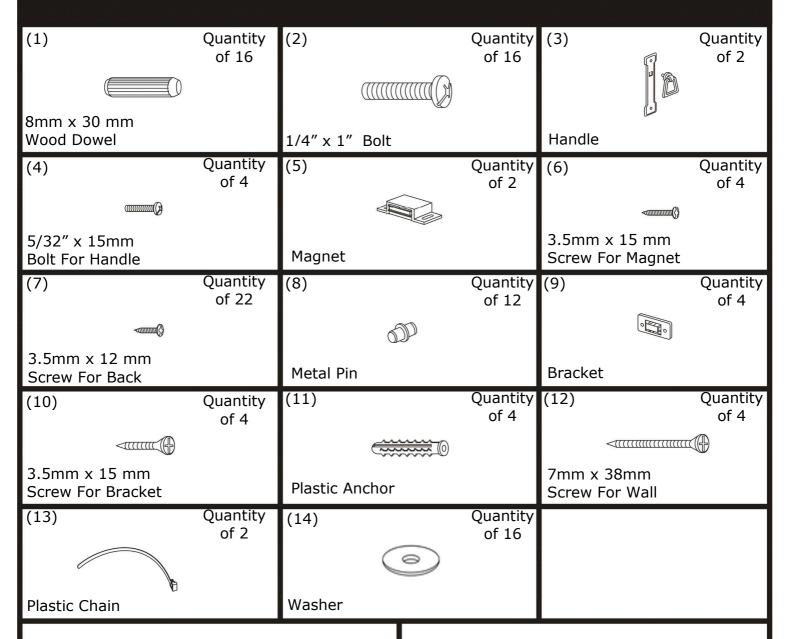


Care and Cleaning Instructions:


Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please call Customer Service at 1-800-633-5096. Please call manufacturer for assistance, questions or parts.

 Assembly Tool Required No. 2 Phillips Screwdriver (Not Included)



"Remington" TV/Media Stand Assembly Instructions

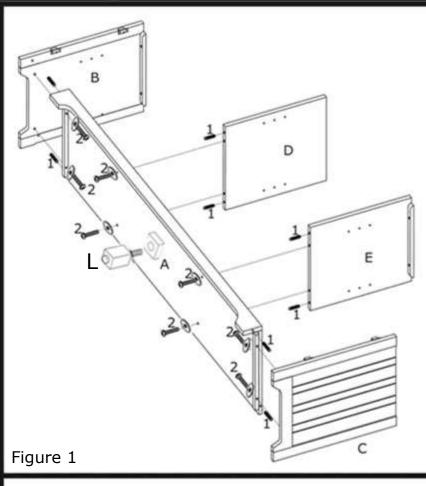



Assembly Instructions:

Wood may scratch easily. Be careful when assembling. Do not scratch.

- Step 1. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.
- Step 2. Put the Bottom Panel (A) on the soft working surface.
- Step 3. Insert the Wood Dowels (1) into predrilled holes in Bottom Panel (A) and Middle Panel (D,E).
- Step 4. Attach the Side Panels(B,C) and Middle Panels(D,E) to the Bottom Panel(A) with Bolt(2) and Washer (14), then fasten them.

Step 5, Attach support leg (L) to bottom panel(A) by hand

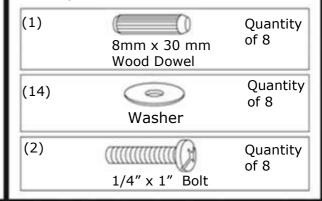


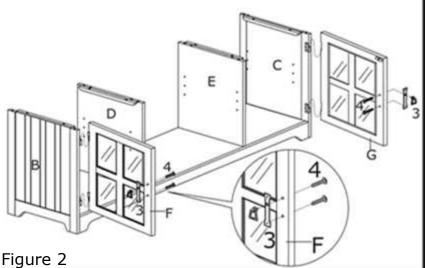

Step 1. Attach the Left Door (F) to the Left Side Panel (B) and Right Door(G) to the Right Side Panel(C).


Step 2. Attach Handle (3) to Doors (F,G) with Bolt For Handle (4).



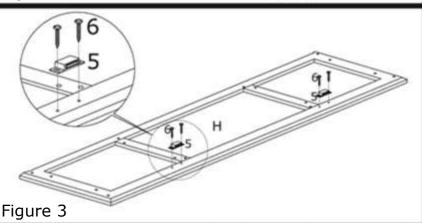


Step 1. Put the Top Panel (H) on the soft working surface.


Step 2. Attach Magnet (5) to the Top Panel (H) using Screw for Magnet(6)

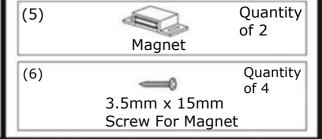

"Remington" TV/Media Stand Assembly Instructions

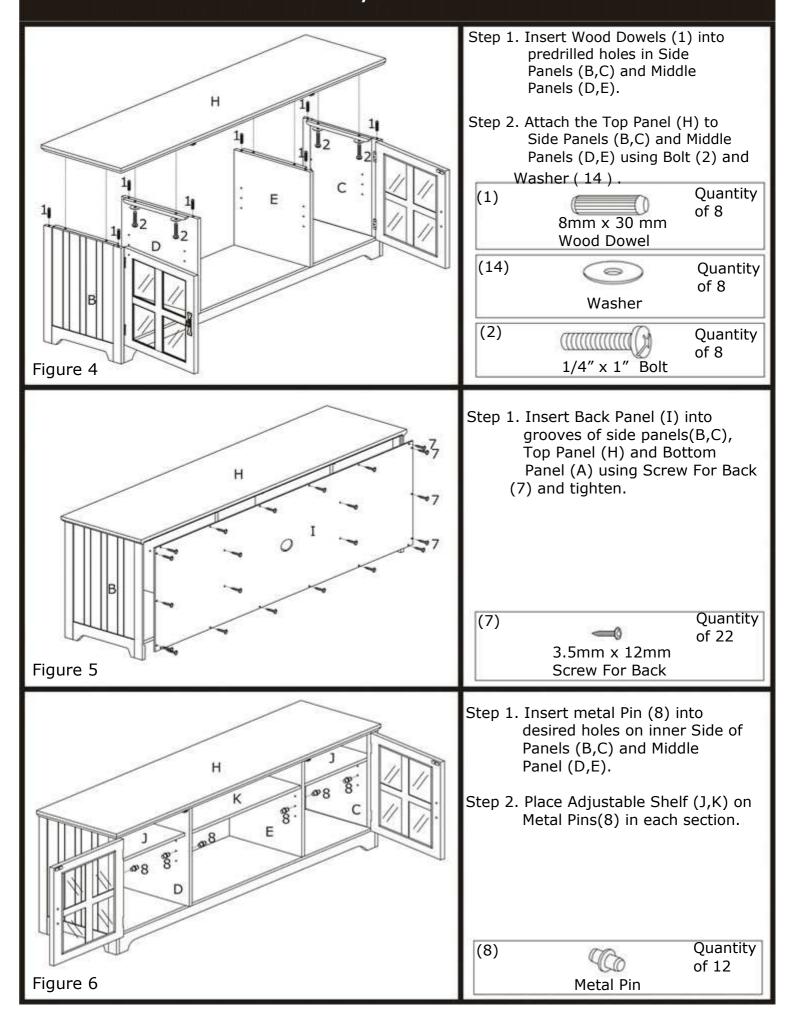


"Remington" TV/Media Stand Assembly Instructions

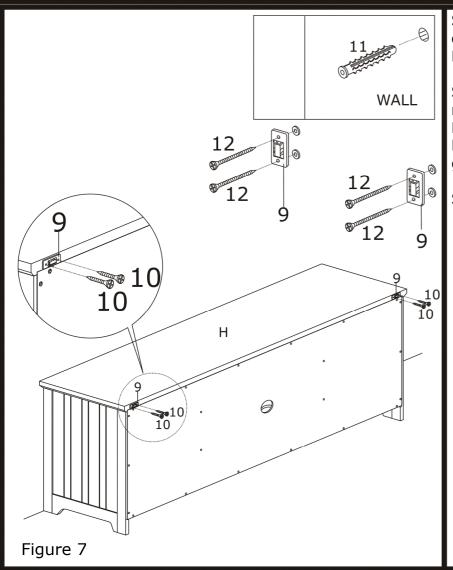


Step 1. Attach Bracket (9) on the back s de of Top Panel (H) using Screw For Bracket(10).

Step 2. Drill 3/16" dia pilot holes on wall near proximity of Bracket(9). Insert Plastic Anchor (11) into wall; You may Need to use a hammer to tap them gently.

Step 3. Fasten Bracket(9) using Screw For Wall(12) into the Plastic Anchor(11).

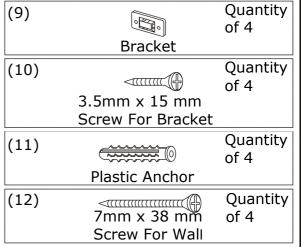

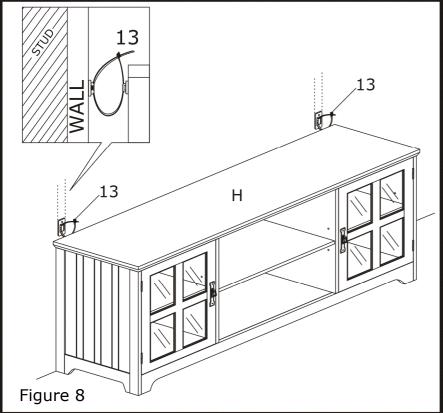

Step 1. With an assistant move this item closed to the fastened wall Bracket (9), insert and fasten Plastic Chain (13) through both brackets as shown in diagram to secure the unit.

Repeat above procedure to secure the other side.



Parts Replacement Form

Customer Information			
Name	E ()		
Address	i.		
City/State/Zip Co	ode		
Phone Number			
Please indicate where you purchased this item: Store/Website/Catalog			
Please indicate color/size/style number:			
Style No	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019



The top shelf is intended for a flat screen television with a maximum overall width of 50" and supports up to 175 lb.

The top shelf is NOT INTENDED for tube televisions.

Each center shelf should not be loaded with more than 20 lb. Each side shelf should not be loaded with more than 15 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on under side of top shelf or inside drawer.

Do not allow children under 16 years to move the cart.

Model: MS990700TX "Remington" TV/Media Stand Southern Enterprises, Inc 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019

Manufacture Date: 09/05/2011