
"NARITA" SWIVEL-TOP MEDIA STAND MS704700TX-Walnut MS704800TX-Espresso Assembly Instructions

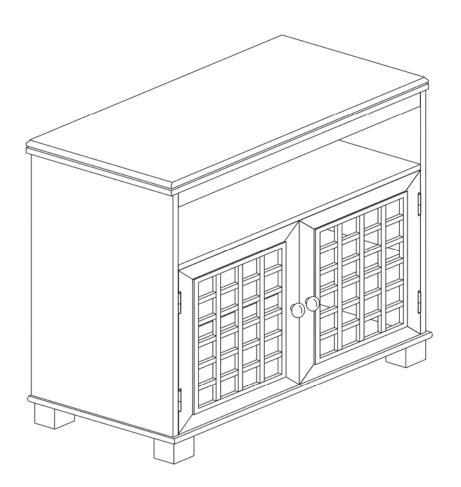


For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
<a href="mailto:service@seidal.com">service@seidal.com</a>
www.seidal.com

PO: 10932




#### "NARITA" SWIVEL-TOP MEDIA STAND Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using hardware that is too long will cause damage.
Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

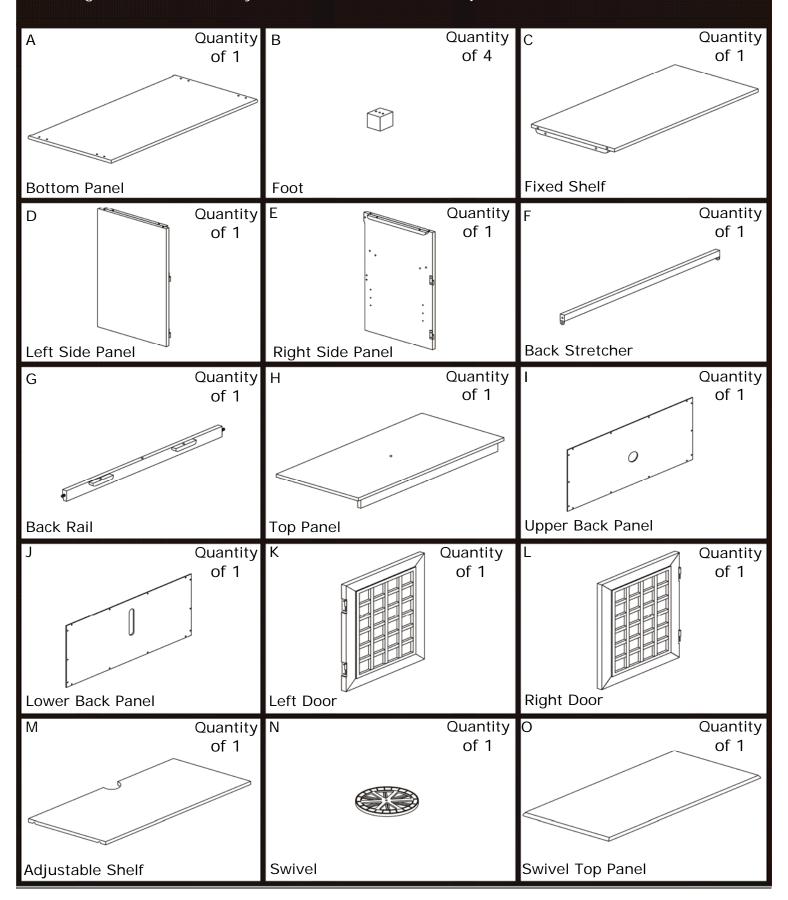

#### "NARITA" SWIVEL-TOP MEDIA STAND Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Hardware shown actual size. Using hardware that is too long will cause damage.
Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

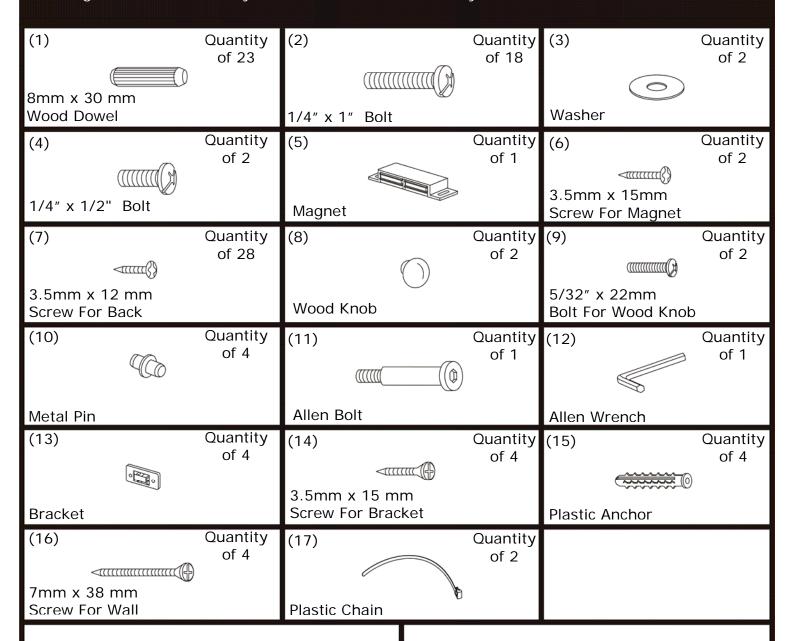



#### Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please call Customer Service at 1-800-633-5096. Do not return product to store. Please call manufacturer for assistance, questions or parts.

Assembly Tool Required No. 2 Phillips Screwdriver (Not Included)

 

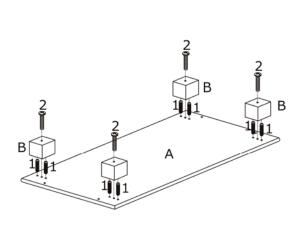


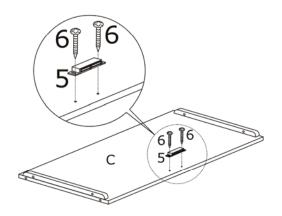



Figure 1

Assembly Instructions:

Wood may scratch easily. Be careful when assembling. Do not scratch.

 
- Step 1. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.
- Step 2. Put the Bottom Panel(A) on the soft working surface.
- Step 3. Insert the Wood Dowels(1) into predrilled holes in Foot(B).
- Step 4. Attach the Foot(B) to the Bottom Panel(A) with Bolt(2).
- Step 5. Attach Magnet(5) to Fixed Shelf(C) with Screw for Magnet(6).

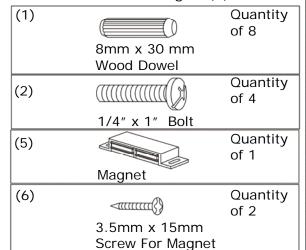





Step 2. Attach the Fixed Shelf(C) to the Left Side Panel(D) with Bolt(2), then fasten them.

Step 3. Attach the Back Rail(G) by inserting wood dowel into predrilled whole and Back Stretcher(F) to the Left Side Panel(D) with Washer(3) and Bolt(4), then fasten them.

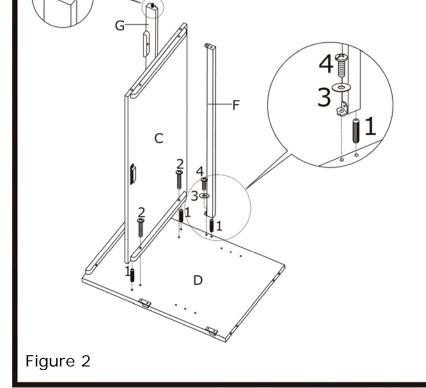


(1) Quantity of 3 8mm x 30 mm Wood Dowel Quantity (2)of 2 1/4" x 1" Bolt Quantity (3)of 1 Washer (4) Quantity of 1 1/4" x 1/2" Bolt

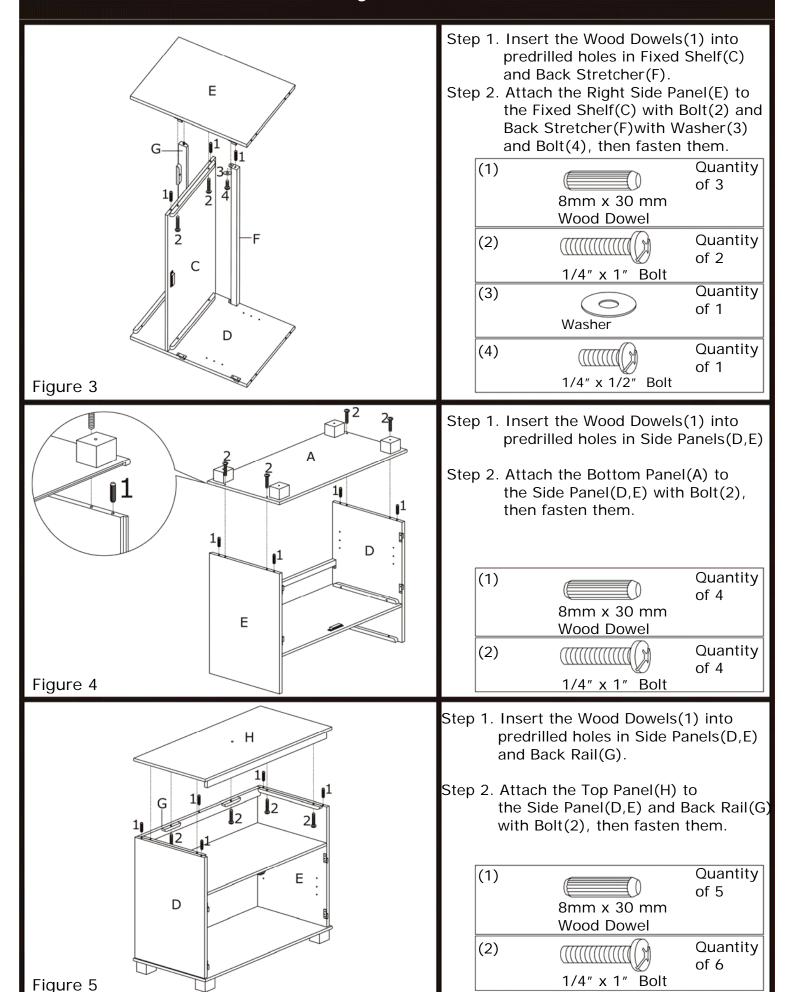

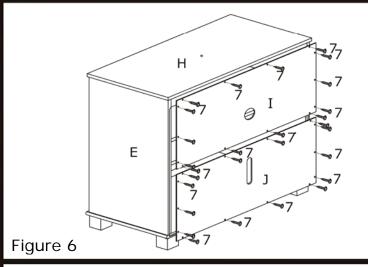

Step 1. Insert Upper Back Panel (I) and Lower Back Panel(J) into grooves of Side Panels(D,E), top Panel(H) and Bottom Panel(A) with Screw For Back (7)and tighten.




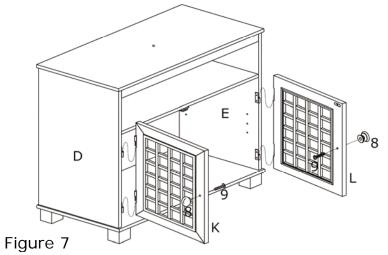

Step 1. Attach the Left Door(K) to the Left Side Panel(D) and Right Door(L) to the Right Side Panel(E).

Step 5. Attach Wood Knob(8) to Doors(K,L) with Bolt For Wood Knob(9).



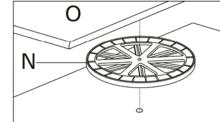


desirous holes of inner Side Panels(D,E).

Step 1. Insert the metal Pin(10) into


the Metal Pins(10) in each section.

Step 2. Put the Adjustable Shelf(M) on

Step 3. Attach the Swivel(N) and Swivel Top Panel(O) to the Top Panel(H) with Allen Bolt(11), then fasten them.

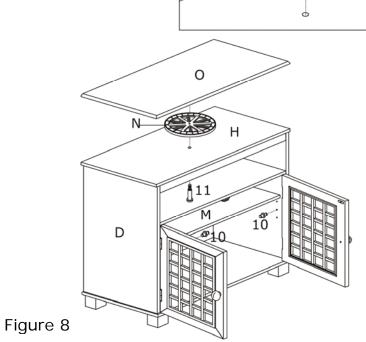


(10)		Quantity of 4			
Metal Pin					
(11)		Quantity of 1			
	Allen Bolt				
(12)	Allen Wrench	Quantity of 1			

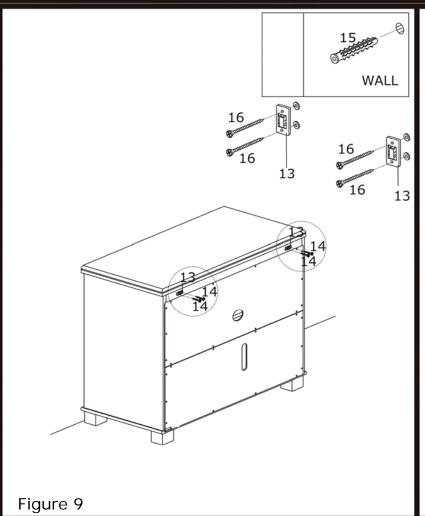


- Step 1. Attach Bracket(13) to the Back Rail(G) with Screw For Bracket(14).
- Step 2. Drill 1/4 pilot holes in near proximity of the Bracket(13) attached to the Back Rail(G) and tap the Plastic Anchor(15) into wall.
- Step 3. Fasten Bracket(13) using Screw For Wall(16) into the Plastic Anchor(15).

(13)	0 22270	Quantity of 4
	Bracket	
(14)	!!!!!<b !	Quantity of 4
	3.5mm x 15 mm Screw For Bracket	
(15)	<u> </u>	Quantity of 4
	Plastic Anchor	
(16)	3.5mm x 38 mm Screw For Wall	Quantity of 4

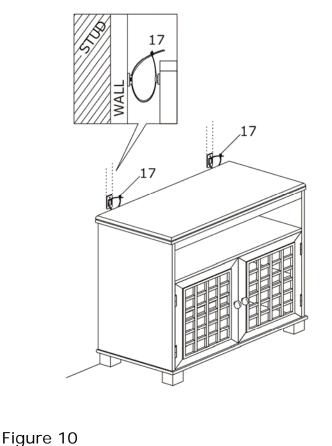

 Step 1. Move this item to the fastened wall Bracket(13) and tie in both Bracket(13) with Plastic Chain(17) as shown in diagram.





Customer Service 1-800-633-5096 <u>service@seidal.com</u> Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019

#### MS704700TX & MS704800TX Parts Replacement Form

Customer Information							
Name							
Address							
City/State/Zip Code							
Phone Number							
Please indicate where you purchased this item: Store/Website/Catalog							
Please indicate color/size/style number:							
Style No Par	ts Letter	Parts Description	Quantity Needed				

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts.

Southern Enterprises Inc. Will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled Parts will be sent if available from SEI.

Please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a <u>customer service representative</u> for issues involving damages or replacement parts. Please ask for a <u>technical assistance representative</u> for any issues with product assembly and product construction. Please contact the retailer that you purchased from for returns.

We'd love to hear from you! Email us photos of our products in your home at <u>sei@seidal.com</u> and we might feature it on our site or use it to model one of our inspirational photos.



The top shelf of this cabinet is intended for plasma/LCD televisions having a maximum screen size of 25" and weight of 175 lb.

The top shelf is NOT INTENDED for tube televisions.

Each center shelf should not be loaded with more than 20 lb. Each side shelf should not be loaded with more than 15 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on under side of top shelf or inside drawer.

Do not allow children under 16 years to move the cart.

Model: MS704700TX & MS704800TX "NARITA" SWIVEL-TOP MEDIA STAND Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019

Manufacture Date: 02/05/2010