


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

PARTS LIST

- A (1) Dresser
- B (4) Bunn Feet

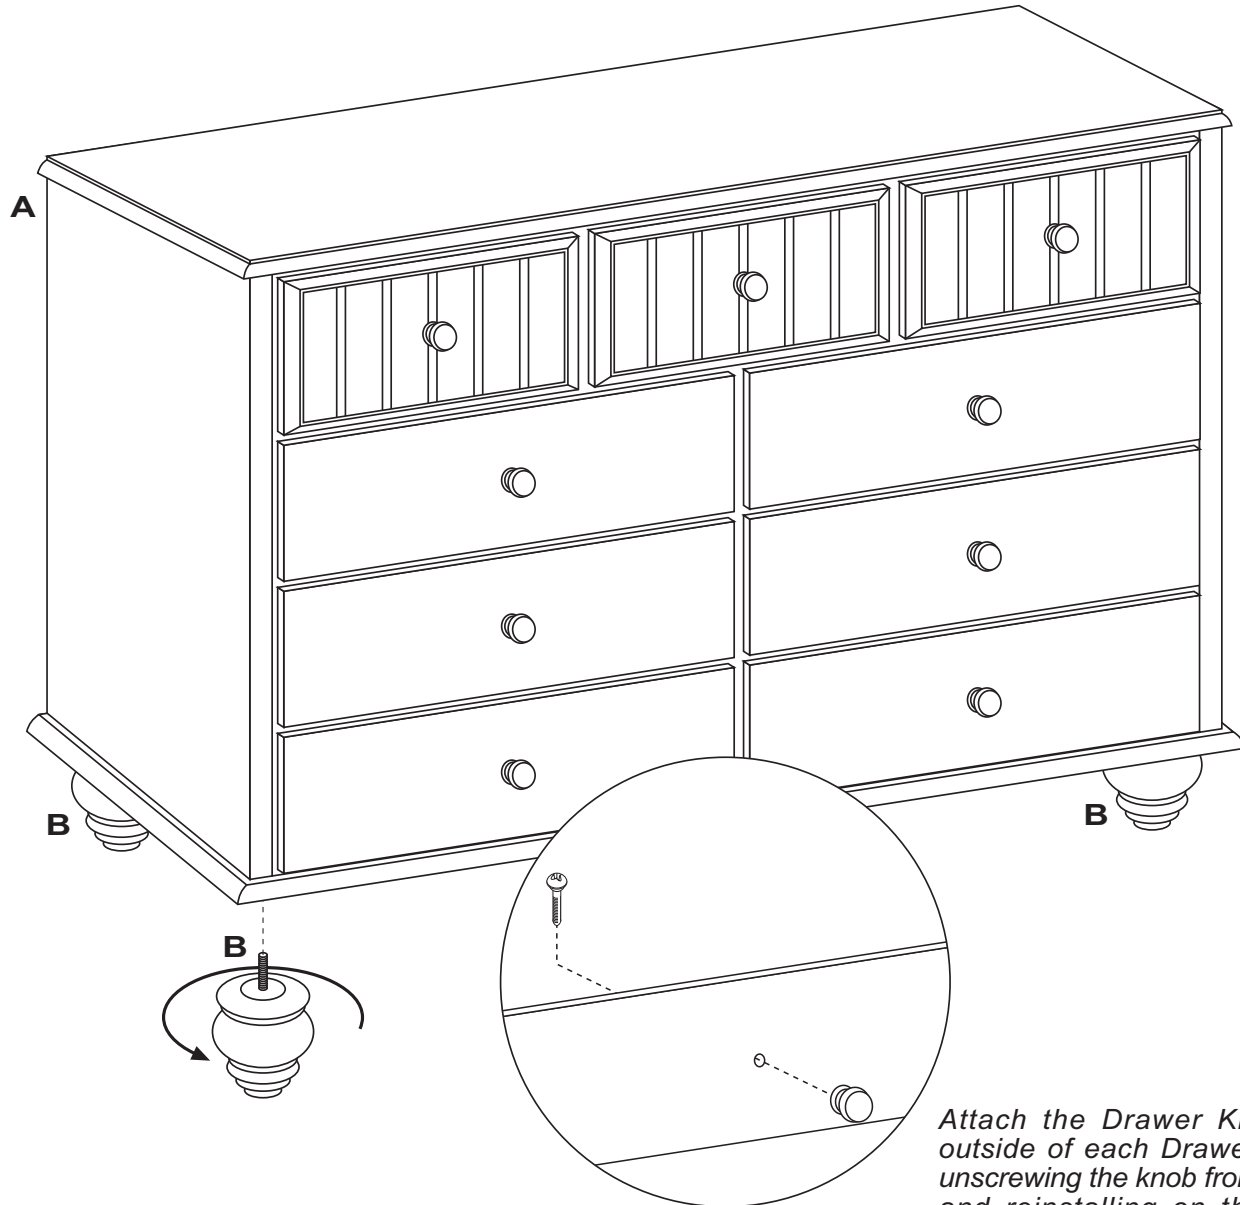

Attach the Drawer Knob to the outside of each Drawer Panel by unscrewing the knob from the inside and reinstalling on the outside.

***** ASSEMBLY *****

Carefully lay the Dresser (A) on it's backside on a clean, smooth surface to protect the finish from damage. Attach each Bunn Foot (B) to the bottom by firmly screwing each into place. Be careful not to overtighten to prevent any damage. The assembly of your new Dresser is now complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.