

# PALM SPRINGS GAME TABLE

Model #4185-810 Table Top Model #4185-811 Table Base

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

A (4) Allen Bolts 5/16" x 2-1/4"

B (20) Spring Washers 14mm

C (4) Flat Washers 16mm

D (16) Flat Washers 19mm

E (1) Allen Wrench

F (4) Plastic Caps

G (12) Hex Nuts

H (1) Hex Wrench

I (1) Wood Push Rod

S (4) Allen Bolts 5/16" x 1-1/2"

#### PARTS LIST

J (1) Table Top


K (1) Square Platform

L (1) Table Column

M (4) Legs

N (1) Table Ring P (1) Game Top

R (1) Game Board

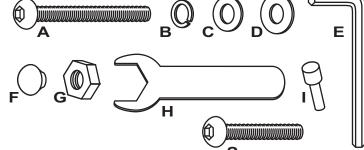

### STEP 1

Begin assembly by attaching the Square Platform (K) to the top of the Table Column (L) by guiding holes in place and securing with 4 Flat Washers (D), 4 Spring Washers (B) and 4 Hex Nuts (G) from the top. Tighten all nuts using the Hex Wrench (H) that has been provided.

### STEP 2

Attach the Square Platform (K) to the bottom of the Table Top (J) by aligning holes and securing with 4 Allen Bolts (A), 4 Spring Washers (B) and 4 Flat Washers (D) from the bottom. Tighten all bolts using the Allen Wrench (E) that has been provided.

#### STEP 3

Turn table upside down and attach each Leg (M) to the Table Column (L) by aligning holes and securing from the inside with 8 Flat Washers (D), 8 Spring Washers (B) and 8 Hex Nuts (G) from the top. Do not fully tighten nuts.

# STEP 4

Attach the Table Ring (N) to the inside of each Leg (M) by fitting in place and securing with 4 Allen Bolts (S), 4 Spring Washers (B) and 4 Flat Washers (C) from the bottom. Tighten all bolts from Steps 3 and 4 to complete the assembly. Insert Plastic Caps (F) to cover bolt heads.

# STEP 5

Place the Wood Push Rod (I) into the open hole on the chessbox (so the Game Board can be flipped and removed) and insert the Game Board (R) into the open area on the Table Top. Once in place carefully center the Game Top (P) on the top of the Table Top to complete the assembly.

