DONOVAN FIREPLACE MANTLE


FA966100TX--BLACK WITH GOLD ACCENTS

ASSEMBLY INSTRUCTION




For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096

service@seidal.com
www.seidal.com

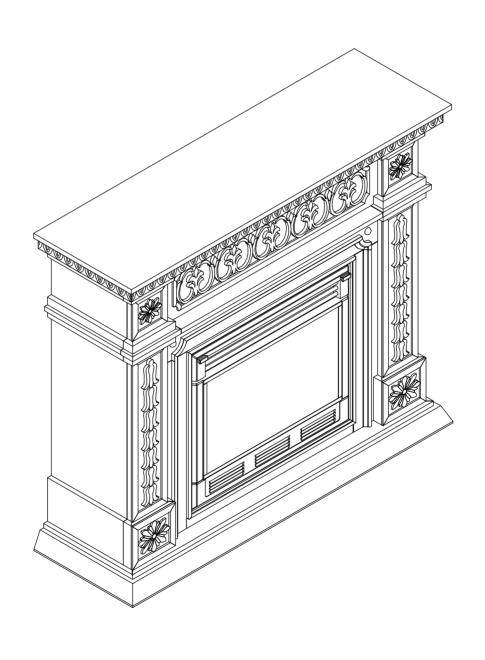


PACKAGE CONTENTS

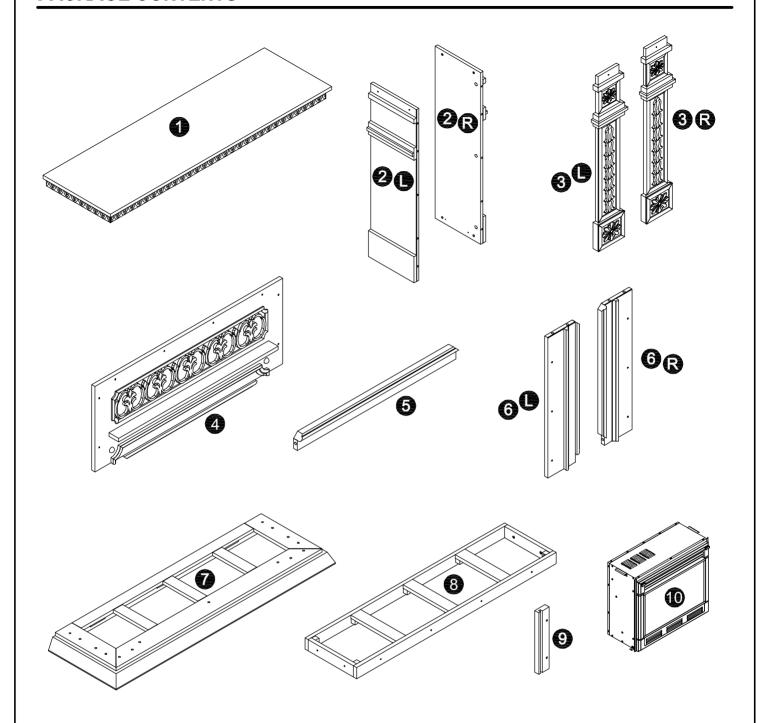

PART	DESCRIPTION QUA	ANTITY
1	Top Panel	1
2	Side Panel(L/R)	2
3	Side Front Panel (L&R)	2
4	Upper Block Fire Panel	4
5	Lower Block Fire Panel	1

PART DESCRIPTION QUANTITY			
6	Side Block Fire Panel (L&R)	2	
7	Base	2	
8	Inside Frame	1	
9	Wood Holder	2	
10	Firebox(sold in a separate carton)		

HARDWARE CONTENTS (shown actual size)

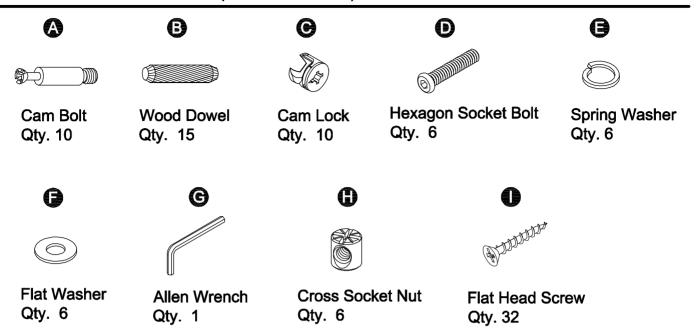



SAFETY INFORMATION

please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri.

WARNING


- Product is heavy and should be assembled near its desired location.
- It is recommended that two people move the finished Product to prevent injury.


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents adove. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 60 minutes


Tools Required for Assembly: Allen Wrench (included), Phillips Screwdriver (not included)

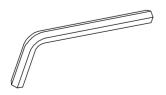

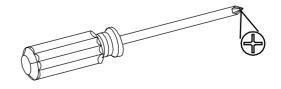

1.Insert cam locks(C) into predrilled holes on side panel (2L). Screw cam bolt(A) into predrilled holes on side front panel (3L). Attach side front panel (3L) to side panel (2L) by slipping wood dowel(B) & cam bolt(A) into corresponding predrilled holes until side front panel (3L) & side panel (2L) meet. Secure by rotating cam lock (C) counterclockwise with Phillips screwdriver. Repeat with side front panel (3R) & side panel (2R)


Hardware Used

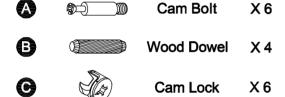


2.Insert cross socket nut (H) into predrilled holes on assembled unit in the step 1.Attach base (7) to assembled unit in the step 1 by slipping wood dowel(B) into corresponding predrilled holes until base (7) & assembled unit in the step 1 meet.Use allen wrench (G) & hexagon socket bolt (D) & spring washer (E) & flat washer (F) connect base(7) & assembled unit in the step 1 together.

Hardware Used



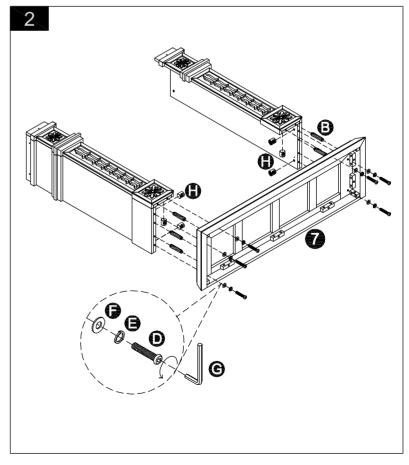

3.Insert cam locks(C) into predrilled holes on lower block fire panel(5). Screw cam bolt(A) into predrilled holes on side block fire panel (6L&R). Attach side block fire panel (6L&R) to lower block fire panel(5) by cam bolt(A) into corresponding predrilled holes until sidde block fire panel (6L&R) & lower block fire panel(5)meet.Secure by rotating cam lock (C) counterclockwise with Phillips screwdriver.

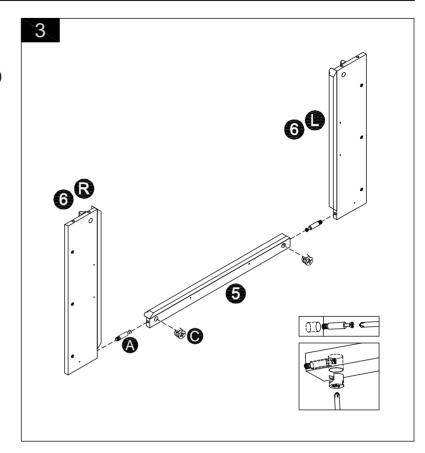



Hardware Used




4.Insert cam locks(C) into predrilled holes on side block fire panels(6L&R). Screw cam bolt(A) into predrilled holes on upper block fire panel(4). Attach upper block fire panel(4) to assembled unit in the step 3 by slipping wood dowel(B) &cam bolt(A) into corresponding predrilled holes until upper block fire panel(4) & assembled unit in the step 3 meet. Secure by rotating cam lock (C) counterclockwise with Phillips screwdriver.

Hardware Used

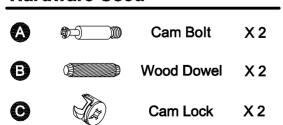

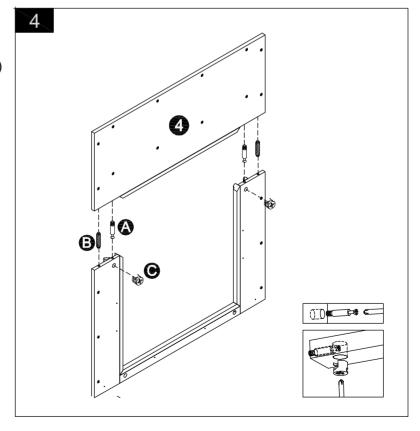

5.Insert wood dowel(B) into predrilled holes on base(7).Insert assembled unit in the step 4 into assembled unit in the step 2.

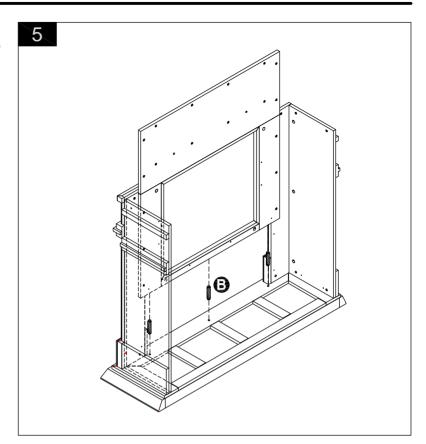


Hardware Used





Wood Dowel X3

6.Inserting flat head screw (I) into predrilled holes and tightening with Phillips screwdriver(not included),as shown in the step 6.

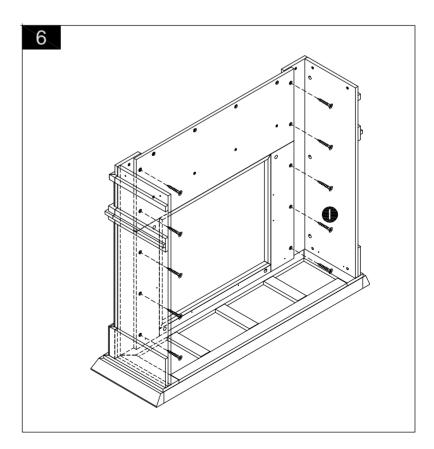


Hardware Used





Flat Head Screw X


7.IAttached top panel(1) by inserting flat head screw (I) into predrilled holes and tightening with Phillips screwdriver(not included).

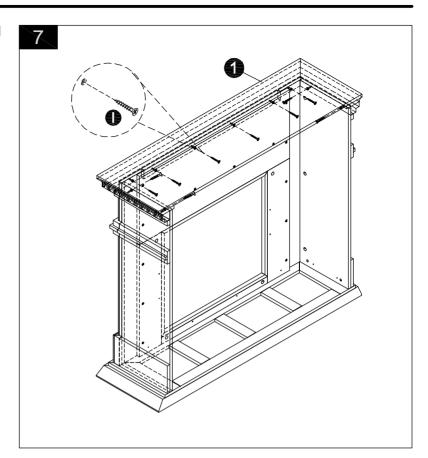

Hardware Used

Flat Head Screw X10

8.Insert inside frame(8) into assembled unit in the step 7.Inserting flat head screw (I) into predrilled holes and tightening with Phillips screwdriver(not included)

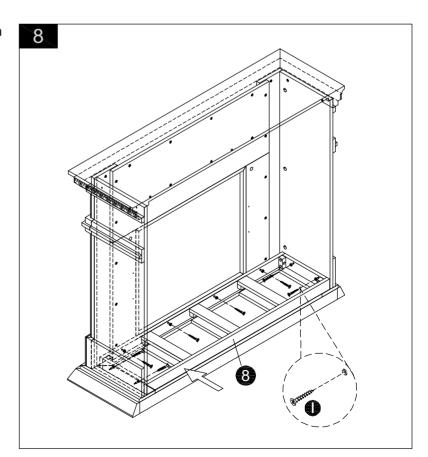


Hardware Used



Flat Head Screw

X 8

9.Insert firebox(10) to the related place of assembled unit.Attached wood holder (9) by inserting flat head screw(I) into corresponding predrilled holes and tightening with Phillips screwdriver(not included).

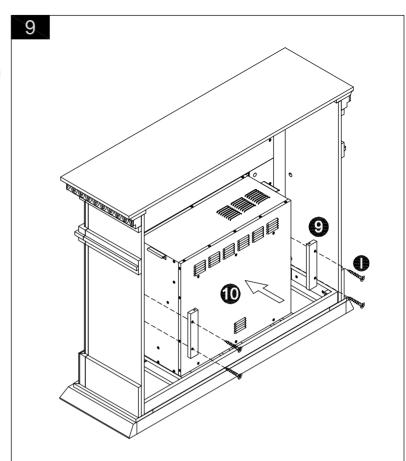


Hardware Used



Flat Head Screw

X4

10. Now your new fireplace is ready to use.

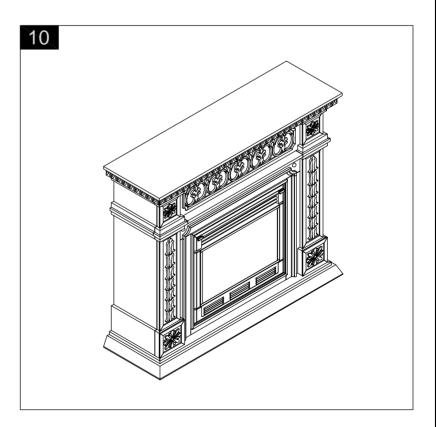

	raits Ne	epiacement i om	
Customer Information			
Name -			
Address			
City/State/Zip Code —			
Phone Number —			
Please indicate where yo	ou purchased this item: Store/We	ebsite/Catalog	
Please indicate color/siz	e/style number:		
Style No	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096

service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019