FA933800TX-


Hadley Media Fireplace -

Walnut/Espresso

Assembly Instructions




For assistance with assembly, contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com

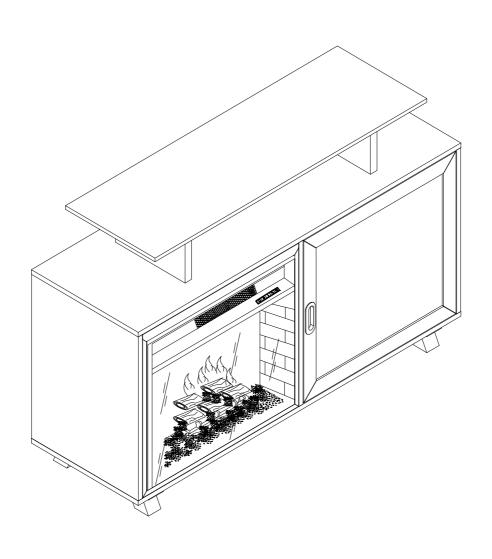


Hadley Media Fireplace Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.


Α		Quantity	В		Quantity
		of 16			of 32
Cam Bolt			Wood Dowel		(⊄8 x 30mm)
С		Quantity of 16	D		Quantity of 8
		01 10			01 0
				Millian	
Cam Lock			Short Bolt		
E		Quantity	F		Quantity
		of 4			of 12
Long Bolt	5		Lock Washer		
G Bon		Quantity	H		Quantity
		of 12			of 1
				\bigcup	
Flat Washe	r		Allen Wrench		
I		Quantity	J		Quantity
		of 16			of 4
Screw		(3 x 14mm)	Shelf Pin		
K		Quantity	L		Quantity
		of 2	-	Alma	of 12
				. Oy	
Hinge			Screw		(3.5 x 1/2")
M		Quantity	N	-57	Quantity
		of 1			Of 4
Firebox		(in congrete cortex)	Screw		(⊄8 x 1")
I HEDOX		(in separate carton)	OCIEW		(× 0 × 1)

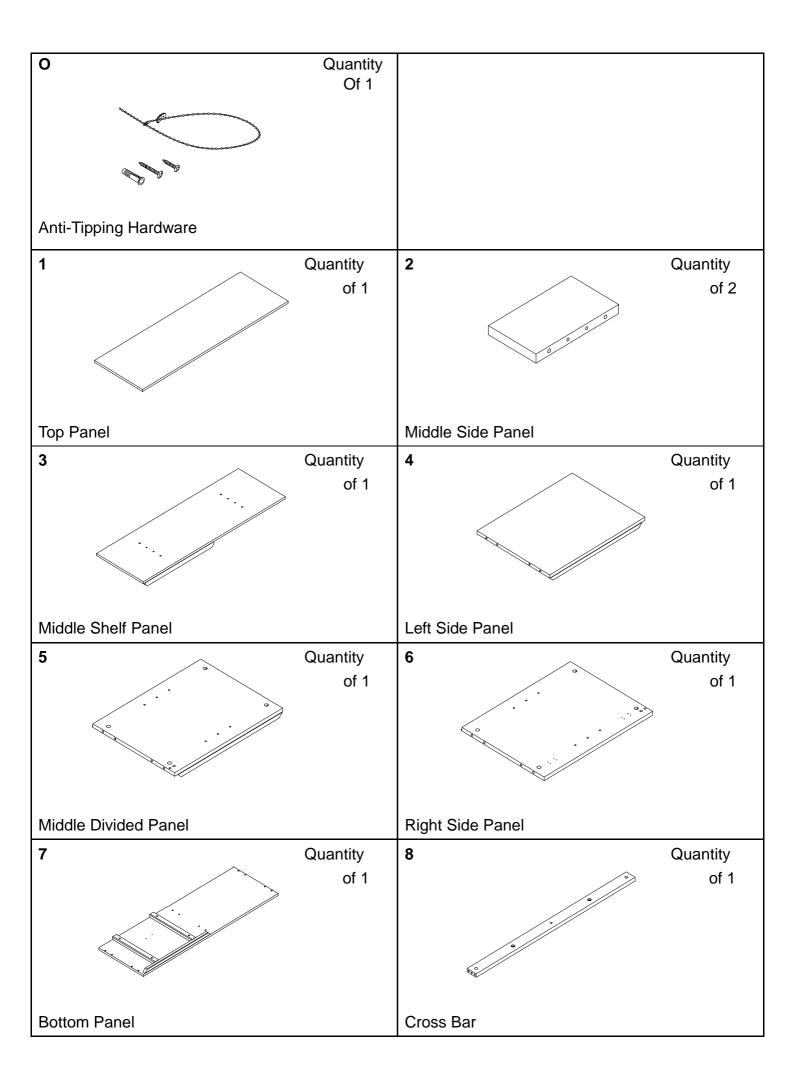

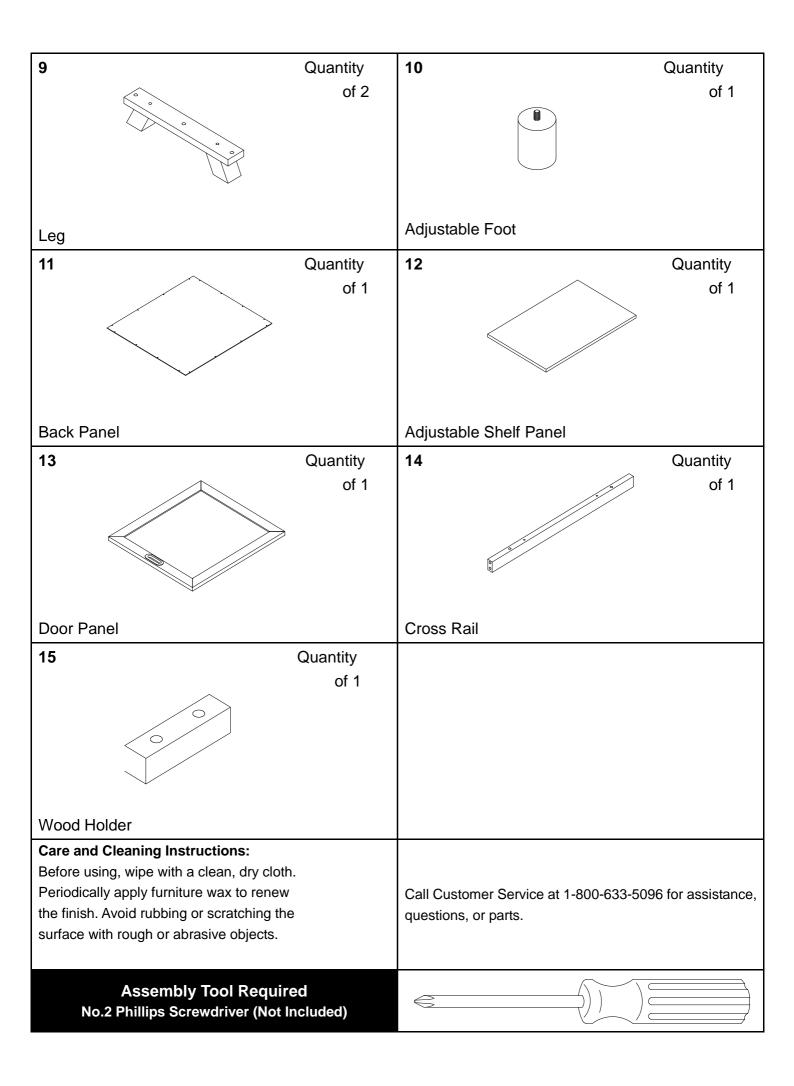

Hadley Media Fireplace

Assembly Instructions

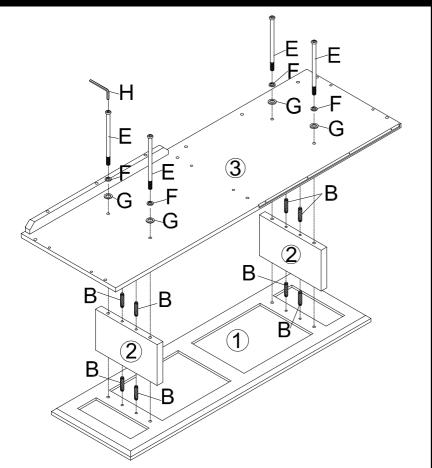


Insert 8pcs wood dowels (B) into holes on middle side panels (2).

Slip one end of middle side panels (2) into holes on bottom panel(1). Then, attach middle shelf panel (3) to middle side panels (2) as shown.

Use 4pcs long bolts (E) through lock washers (F) and flat washers (G) to connect middle shelf panel (3) and middle side panels (2) to top panel (1).

Tighten long bolts with Allen wrench (H).

Figure 1

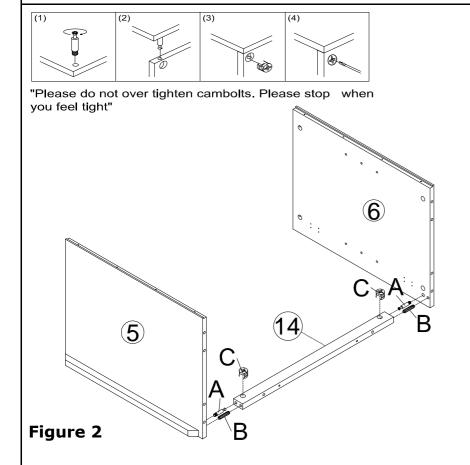


Insert 2pcs cam locks (C) into holes on cross rail (14).

Screw 2pcs cam bolts (A) into holes on middle divided panel (5) and right side panel (6). Attach middle divided panel (5) and right side panel (6) to cross rail (14) by inserting wood dowels (B) and cam bolts (A) into corresponding holes until cross rail (14), middle divided panel (5) and right side panel (6) meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Hadley Media Fireplace Assembly Instructions

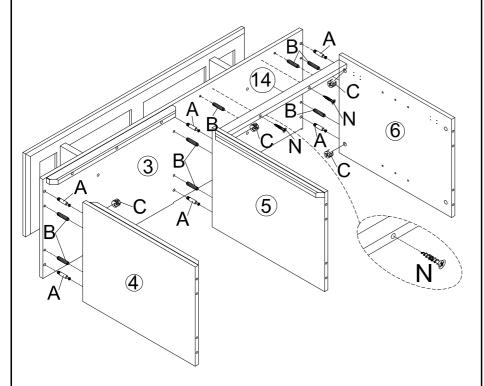

Insert 6pcs cam locks (C) into holes on assembled unit from figure 2 and left side panel (4).

Screw 6pcs cam bolts (A) into holes on assembled unit from figure 1.


Attach assembled unit from figure 2 and left side panel (4) to assembled unit from figure 1 by inserting wood dowels (B) and cam bolts (A) into corresponding holes until assembled unit from figure 2, left side panel (4), and assembled unit from figure 1 meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Use 2pcs screws (N) to connect cross rail (14) to middle shelf panel (3).

Tighten screws (N) with Phillips screwdriver.

Figure 3

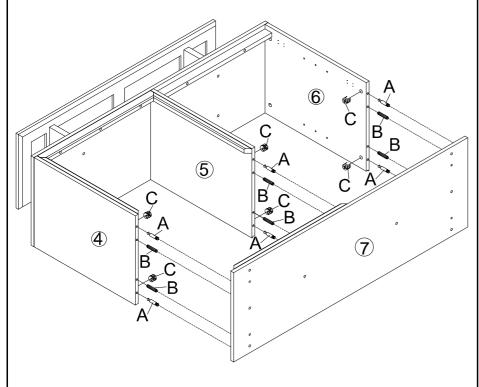

Insert 6pcs cam locks (C) into holes on assembled unit.


Screw 6pcs cam bolts (A) into holes on bottom panel (7).

Attach bottom panel (7) to assembled unit by inserting wood dowels (B) and cam bolts (A) into corresponding holes until bottom panel (7) and assembled unit from figure 3 meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Figure 4

Hadley Media Fireplace Assembly Instructions

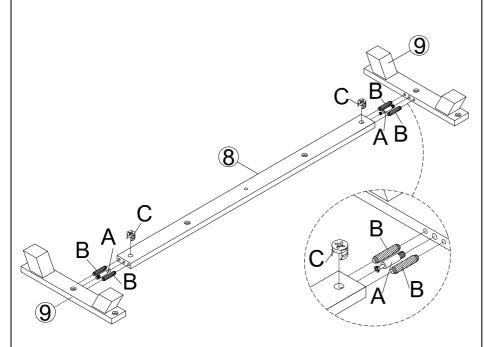


Insert 2pcs cam locks (C) into holes on cross bar (8).

Screw 2pcs cam bolts (A) into holes on legs (9).

Attach legs (9) to cross bar (8) by inserting 4pcs wood dowels (B) and 2pcs cam bolts (A) into corresponding holes until cross bar (8) and legs (9) meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

Figure 5

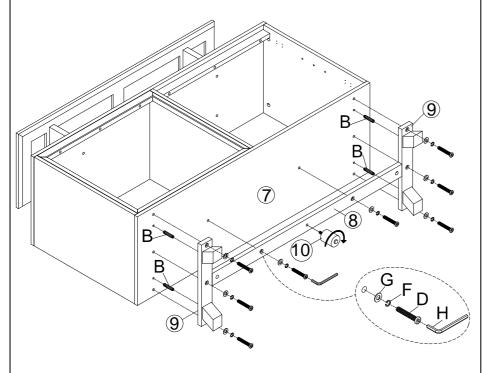

Attach unit from figure 5 to assembled unit by inserting 4pcs wood dowels (B) into corresponding holes until units meet.


Use bolts (D) through lock washers (F) and flat washers (G) to connect units together.

Tighten by rotating bolts (D) clockwise with Allen wrench (H).

Screw adjustable foot (10) into assembled unit and tighten it by hand.

Figure 6


Hadley Media Fireplace Assembly Instructions

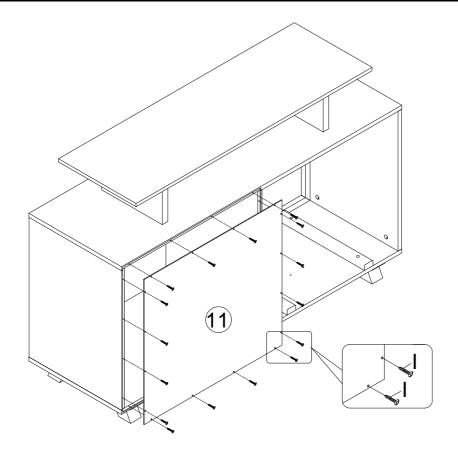

Use screws (I) to connect back panel (11) to the back of the unit as shown.

Tighten by rotating screws (I) clock wise with Phillips screwdriver.

Figure 7

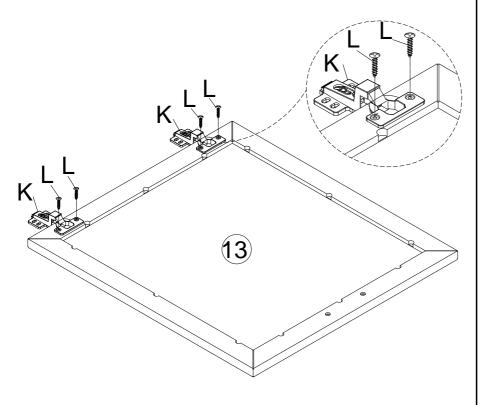


Use screws (L) to connect hinges (K) to door panel (13).

Tighten by rotating screws (L) clockwise with Phillips screwdriver.

Figure 8

Hadley Media Fireplace

Assembly Instructions

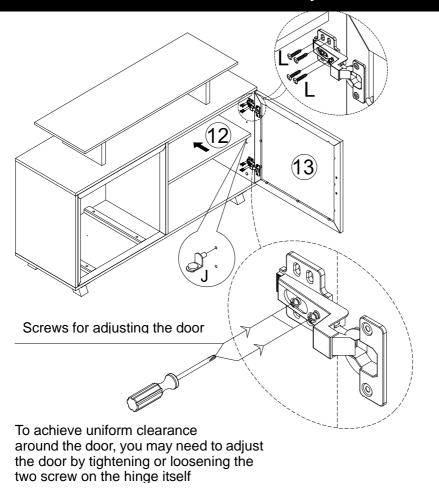


Use screws (L) to connect door panel (13) to the right side of the unit as shown.

Tighten by rotating screws (L) clockwise with phillips screwdriver.

Insert shelf pins (J) into holes on the unit keeping all shelf pins parallel to each other. Then, place adjustable shelf panel (12) onto shelf pins (J) as shown.


Figure 9

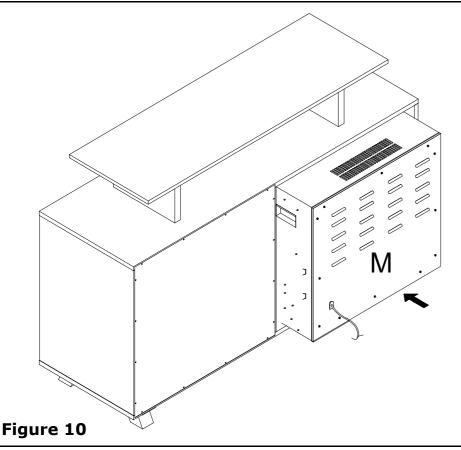

Place firebox (M) into the back of the unit as shown.

HADLEY MEDIA FIREPLACE

Assembly Instructions

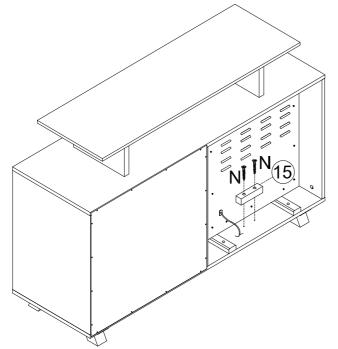

Use screws (N) to connect wood holder (15) to bottom panel.

Tighten screws (N) with Phillips screwdriver.

Figure 11

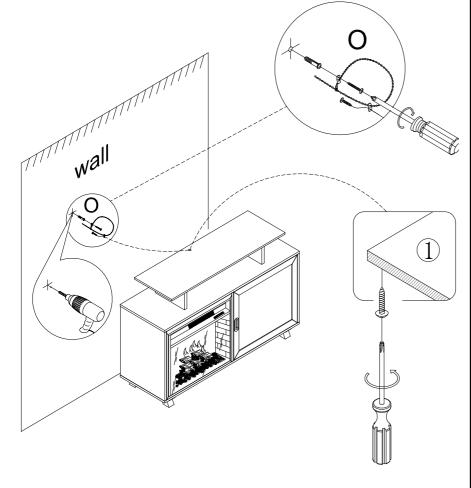


Figure 12

Use short screw to connect brackets to the underside of the top panel (1) as shown. Tighten screws with phillips screwdriver.

Drill 1/4 inch pilot holes in near proximity of the brackets attached to the top panel, then, tap the plastic anchors into wall.

Use long screws to connect brackets to plastic anchors of on wall. Tighten screws with phillips Screwdriver.

Move this item close to the fastened wall brackets and tie in both brackets with plastic straps as shown in diagram.

Now your Hadley media fireplace is ready to use.

Warning: Anti-tipping hardware must be used for this product to avoid tipping and injury.

Parts Replacement Form							
Customer Information							
Name							
Address							
City/State/Zip Code							
Phone Number							
Please indicate where yo	ou purchased this item: Store	e/Website/Catalog					
Please indicate color/size/style number:							
Style No Pa	arts Letter	Parts Description	Quantity Needed				

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise. Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019



The top shelf is intended for a flat screen television with a maximum overall width of 40" and supports up to 85 lb.

Open center shelf should not be loaded with more than 30 lb.

Each Enclosed side shelf should not be loaded with more than 20 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury. This unit contains a permanent warning sticker located on back panel.

Model: FA933800TX

Hadley Media Fireplace

Southern Enterprises, Inc

600 Freeport Parkway, Suite 200

Coppell, Texas, 75019