

ITEM #0345627

INVERTED PENDANT

MODEL #LWS0333D

Français p.10


Español p. 19

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

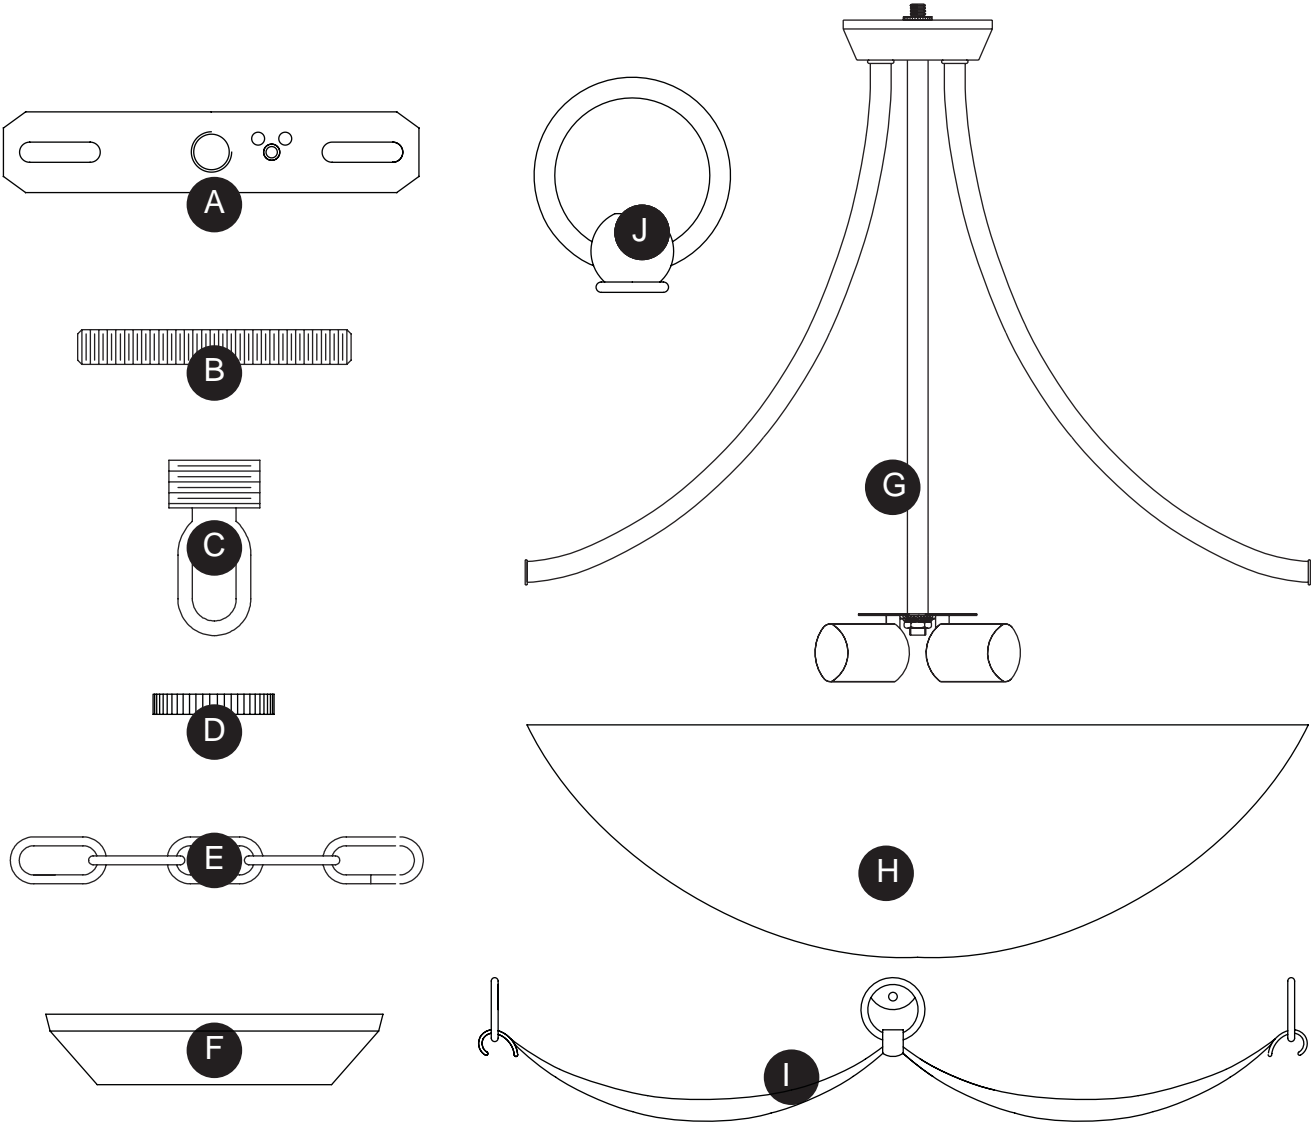

PART	DESCRIPTION	QUANTITY
A	Crossbar	1
B	Nipple	1
C	Canopy Chain Loop	1
D	Canopy Lock Ring	1
E	Fixture Chain	1
F	Ceiling Canopy	1
G	Fixture Assembly	1
H	Shade	1
I	Shade Holder	1
J	Fixture Loop	1

HARDWARE CONTENTS (shown actual size)

 AA




Green Ground
Screw

[preassembled
to Crossbar (A)]

Qty. 1

 BB



Wire
Connector

Qty. 3

CC



Outlet
Box
Screw

Qty. 2

DD



Lock
Washer

Qty. 2


EE



Hex Nut

Qty. 2

 FF



Lock
Screw

Qty. 4

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- RISK OF FIRE - Use bulbs specified by the markings and/or labels on the fixture.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Turn off electricity to fixture before replacing the bulb(s).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 30 - 45 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Wire cutters, Electrical tape, Safety goggles and Ladder.


Helpful Tools (not included): Wire strippers

ASSEMBLY INSTRUCTIONS


1. Unfold support arms on fixture assembly (G) to proper locations.

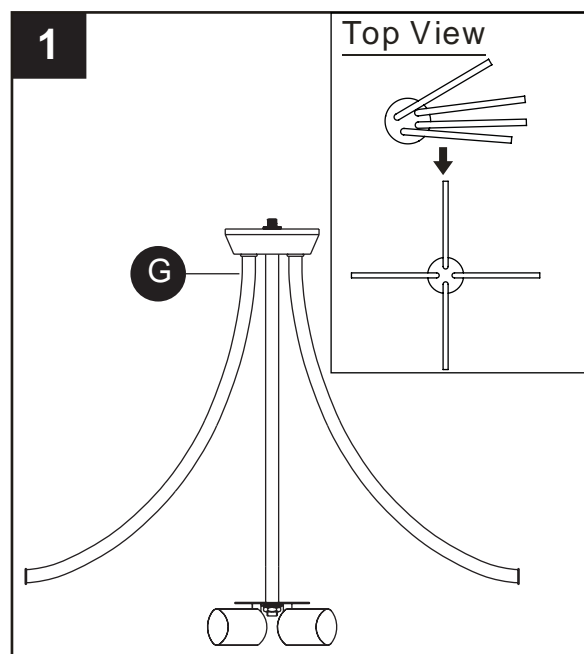

2. Thread the fixture loop (J) onto the nipple on the top center of the fixture assembly (G). Hand tighten until snug.

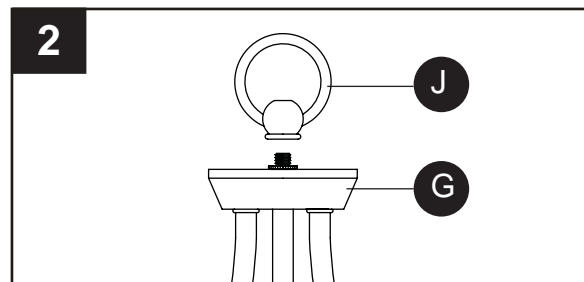


3. Secure the crossbar (A) to the outlet box (not included) with outlet box screws (CC). Tighten until snug.

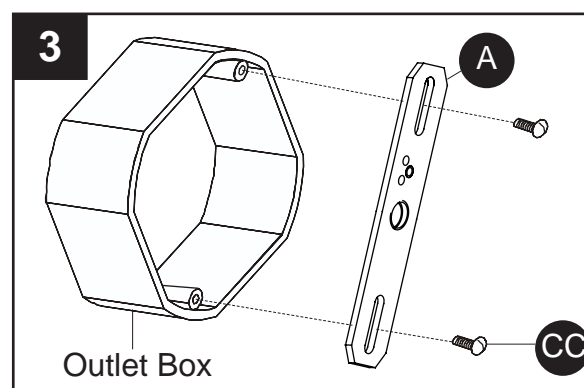

Hardware Used



 Outlet
Box
Screw

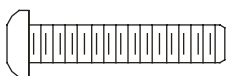




x 2

ASSEMBLY INSTRUCTIONS

4. Thread one hex nut (EE) onto top end of the nipple (B). Place one lock washer (DD) over the top end of the nipple (B) and then thread the nipple (B) into the center lock hole of the crossbar (A). Using pliers (not included), thread the hex nut (EE) against the crossbar (A) and hand tighten until snug.


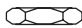 
Hardware Used


DD	Lock Washer		x 1
EE	Hex Nut		x 1

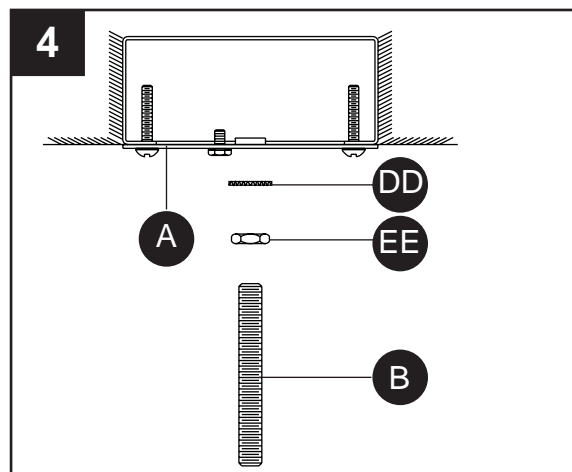


5. Thread another hex nut (EE) onto the end of the nipple (B). Place the lock washer (DD) over the end of the nipple (B) and then thread the canopy chain loop (C) onto the end of the nipple (B). Using pliers, thread the hex nut (EE) against the canopy chain loop (C) and hand tighten until snug.

Hardware Used

DD	Lock Washer		x 1
EE	Hex Nut		x 1

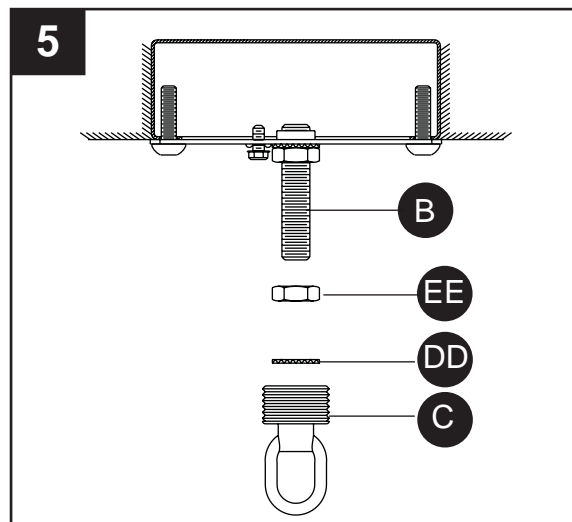


6. Push the ceiling canopy (F) upward over the outlet box. Thread the canopy lock ring (D) onto the canopy chain loop (C) and tighten until snug to secure the ceiling canopy (F).

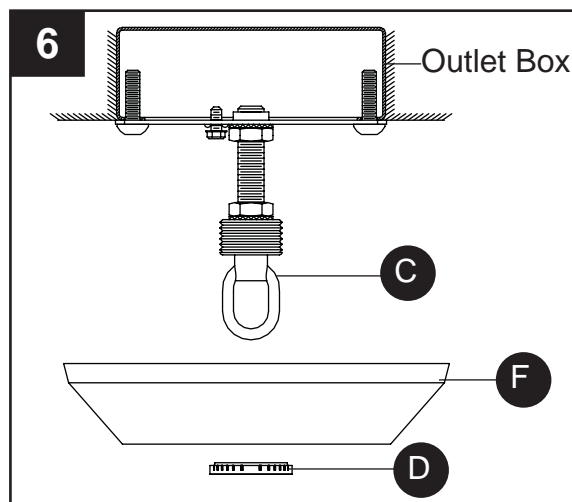


ASSEMBLY INSTRUCTIONS

7. Adjust the fixture chain (E) to the desired length, removing links if needed. Attach one end of the fixture chain (E) onto the canopy chain loop (C) and then attach the other end of the fixture chain (F) onto the fixture loop (J) on the top of the fixture.


Note: You may need to use pliers to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.

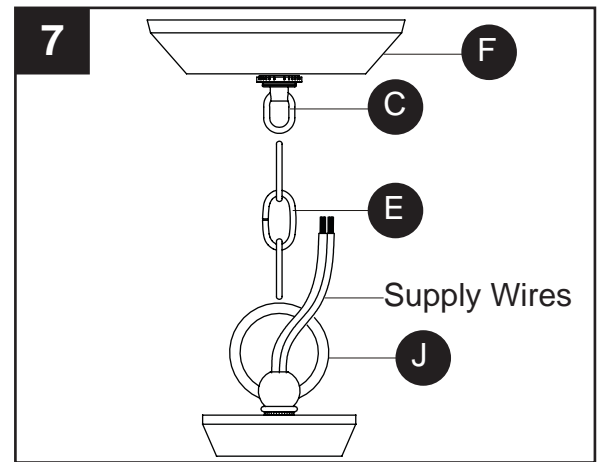

8. Pull the supply wires up through the fixture chain (F) alternating links. Push the wires up through the canopy chain loop (C) into the outlet box.

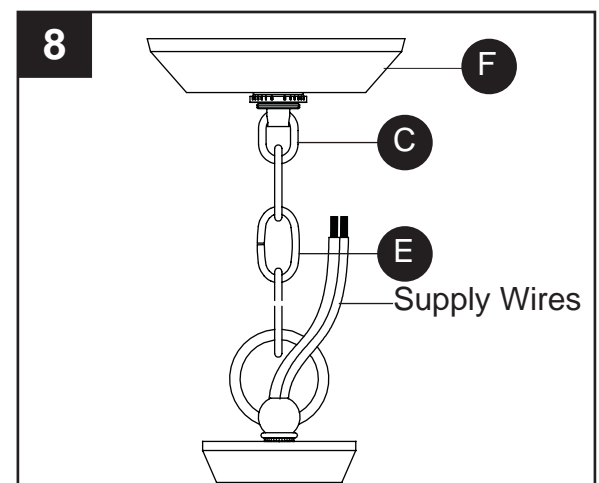


9. Unthread the canopy lock ring (D) and slide canopy lock ring (D) and ceiling canopy (F) down the fixture chain (E). Push all slack fixture wire through canopy chain loop (C) into outlet box. Trim excess fixture wire, leaving a minimum of 6 in. hanging out of the outlet box. Refer to the next step to connect the wires. Then re-attach the ceiling canopy (F) as shown in step 6.

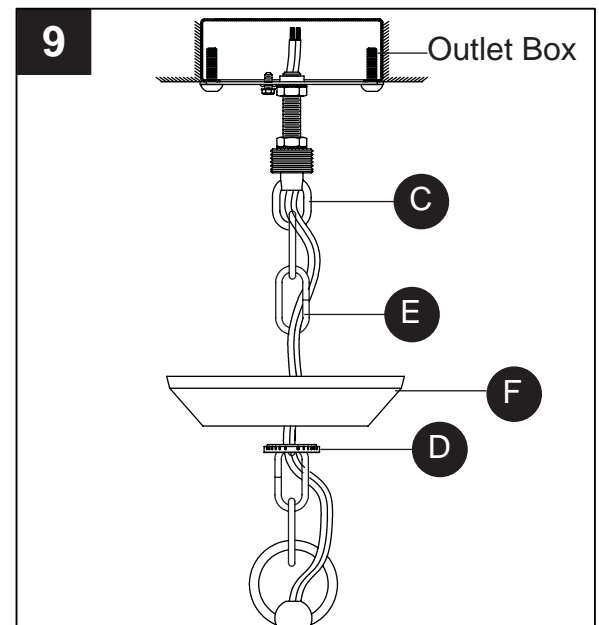



ASSEMBLY INSTRUCTIONS

10. Attach ground fixture wire to either the green ground screw (AA) on crossbar (A) or to the ground wire in the outlet box (usually GREEN or BARE). If attaching fixture ground wire to the crossbar, it is imperative that the outlet box in your home be properly grounded. Connect the neutral WHITE or RIBBED side fixture wire to the neutral usually WHITE wire from the outlet box. Connect the hot BLACK or SMOOTH side fixture wire to the hot usually BLACK wire from the outlet box. Fasten wires together with a plastic wire connector (BB) and tightly wrap connector with electrical tape (not included).

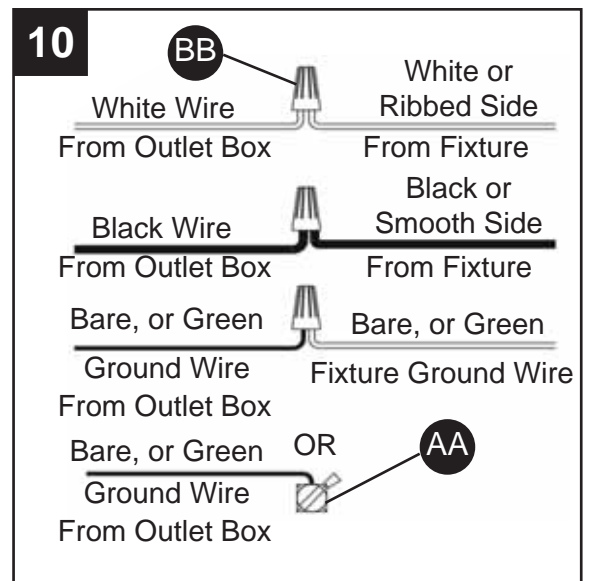

Hardware Used

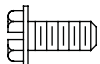
AA Green Ground Screw  x 1

BB Wire Connector  x 3

11. Place shade (H) inside shade holder (I). Lift the shade holder (I) with shade (H) upward and align rings of the shade holder (I) with the ends of the side arms of the socket cluster assembly (G). Pass lock screws (FF) through ring of the shade holder (I) and thread into side arm of the socket cluster assembly (G). Tighten until snug. **WARNING:** Two people are recommended for this.


Hardware Used

FF Lock Screw  x 4

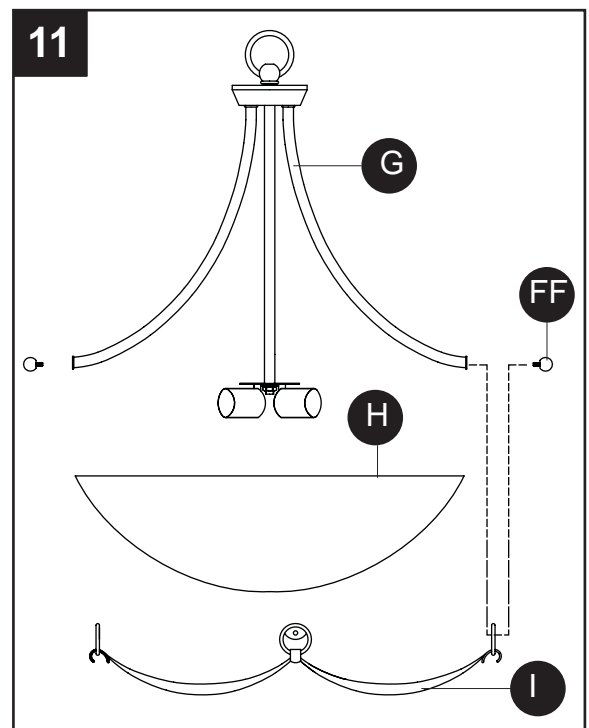

ASSEMBLY INSTRUCTIONS

12. Install the bulbs (not included). Use three 100-watt max. standard-base bulbs only. Or use (3) 14-watt max. CFL spring self-ballasted standard-base bulbs.

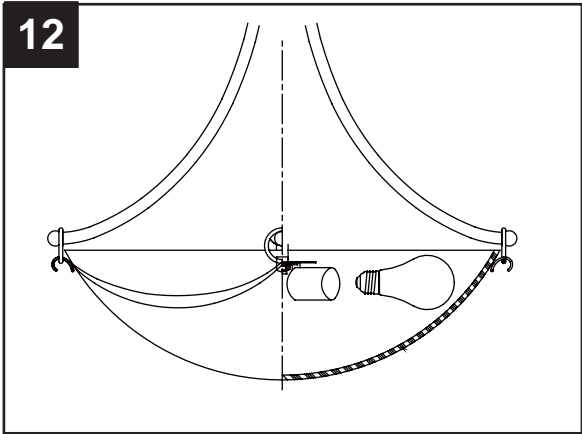

CARE AND MAINTENANCE

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs will not light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows or the circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connection.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights. You may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	NUMBER
A	Crossbar	9431KIT
B	Nipple	
C	Canopy Chain Loop	
D	Canopy Lock Ring	
F	Ceiling Canopy	
AA	Green Ground Screw	
BB	Wire Connector	
CC	Outlet Box Screw	
DD	Lock Washer	
EE	Hex Nut	
E	Fixture Chain	M674CHIB
H	Shade	G2794SH
G	Fixture Assembly	10333DLWS
I	Shade Holder	
J	Fixture Loop	
FF	Lock Screw	

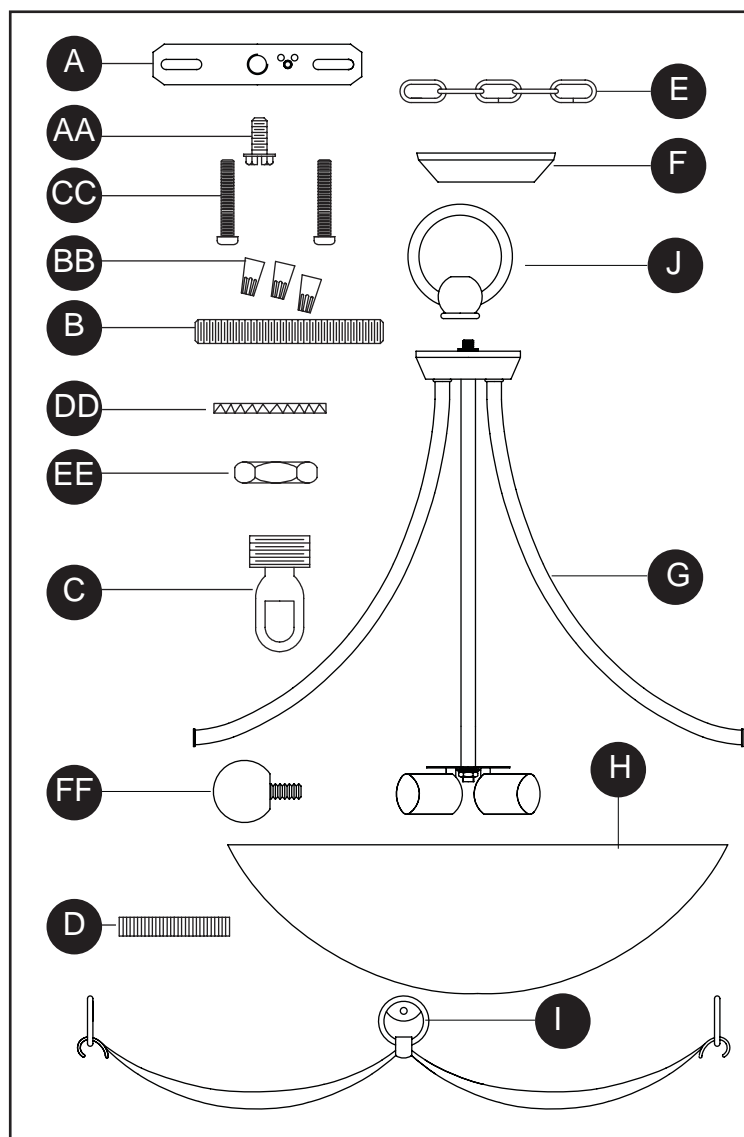

Printed in China

allen + roth® is a registered trademark
of LF, LLC. All Rights Reserved.

Lowes.com/allenandroth **allen + roth**