

ITEM #0640615

FLUSHMOUNT CEILING FIXTURE


MODEL #LWS0944H3

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

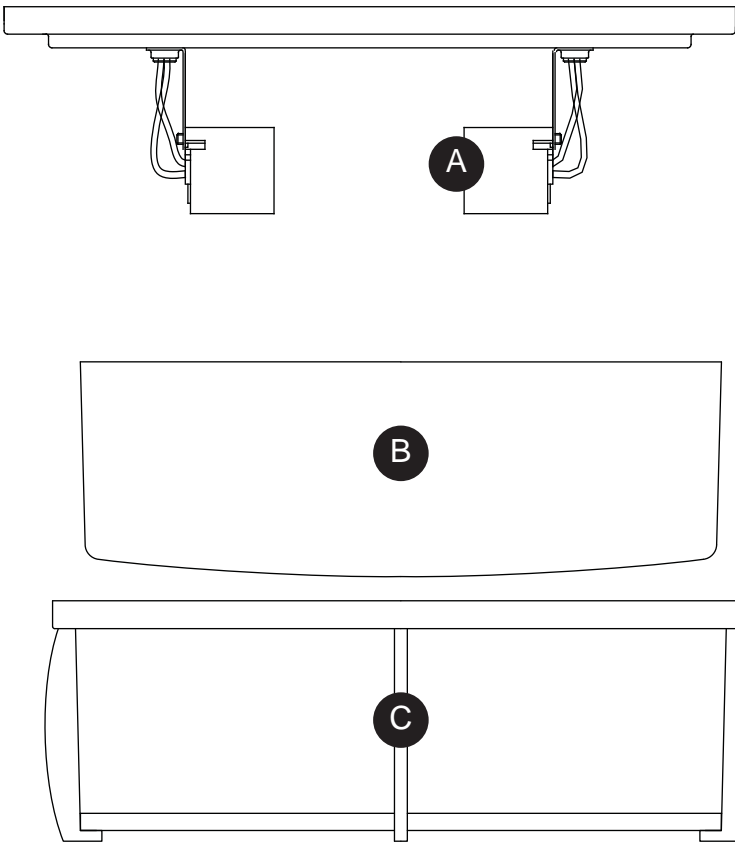

PART	DESCRIPTION	QUANTITY
A	Ceiling Canopy	1
B	Shade	1
C	Cage	1

HARDWARE CONTENTS (shown actual size)

 AA



Wire
Connector

Qty. 3


BB



Outlet
Box
Screw

Qty. 2

CC

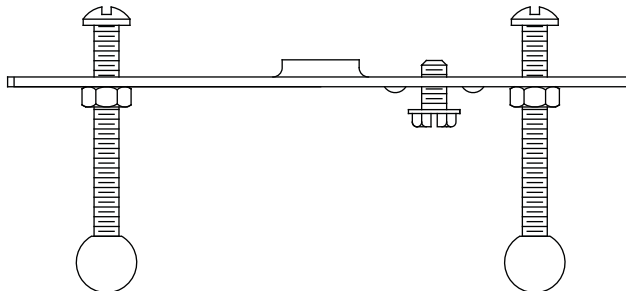

Crossbar Assembly

Qty. 1



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- **RISK OF ELECTRIC SHOCK** - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- **RISK OF FIRE** - Use bulbs specified by the markings and/or labels on the fixture.
- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Turn off electricity to fixture before replacing the bulb(s).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 - 45 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Wire cutters, Electrical tape, Safety goggles and Ladder.

Helpful Tools (not included): Wire strippers


ASSEMBLY INSTRUCTIONS

1. Secure the crossbar assembly (CC) to the outlet box (not included) with outlet box screws (BB).

Note: The preassembled screws on the crossbar assembly (CC) should protrude away from the outlet box.



Hardware Used

BB Outlet Box Screw  x 2

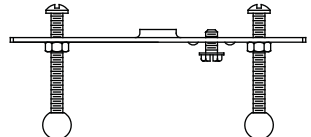CC Crossbar Assembly  x 1

2. Remove the preassembled lock balls from crossbar assembly (CC). Temporarily attach the ceiling canopy (A) to the preassembled screws on the crossbar assembly (CC), securing with lock balls. If the ceiling canopy (A) is not snug against the ceiling, remove it from the crossbar assembly (CC) and adjust the length of the preassembled screws by unscrewing the preassembled hex nuts. Screw the screws in or out of the crossbar until the correct length is achieved, then re-attach the ceiling canopy (A).


Once the ceiling canopy (A) is secure, remove lock ball and ceiling canopy (A).

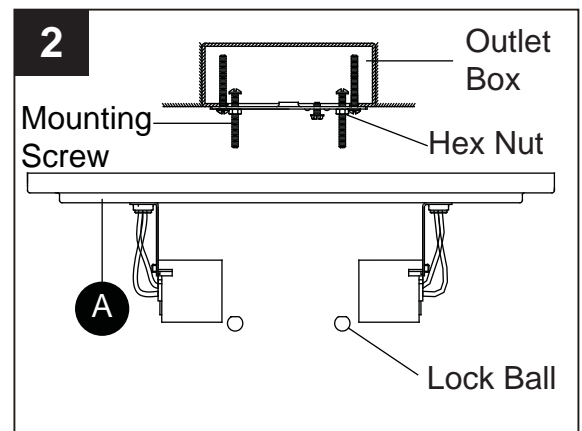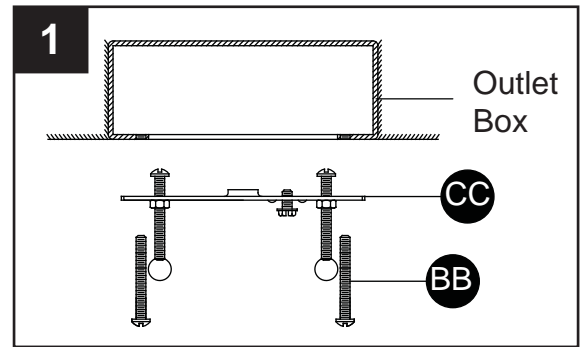

ASSEMBLY INSTRUCTIONS




3. Attach ground fixture wire to either the green ground screws preassembled on the crossbar assembly (CC) or to the ground wire in the outlet box (usually GREEN or BARE). If attaching fixture ground wire to the crossbar assembly (CC), it is imperative the outlet box in your home be properly grounded. Connect the neutral WHITE or RIBBED fixture wire to the neutral (usually WHITE) wire from the outlet box. Connect the hot BLACK or SMOOTH fixture wire to the hot (usually BLACK) wire from the outlet box. Fasten wires together with wire connectors (AA) and tightly wrap wire connectors (AA) with electrical tape (not included).

 Hardware Used

AA Wire Connector  x 3


4. Carefully tuck all wires into the outlet box. Position the ceiling canopy (A) over the outlet box and install as per step 2. Tighten lock balls until snug.

5. Install (2) 60-watt max. medium-base bulbs or (2) 13-watt max. medium-base spring self-ballasted CFLs (none included).

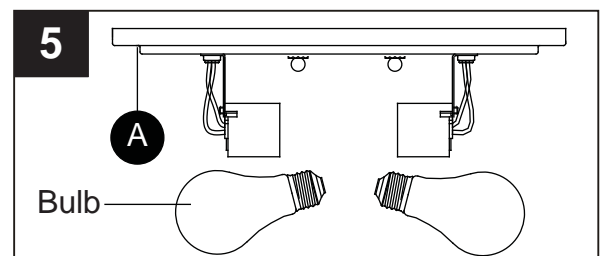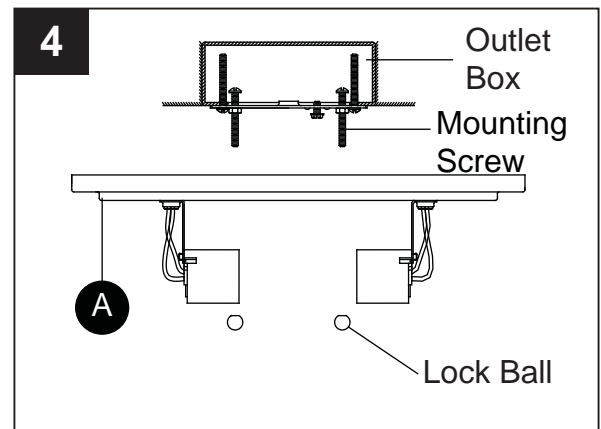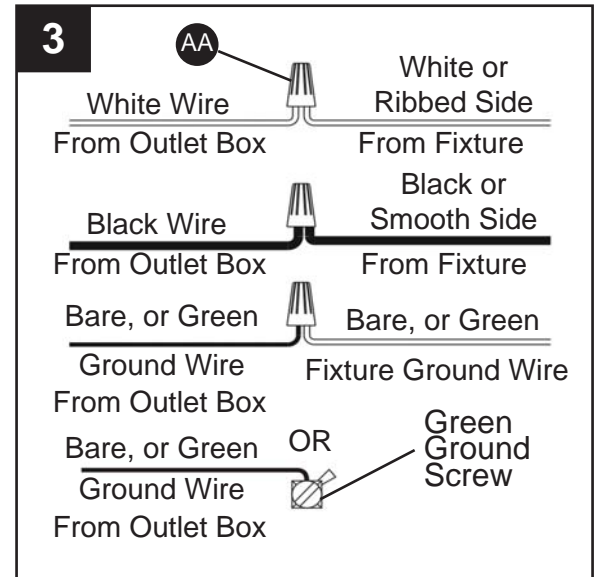

ASSEMBLY INSTRUCTIONS

6. Place the shade (B) inside the cage (C). Lift the assembly upward, placing the preassembled bolts in the cage (C) into the slots on each side of the ceiling canopy (A). Rotate the assembly until it is engaged in the slots.

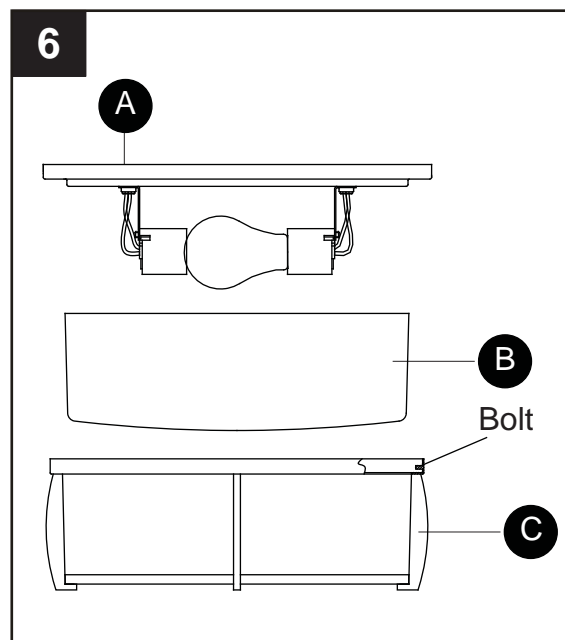

CARE AND MAINTENANCE

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs will not light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows or the circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connection.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights. You may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART#
AA	Wire Connector	9419KIT
BB	Outlet Box Screw	
CC	Crossbar Assembly	
A	Ceiling Canopy	10944H3LWS
C	Cage	
B	Shade	G2756SH

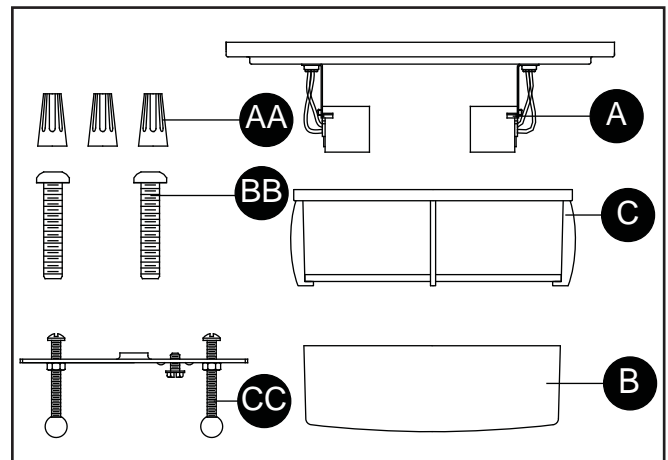

Printed in China

allen + roth® is a registered trademark
of LF, LLC. All Rights Reserved.

Lowes.com/allenandroth **allen + roth**