


MODEL # 625610

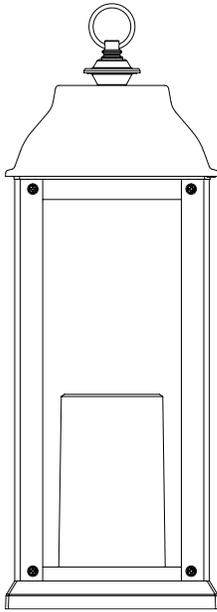

DECORATIVE SOLAR LANTERN

1. How your solar powered fixture works



During the day, the solar panel converts sunlight into electricity and recharges the battery. At night, the light turns on automatically using the electricity stored during that day.

The number of hours the light stays on depends on your geographical location, weather conditions and seasonal sunlight availability.

Place the solar light fixture in an area where it can receive direct sunlight for at least 8 hours each day. Shadowed locations will not allow the battery / batteries to charge fully and will reduce the hours of nighttime lighting. The selected location should not be near nighttime light sources, such as porch lights, street lights or pool lights, as these may cause the solar light to turn off prematurely.

2. First time use

- Slide the switch to the ON position to turn the candle on.
- The candle will turn on automatically at night.
- To turn the candle off at dusk, slide the switch to the OFF position.
- Place the top on the lantern by aligning the red dots located under the lantern top and on the lantern body. (1a)
- **Note:** The top will not be aligned with the base at this time. (1b)
- Secure the lantern top to the lantern body by turning it clockwise until the connectors click in place. (1c)
- For best operation keep solar panels clean by wiping with a soft cloth.

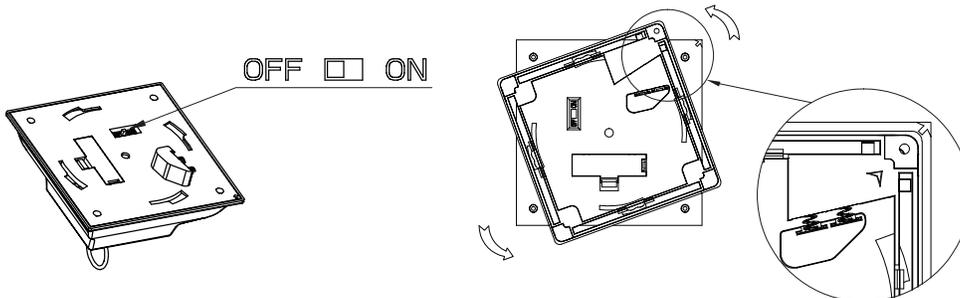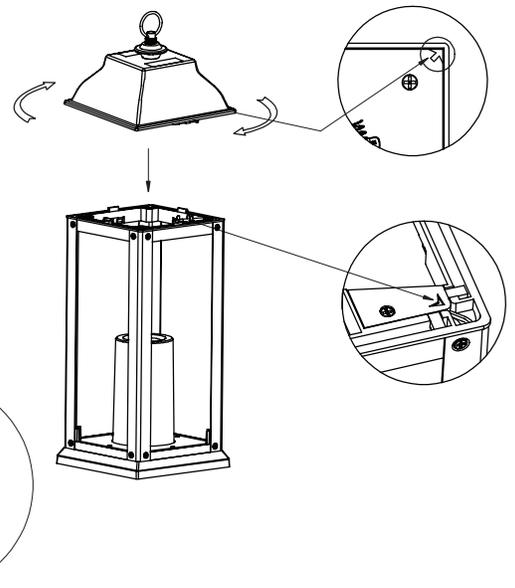

CUSTOMER SERVICE

1-888-867-6095 • customerservice@niinorthern.com


3. Battery replacement

NOTE: This operation should be done in the morning on a sunny day. This will allow the lantern to receive a full 8 hours of sunlight so that the rechargeable battery can reach maximum capacity.

- Remove the top of the lantern by turning it counterclockwise.
- Remove the battery cover by pushing in the release tab and pulling it upward.
- Remove the old battery and replace it with a new AA size 1.2V rechargeable battery of the same or greater mAh.
(USE RECHARGEABLE BATTERY ONLY).

Note: Using a soft cloth, clean the battery contacts and those of the device prior to battery installation.

- Be sure to insert the battery in the proper direction.
- Replace the battery cover.
- Refer to "First time use" for instructions on replacing the lantern top.

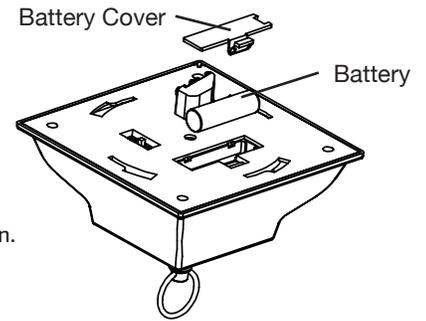

4. Troubleshooting

If the light does not turn on at dusk after 8 hours of charging:

- Ensure that the solar lantern is in a bright sunny location and not in a shady area during the day.
- Make sure that the light's photocell is not affected by other light sources at night.
- Make sure that the switch is on the ON position.
- Verify that the battery is making contact with the terminal and that it has been inserted in the correct polarity.

5. CAUTION

- Safe for outdoor operation.
- Failure to insert battery in the correct polarity, as indicated in the battery compartment, may shorten the life of the battery or cause battery to explode or leak.
- Do not mix old and new batteries. Replace all batteries of a set at the same time.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.
- Remove battery if consumed or if product is to be left unused for a long period.
- **REPLACEMENT PARTS MAY BE ORDERED BY USING THE FIXTURE MODEL NUMBER AND THE PART'S NAME.**

FOR USA ONLY

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the standards for a Class B digital device, pursuant to use Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FOR CANADA ONLY

ICES-003

This Class B apparatus complies with Canadian ICES-003.

The operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device may accept any interference received, including interference that may cause undesired operation.

ONE (1) YEAR LIMITED WARRANTY

This product is guaranteed to be free from defects in material and workmanship for one (1) year following the date of purchase (excluding the battery/batteries). Should a defect occur within the warranty period, please contact our customer service line at 1-888-867-6095 or at the following email address: customerservice@niinorthern.com. A proof of purchase (sales receipt) will be required. If we cannot replace the defective part you require, you can return your product to the original point of purchase for a full refund or a replacement product. The consumer is responsible for the removal of and reinstallation of the product. Damage to any parts as such by accident, misuse, or improper installation is NOT covered by this warranty. Our policy does not include liability for incidental or consequential damages. Some states or provinces do not allow the exclusion or limitation of consequential damages; therefore, the above exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from place to place.

CUSTOMER SERVICE

1-888-867-6095 • customerservice@niinorthern.com