

# AquaSource®

AquaSource® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0064684 0749774


0041136 0749720

## BATHROOM FAUCET

MODEL #67302-6001 67302W-6001

67302-6004 67302W-6004

Français / Español p. 9

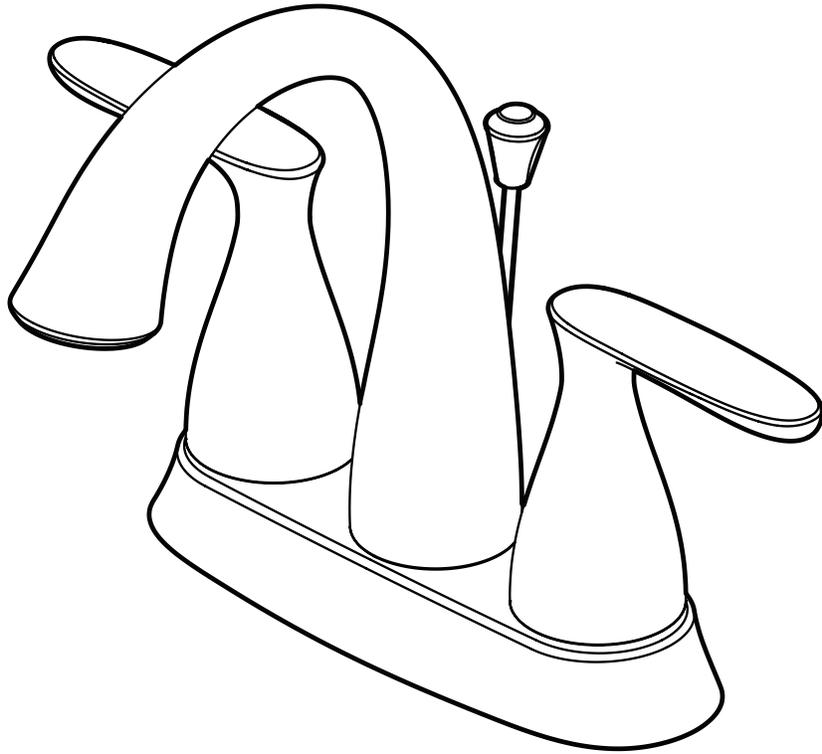

**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

AB15526

Lowes.com **AquaSource®**

## PACKAGE CONTENTS

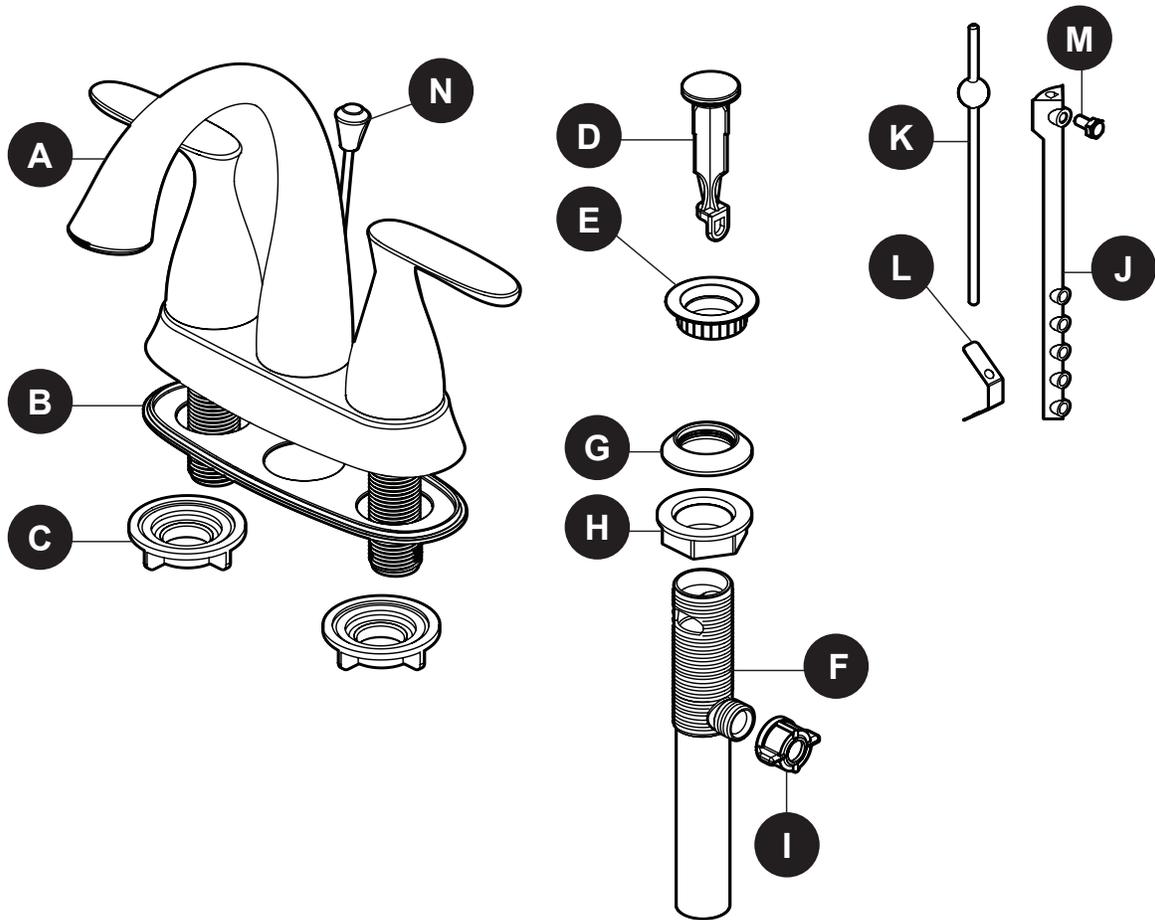

PART	DESCRIPTION	QUANTITY
A	Faucet	1
B	Base Plate (Preassembled to Faucet (A))	1
C	Mounting Nut (Preassembled to Faucet (A))	2
D	Stopper (Preassembled to Pop-up Body (F))	1
E	Flange (Preassembled to Pop-up Body (F))	1
F	Pop-up Body	1
G	Gasket (Preassembled to Pop-up Body (F))	1
H	Nut (Preassembled to Pop-up Body (F))	1
I	Pivot Nut (Preassembled to Pop-up Body (F))	1
J	Lift Rod Strap	1
K	Horizontal Rod (Preassembled to Lift Rod Strap (J))	1
L	Clip (Preassembled to Lift Rod Strap (J))	1
M	Screw (Preassembled to Lift Rod Strap (J))	1
N	Lift Rod	1



## SAFETY INFORMATION

---

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

### WARNING

- Follow the installation instructions carefully. Proper installation is the installer's responsibility.
- Failure to follow correct installation procedures can result in the faucet being loose, which can result in serious injury.

### CAUTION

- Check local building codes before you begin installation to ensure compliance.

## PREPARATION

---

Before beginning the assembly of this product, make sure all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


**Estimated Assembly Time:** 60 minutes (including removal of old faucet)

Tools Required for Assembly (not included): Adjustable Wrench, Phillips Screwdriver, Silicone Sealant, Allen Wrench

Helpful Tools (not included): Basin Wrench, Water Supply Lines

## ASSEMBLY INSTRUCTIONS

1. Shut off the water supply and remove the old faucet.

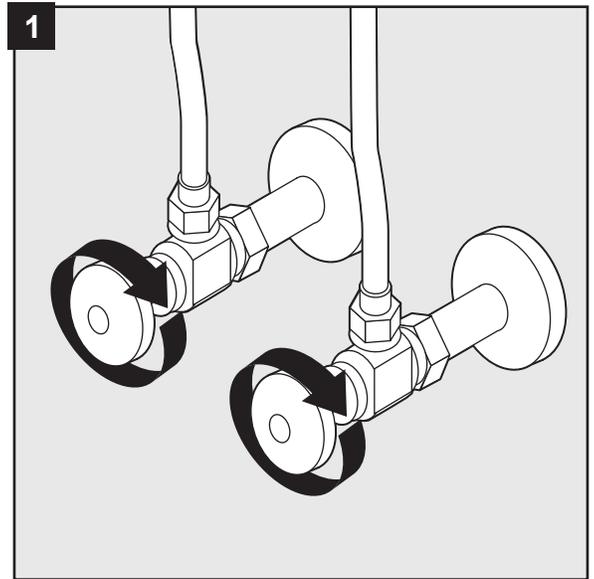


2. Install the faucet:
  - a. Remove the preassembled mounting nuts (C) from the faucet (A) and place the base plate (B) and the faucet (A) in position on the sink.

**Note:** If the sink surface is uneven, use silicone sealant (not included) to create a watertight seal.


- b. From under the sink, thread the mounting nuts (C) onto the faucet (A).
- c. Tighten the mounting nuts (C).

**Note:** Tighten mounting nuts until snug. Do not overtighten.

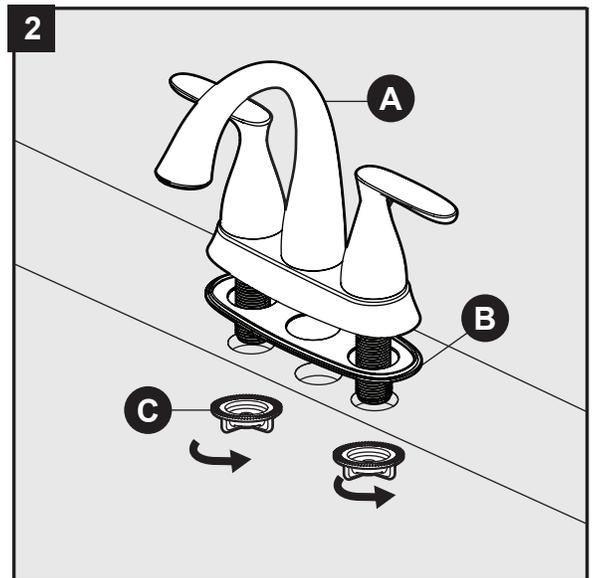


3. Connect a 1/2 in. IPS faucet connector or coupling nuts (not included) with 3/8 in. O.D. ball-nose risers (not included) to the water supplies underneath the sink using wrenches (not included).

**Note:** Refer to the local plumbing codes for permissible types of water supply connectors.

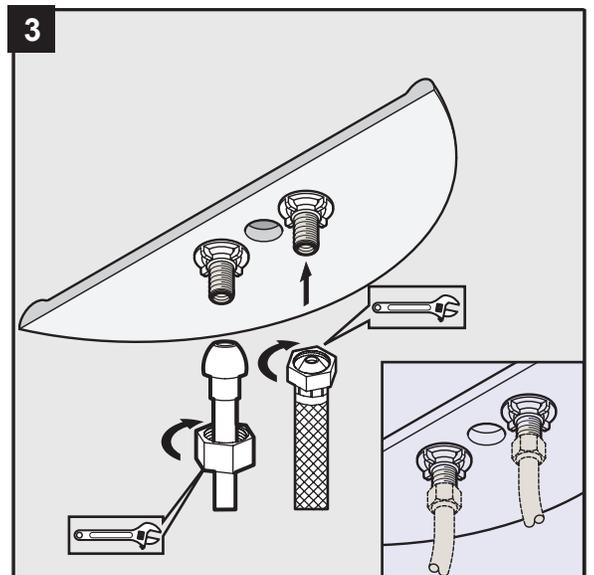


## ASSEMBLY INSTRUCTIONS


4. Remove the preassembled stopper (D) and flange (E) from the pop-up body (F). Screw the nut (H) all the way down the pop-up body (F). Push the gasket (G) down.

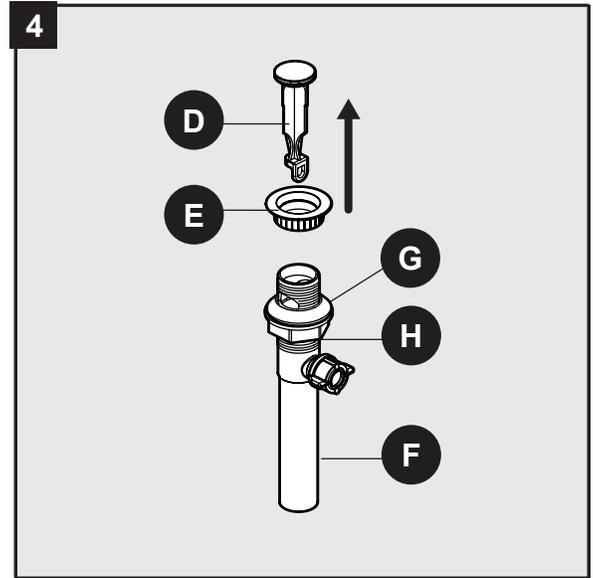

5. Apply silicone sealant to the underside of the flange (E).

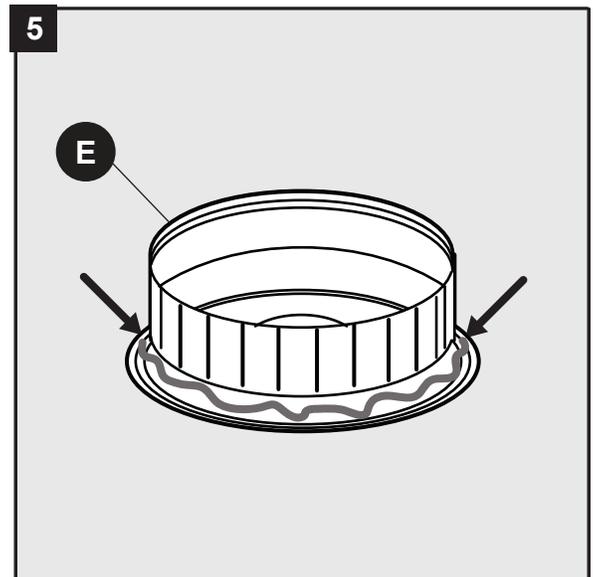


6. Insert pop-up body (F) into sink. Screw flange (E) onto top of pop-up body (F). Ensure the pivot hole is facing the back of the sink. Tighten the nut (H), and remove the pivot nut (I).

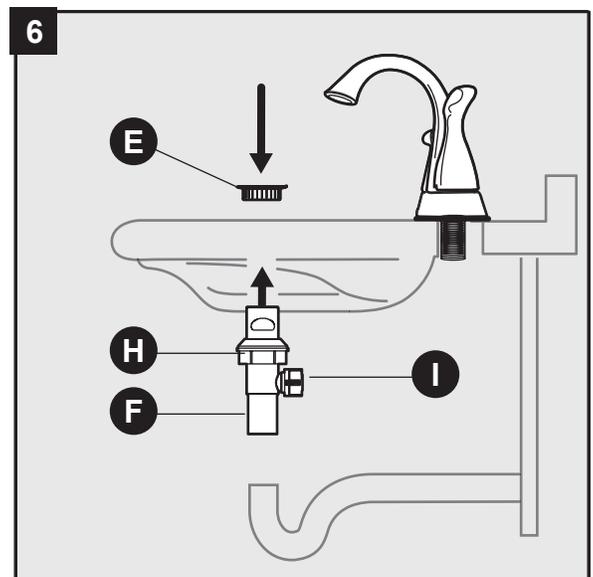


## ASSEMBLY INSTRUCTIONS


7. Insert the stopper (D) into the sink. Remove the preassembled horizontal rod (K) and clip (L) from lift rod strap (J). Install the horizontal rod (K) into pop-up body (F) and through the hole of the stopper (D). Install the pivot nut (I) onto horizontal rod (K) and hand tighten back onto pop-up body (F).

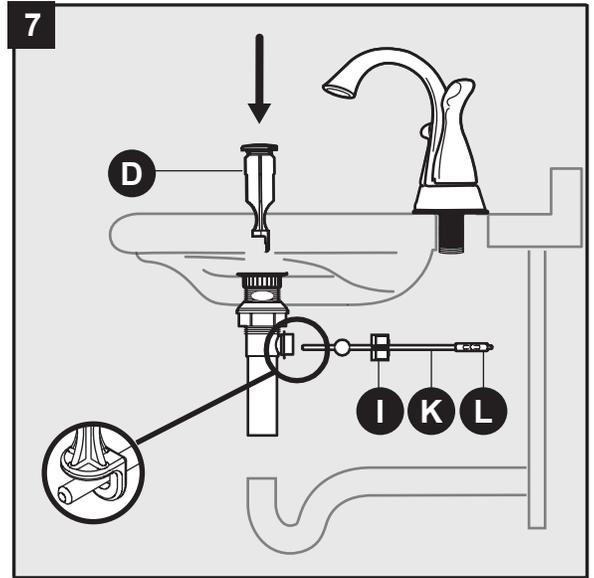

8. Re-attach the lift rod strap (J) to the horizontal rod (K) using the clip (L).

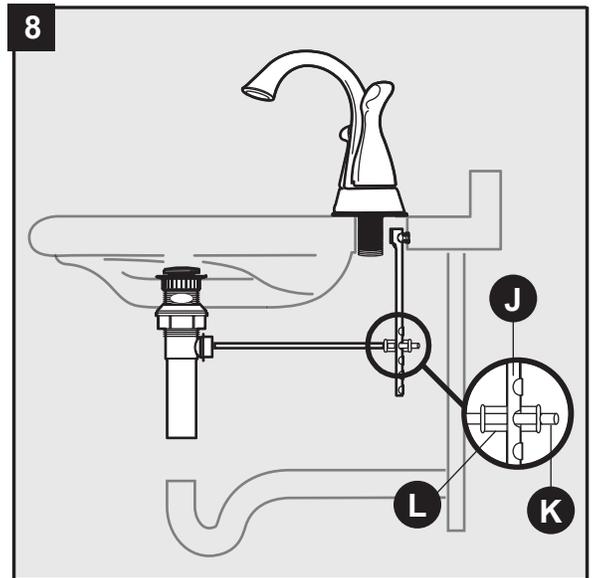


9. Insert the lift rod (N) through the faucet (A) and into the lift rod strap (J). Tighten the screw (M).

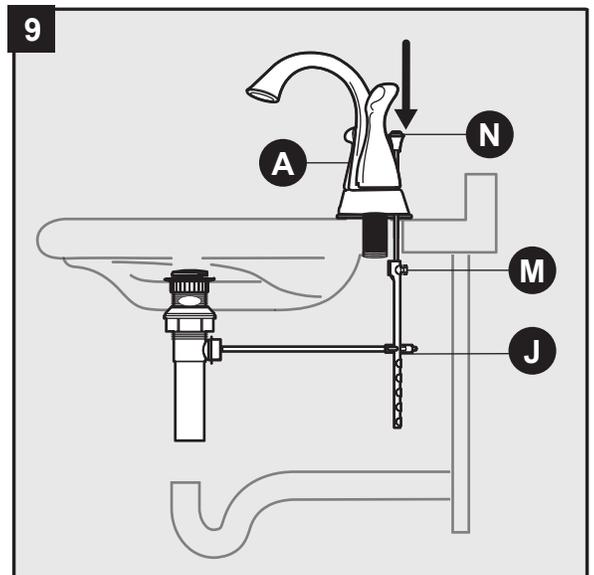

## OPERATION INSTRUCTIONS

1. After the installation is complete:
  - a. Remove the aerator from the faucet (A) using a coin (not included).
  - b. Turn on the water supply and allow both hot and cold water to run for at least one minute each.
  - c. While the water is running, check for leaks.
  - d. Replace the aerator.

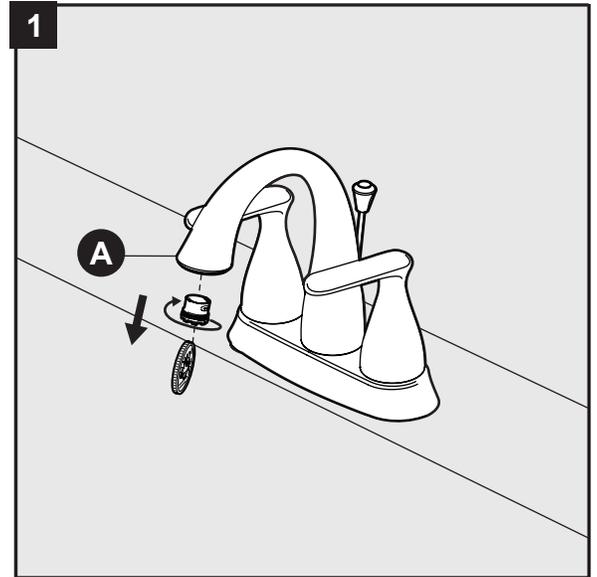

## CARE AND MAINTENANCE

- Clean carefully by gently wiping with a grit-free damp cloth.
- Use only mild soap with water.
- Never use acids, harsh chemicals, or abrasive detergents to clean the faucet surface.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
There is a leak from under the handle or there is a leak from the spout when the faucet is off.	<ol style="list-style-type: none"> <li>1. The bonnet nut is not tight enough.</li> <li>2. The cartridge is damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove the handle and retighten the bonnet nut.</li> <li>2. If the problem occurs after retightening the bonnet nut, call customer service for a new cartridge and replace it after you receive the new cartridge.</li> </ol>
There is a leak from aerator when the faucet is on.	The aerator does not fit correctly on the faucet.	<ol style="list-style-type: none"> <li>1. Reinstall the aerator.</li> <li>2. Call customer service for a new aerator and replace it after you receive the new aerator assembly.</li> </ol>
The aerator has irregular or reduced water flow.	The aerator is dirty.	Remove the aerator and clear debris.

## WARRANTY


This faucet has been manufactured under the highest standard of workmanship. All parts of this faucet are warranted to be free from leaks or drips during domestic use for as long as the original purchaser owns this product. THIS EXCLUDES INDUSTRIAL, COMMERCIAL, OR BUSINESS USE. The manufacturer will replace FREE OF CHARGE, under the warranty conditions the entire unit or any part (at our option) which proves defective in material and/or workmanship under normal installation, use and service. This warranty is limited to defective parts as stated. All costs of removal and installation of the faucet, including the replacement of warranty parts are the responsibility of the purchaser. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. Any damage to this faucet as a result of misuse, abuse, neglect, accident, improper installation, or any use violating instructions furnished by us, WILL VOID THIS WARRANTY. When requesting warranty service, you will need to present a copy of your sales receipt as proof of purchase. To obtain warranty service, call our customer service department at 1-866-417-7564.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	QUANTITY
1	Handle H	RP13207*
2	Handle C	RP13208*
3	Set Screw	RP50002
4	Connector	RP50119
5	Inverter	RP64044
6	Bonnet	RP70193
7	Washer	RP64123
8	Cartridge H	RP20013
9	Cartridge C	RP20014
10	Aerator (Use for 0064684 / 0041136)	RP30131
10	Aerator (Use for 0749774 / 0749720)	RP30187
11	Mounting Nut	RP56084
12	Lift Rod	RP40141*
13	Pop-up Assembly	RP40027*

\* Available in Chrome Finish and Brushed Nickel Finish.

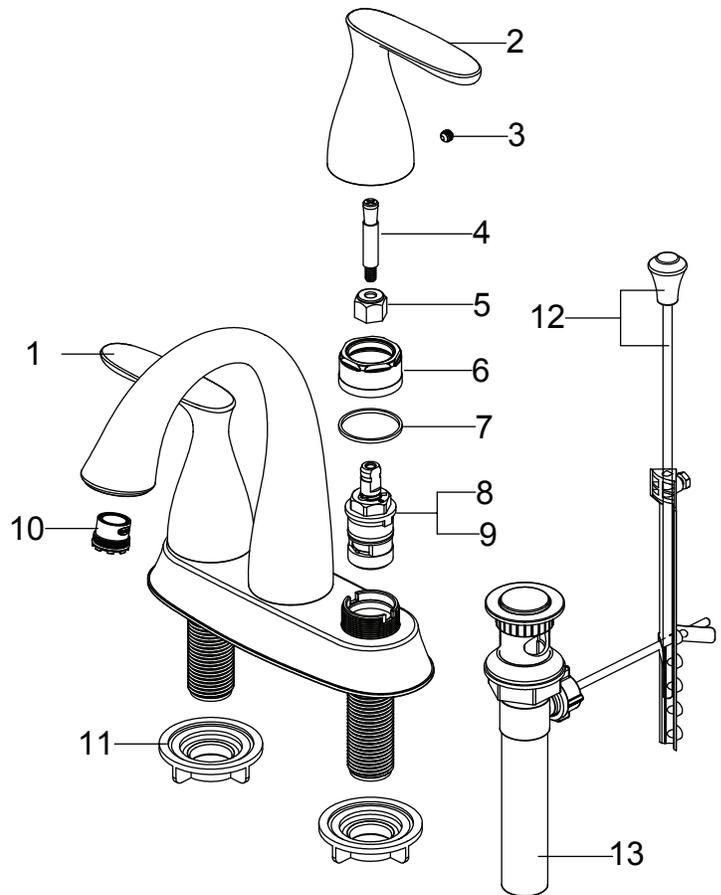

Printed in China

Aquasource® is a registered trademark of LF, LLC. All rights reserved.

Lowes.com 