
ITEM #0223326

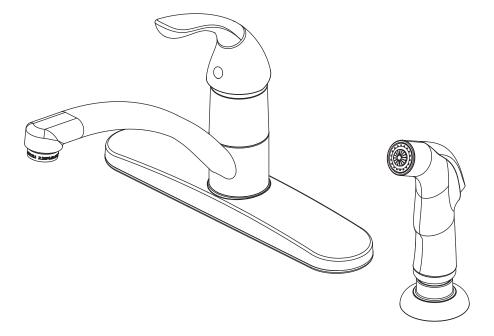

AquaSource[®] is a registered trademark of LF, LLC. All Rights Reserved.

SINGLE-HANDLE KITCHEN FAUCET

MODEL #67353-1008D2




ATTACH YOUR RECEIPT HERE

Serial Number _

Purchase Date _

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

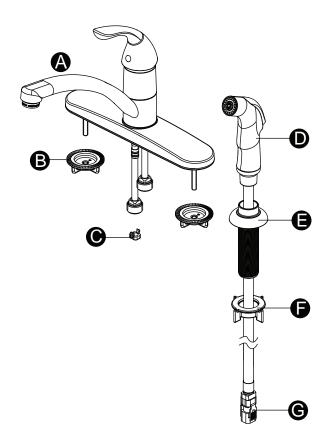

| PART | DESCRIPTION | QUANTITY |
|------|---|----------|
| А | Faucet | 1 |
| В | Mounting Nut (Preassembled to Faucet (A)) | 2 |
| С | Block (Preassembled to Faucet (A)) | 1 |
| D | Side Spray | 1 |
| E | Hose Guide | 1 |
| F | Lock Nut (Preassembled to Hose Guide (E)) | 1 |
| G | Hose Connector (Preassembled to Spray Hose (D)) | 1 |

A SAFTEY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

- Follow the installation instructions carefully. Proper installation is the installer's responsibility.
- Failure to follow correct installation procedures can result in the faucet being loose, which can result in serious injury.
- Check local building codes before beginning installation to ensure compliance.

PREPARATION


Before beginning the assembly of product, make sure all parts are present. Compare parts with package content list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 45 minutes, Including the Removal of Old Faucet


Tools Required for Assembly (not included): Adjustable Wrench, Phillips Screwdriver, Putty, Allen Wrench Helpful Tools (not included): Basin Wrench, Water Supply Lines

ASSEMBLY INSTRUCTIONS

1. Shut off water supplies. Remove old faucet.

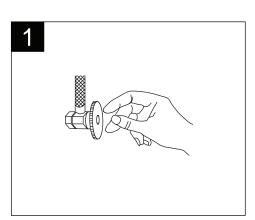


 Place faucet (A) in position on sink. From under sink, thread mounting nuts (B) onto faucet (A). Tighten mounting nuts (B).

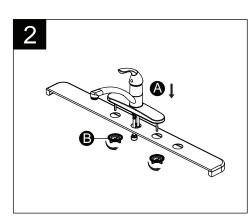



ASSEMBLY INSTRUCTIONS


 Mount hose guide (E) in far right hole of sink (not included). Secure hose guide (E) using lock nut (F). Hand tighten.

- 4. Insert side spray (D) down through hose guide (E) and sink. From underneath the sink, push hose connector (G) firmly upward and snap onto block (C). Pull down moderately to ensure the connection has been made. If it is necessary to remove the hose, press on the tabs and pull hose connector (G) down.
- 5. Connect 1/2 in. IPS faucet connector or coupling nuts (not included) with 3/8 in.
 O.D.ball-nose risers (not included) to water supplies using wrenches (not included).
 Note: Refer to local plumbing codes for permissible types of water supply connectors.
- 6. After installation is completed, remove aerator on faucet (A). Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Replace aerator.

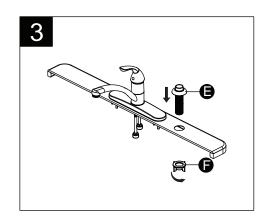

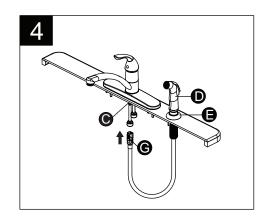

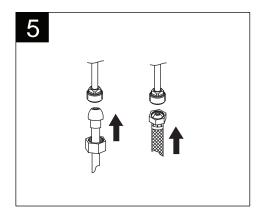

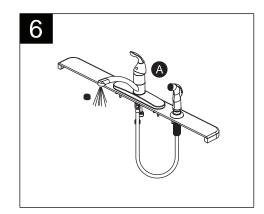

CARE AND MAINTENANCE

• Clean carefully by gently wiping with a grit-free damp cloth. Use only mild soap with water.Never use acids, harsh chemicals or abrasive detergents to clean surface.

TROUBLESHOOTING

If you have any questions regarding the product, please call our customer service at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|-----------------------------|-------------------------------|--|
| Leak from under handle | Damaged cartridge | Remove handle. Replace cartridge. |
| Inconsistent flow pattern | Aerator is dirty or misfitted | Unscrew the aerator to check rubber washer or replace the aerator. |
| Leak from the spout/aerator | Damaged cartridge | Remove handle. Replace cartridge. |

LIFETIME LIMITED WARRANTY


This faucet has been manufactured under the highest standard of workmanship. All parts of this faucet are warranted to be free from leaks or drips during domestic use for as long as the original purchaser owns this product. THIS EXCLUDES INDUSTRIAL, COMMERCIAL, OR BUSINESS USE. The manufacturer will replace FREE OF CHARGE, under the warranty conditions the entire unit or any part (at our option) which proves defective in material and/or workmanship under normal installation, use and service. This warranty is limited to defective parts as stated. All costs of removal and installation of the faucet, including the replacement of warranty parts are the responsibility of the purchaser. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. Any damage to this faucet as a result of misuse, abuse, neglect, accident, improper installation, or any use violating instructions furnished by us, WILL VOID THIS WARRANTY. When requesting warranty service, you will need to present a copy of your sales receipt as proof of purchase. To obtain warranty service, call our customer service department at 1-866-417-7564.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-417-7564, 8 a.m. - 8 p.m., EST, Monday - Friday.

6

| PART | DESCRIPTION | PART # |
|------|--------------|----------|
| 1 | Handle | RP13060* |
| 2 | Set Screw | RP50002 |
| 3 | Index Bonnet | RP10006 |
| 4 | Сар | RP80004* |
| 5 | Cartridge | RP20044 |
| 6 | Aerator | RP30004* |
| 7 | Washer | RP64070 |
| 8 | O-Ring | RP60032 |
| 9 | Diverter | RP70037 |
| 10 | Bolt | RP50040 |
| 11 | Mounting Nut | RP56036 |
| 12 | Side Spray | RP36057* |
| 13 | Block | RP70005 |
| 14 | O-Ring | RP60002 |

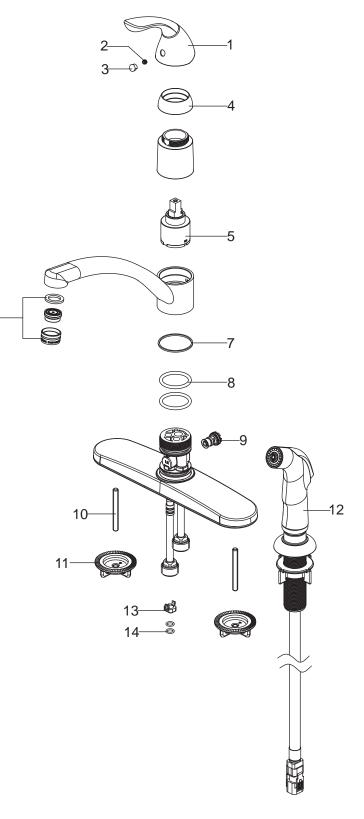

*Available in Stainless Steel Finish.

Printed in China