



# Comfort™ Freestanding Bath and Air Bath

## INSTALLATION AND OPERATION INSTRUCTIONS

### Save these instructions for future use.

Complete and mail in the product registration card provided with your unit.  
Write and save the model and serial number of your unit below.

#### *Owner's Record*

Date Purchased \_\_\_\_\_

Purchased From \_\_\_\_\_

Installed By \_\_\_\_\_

Serial Number \_\_\_\_\_

Model \_\_\_\_\_

**Installer:** Leave this manual for homeowner.

**Homeowner:** Read this manual and keep for future reference.

*ALSO FIND MANUAL ON-LINE AT JACUZZI.COM*

# IMPORTANT SAFETY INSTRUCTIONS

**Read and follow all instructions**

**SAVE THESE INSTRUCTIONS**

## INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS

**WARNING:** When using this unit, basic precautions should always be followed, including the following:

**DANGER:** To reduce the risk of injury, do not permit children to use this unit unless they are closely supervised at all times.

**WARNING:** Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

**WARNING:** Never drop or insert any object into any opening.

**WARNING:** Do not operate this unit without the guard over the suction fitting.

**WARNING:** This unit must be connected only to a supply circuit that is protected by a ground fault circuit interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the bathtub without the test button being pushed, a ground current flowing, indicating a possibility of an electric shock. Do not use this hydromassage bathtub. Disconnect the hydromassage bathtub and have the problem corrected by a qualified service representative before using.

**WARNING:** (For permanently connected units) A green-colored terminal (or a wire connector marked "G," "GR," "Ground," or "Grounding") is provided within the terminal compartment. To reduce the risk of electric shock, connect the terminal or connector to the grounding terminal of your electric service or supply panel with a conductor equivalent in size to the circuit conductors supplying this equipment.

## OPERATING INSTRUCTIONS

**WARNING:** Prolonged immersion in hot water may induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F. The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness and fainting. The effects of hyperthermia include:

- a. Failure to perceive heat
- b. Failure to recognize the need to exit the spa or hot tub
- c. Unawareness of impending hazard
- d. Fetal damage in pregnant women
- e. Physical inability to exit the bath
- f. Unconsciousness resulting in danger of drowning

**WARNING:** The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia.

**WARNING:** Do not tamper with user-operated controls or such devices.

## INSTALLATION INSTRUCTIONS

**WARNING:** When using this unit, basic precautions should always be followed, including the following:

**DANGER:** Risk of electric shock. Connect only to a circuit protected by a ground fault circuit interrupter (GFCI).

**CAUTION:** Test the ground fault circuit interrupter protecting this appliance periodically in accordance with manufacturer's instructions.

**WARNING:** Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturers.

**WARNING:** To avoid injury, exercise caution when entering or exiting the hydromassage bathtub.

**WARNING:** Keep body and hair a minimum of 6 inches away from the suction fitting at all times when the hydromassage system is operating. Hair longer than shoulder length should be secured close to the head.

**WARNING:** Risk of electrical shock: Do not permit electrical appliances (such as hair dryer, lamp, telephone, radio or television) within 60 inches (1524 mm) of this hydromassage bathtub.

**WARNING:** Risk of accidental injury or drowning. Do not use drugs or alcohol before or during the use of hydromassage bathtub equipped with a heater to avoid unconsciousness and possible drowning.

**WARNING:** Risk of fetal injury: Pregnant or possibly pregnant women should consult a physician before using a hydromassage bathtub equipped with a heater.

**WARNING:** Risk of hyperthermia and possible drowning: Do not use a hydromassage bathtub equipped with a heater immediately following strenuous exercise.

**WARNING:** Risk of hyperthermia and possible drowning: Water temperature in excess of 104° F (40° C) may be injurious to your health. Check and adjust water temperature before use.

**WARNING:** Risk of hyperthermia: People using medications or having an adverse medical history should consult a physician before using a hydromassage bathtub equipped with a heater.

For built-in and drop-in units, install to permit access for servicing.

This unit should be electrically grounded and installed by a licensed contractor, electrician, and plumber.

Building materials and wiring should be routed away from the motor/pump or blower or other heat producing components of this unit.

A pressure wire connector is provided on the exterior of the motor/pump and heater to permit connection of an No. 8 AWG (8.4 mm) solid copper bonding conductor between this unit and all other electric equipment and exposed metal in the vicinity, as needed to comply with local requirements.

## PRECAUTIONS

- Do not operate the hydromassage system unless the bath is filled with water to at least 1 to 2 inches (25 to 51 mm) above the highest jet.
- Do not immerse the control panel by overfilling the bath.
- Do not use oil-based bath additives in your hydromassage bath.
- When cleaning your bath, do not use abrasive substances which will damage the bath's surface.
- To prevent discoloration of the acrylic finish, do not fill the bath with water in excess of 140° F (60° C).

**NOTE:** This is a professional grade product. A knowledge of construction techniques, plumbing and electrical installation according to codes are required for proper installation and user satisfaction. We recommend that a licensed contractor perform the installation of all Jacuzzi Whirlpool Bath products. Our warranty does not cover improper installation related problems.

## PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE USE INSTALLATION INSTRUCTIONS SUPPLIED WITH PRODUCT

The Company has obtained applicable code (standards) listings generally available on a national basis for products of this type. It is the responsibility of the installer/owner to determine specific local code compliance prior to installation of the product. The Company makes no representation or warranty regarding, and will not be responsible for any code compliance.

**NOTE:** If you need a referral for a service company near you, or need assistance with operation or maintenance related questions, please call our USA Service Support Department at 1-800-288-4002. Visit our web site at <http://www.jacuzzi.com/> for products and services.

To find service agent listings for:

Electrical or Mechanical Repairs visit <http://jacuzzi.com/pdf/ASA.PDF>

Finish, Surface, or Shell-Related Repairs visit <http://jacuzzi.com/pdf/AFC.PDF>

Repair Parts or Accessories visit <http://jacuzzi.com/pdf/MPD.PDF>

# SPECIFICATIONS

**IMPORTANT:** Read complete instructions before beginning installation.

Each bath arrives ready for installation, completely equipped with air blower and plumbing and fittings necessary for operation. An optional drain/overflow kit is available for installation on the bath.


Remove the bath from the packaging. Retain the shipping packaging until satisfactory inspection of the product has been made. Do not lift the bath by the plumbing at any time; handle by the shell only.

Immediately upon receipt, inspect the shell before installing. Should inspection reveal any damage or defect in the finish, do not install the bath. Damage or defect to the finish claimed after the bath is installed is excluded from the warranty. Jacuzzi® Whirlpool Bath responsibility for shipping damage ceases upon delivery of the products in good order to the carrier. Refer any claims for damage to the carrier. For definitions of warranty coverage and limitations, refer to the published warranty information packed with the product.


All bath units are factory tested for proper operation and watertight connections prior to shipping. Note: Prior to installation, the bath must be filled with water and operated to check for leaks that may have resulted from shipping damage or mishandling. Jacuzzi® is not responsible for any defect that could have been discovered, repaired, or avoided by following this inspection and testing procedure.

Because of the variety of export tub types some instructions may not apply to your unit. Disregard instructions that do not apply to your specific tub.


## OVAL BATHS

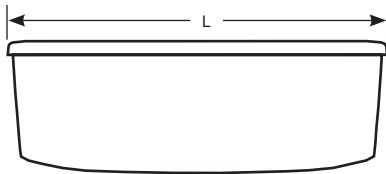

SIDE VIEW

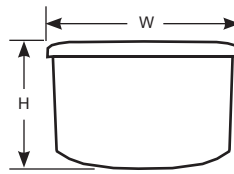

END VIEW

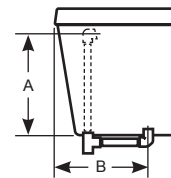


DRAIN-OVERFLOW

MODEL	DIMENSIONS	DRAIN/OVERFLOW	TOTAL WEIGHT/ FLOOR LOADING	OPERATING GALLONS	PRODUCT WEIGHT	SKIRT AND MOUNTING	HEATER
Gallery 6 FS Bath	72" (1829 mm) L 42" (1067 mm) W 20-1/2" (521 mm) H	16" (406 mm) A 11-1/2" (292 mm) B	1115 lb (506 kg)/ 53.1 lb/ft <sup>2</sup> (259 kg/m <sup>2</sup> )	89 gal (337 liters) max	124 lb (56 kg)	Included	Not applicable
Riva 5.5 FS Bath	66" (1676 mm) L 38" (965 mm) W 19-1/2" (495 mm) H	14-3/4" (375 mm) A 9-1/2" (241 mm) B	826 lb (374 kg)/ 47.0 lb/ft <sup>2</sup> (229 kg/m <sup>2</sup> )	56 gal (221 liters) max	110 lb (50 kg)	Included	Not applicable
Riva 6 FS Bath	72" (1829 mm) L 42" (1067 mm) W 20-1/2" (521 mm) H	16" (406 mm) A 11-1/2" (292 mm) B	1115 lb (506 kg)/ 53.1 lb/ft <sup>2</sup> (259 kg/m <sup>2</sup> )	89 gal (337 liters) max	124 lb (56 kg)	Included	Not applicable

**NOTE:** The overall dimensions are nominal with a tolerance of +0 and -1/4" (6,4 mm).


**OVAL AIR BATHS**

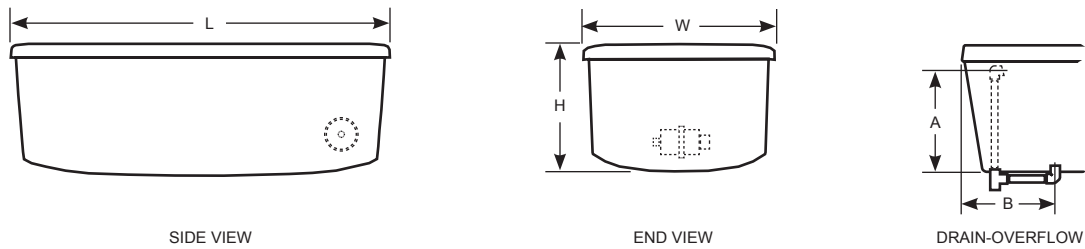


MODEL	DIMENSIONS	DRAIN/OVERFLOW	TOTAL WEIGHT/ FLOOR LOADING	OPERATING GALLONS	PRODUCT WEIGHT	SKIRT AND MOUNTING	HEATER
Galleyr 6 FS Air Bath LH	72" (1829 mm) L 42" (1067 mm) W 20-1/2" (521 mm) H	16" (406 mm) A 11-1/2" (292 mm) B	1208 lb (548 kg)/ 57.5 lb/ft² (281 kg/m²)	89 gal (337 liters) max 55 gal (208 liters) min	167 lb (76 kg)	Included	Not applicable
Riva 5.5 FS Air Bath	66" (1676 mm) L 38" (965 mm) W 19-1/2" (495 mm) H	14-3/4" (375 mm) A 9-1/2" (241 mm) B	916 lb (415 kg)/ 52.1 lb/ft² (254 kg/m²)	56 gal (221 liters) max 44 gal (167 liters) min	150 lb (68 kg)	Included	Not applicable
Riva 6 FS Air Bath	72" (1829 mm) L 42" (1067 mm) W 20-1/2" (521 mm) H	16" (406 mm) A 11-1/2" (292 mm) B	1208 lb (548 kg)/ 57.5 lb/ft² (281 kg/m²)	89 gal (337 liters) max 55 gal (208 liters) min	167 lb (76 kg)	Included	Not applicable
<p><b>NOTE:</b> The overall dimensions are nominal with a tolerance of +0 and -1/4" (6,4 mm).</p> <p>BLOWER: 115 VAC, 15 A, 60 Hz dedicated GFCI protected circuit</p>							

# ROUGH-IN


## OVAL BATHS AND AIRBATHS

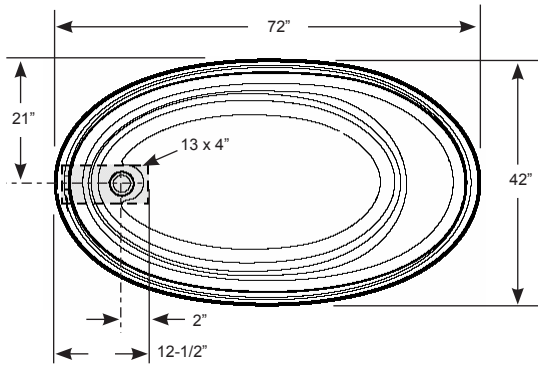

**Gallery™ 6**

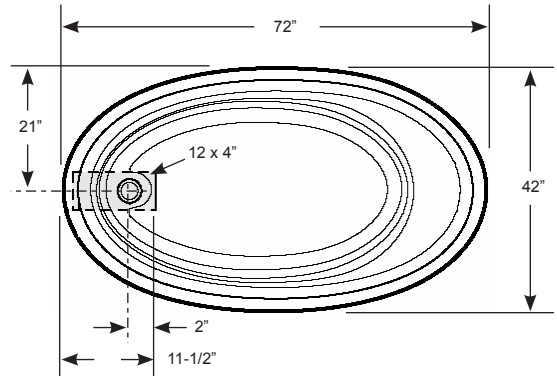

**Riva™ 6**

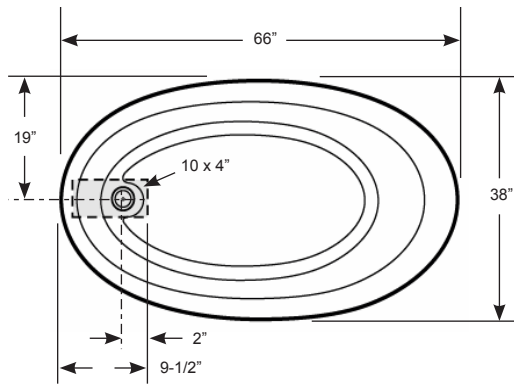

**Riva™ 5.5**

### NOTES:

1. The overall dimensions are nominal with a tolerance of +0 and -1/4" (6,4 mm).
2. Measurements inside each unit represent cutout in floor to allow for drain/overflow.
3. All measurements are in inches. To convert to millimeters, multiply inches by 25.4.

**IMPORTANT:** Refer to the installation templates for exact drain and overflow locations, water supply locations and electrical supply locations.

# INSTALLATION

## ELECTRICAL CONNECTIONS

A separate circuit, that must be protected by a dedicated ground fault circuit interrupter (GFCI) outlet is required. Install a duplex outlet to the studwall underneath the bathtub, at least 4 inches (102 mm) above the floor (the duplex outlet is not provided).

**CAUTION:** Risk of electric shock. Connect only to a circuit protected by a GFCI outlet.

The Comfort™ Freestanding Airbath may be set up in a typical manner or in a manner that the blower motor is placed in a remote location, either in another room or under the floor. The electrical connections should be performed by a licensed electrician.

### A. Typical Equipment Interconnection

Basically the blower motor must be connected to the control box, whether it is a typical set up or a remote set up.

1. At the bath location, a dedicated GFCI outlet must be installed.
2. The blower motor is connected to the control box.
3. The control box is connected in a "piggy-back" manner to the built-in receptacle at the back of the ozone device connector.
4. The Ozone device is then connected to a dedicated GFCI outlet.
5. Connect the control cable between the control panel and the control box.

### B. Remote Location of the Blower Motor

For a remote set up, the Ozone device must remain in place for operational efficiency, and attached to the dedicated GFCI outlet. The remote location must be service-accessible.

**CAUTION:** The blower must not be installed in an attic area.

1. At the remote location, a separate, dedicated GFCI outlet must be installed.
2. The blower motor is connected to the control box.
3. The control box is then connected to the dedicated GFCI outlet.
4. The Ozone device is then connected to its separate GFCI outlet.
5. Attach the control cable between the control panel and the control box.

The total length of the air pipe must not require more than 15' (4.57 m) of piping and 6 directional changes. Pipe diameter must be 1-1/2" (38.1 mm) or larger. Choose a space as close to the bath as possible so the system works as efficiently as possible.

This space must be at least 30 cubic feet (0.85 cubic meters) and the blower must be mounted at least 2" (50.8 mm) above the floor and 2" (50.8 mm) minimum away from any wall.


**NOTE:** Do not remove the inverted U-Loop and check valve. Glue the air pipe and let it set overnight before attaching the blower with the screw.

**CAUTION:** It is imperative to let the glued blower air pipe set overnight as there may be fumes from the glue that could be ignited if not allowed to dissipate.


Provide adequate ventilation in the remote location for cooling the motor and to supply sufficient air for the blower. The intake of the blower must not be blocked, restricted, or have any debris around it that can potentially be sucked into the blower. Insulation on the air pipe length can reduce heat loss.

**NOTE:** A relocated blower requires a service access for the control box and blower.

### Typical Equipment Interconnection

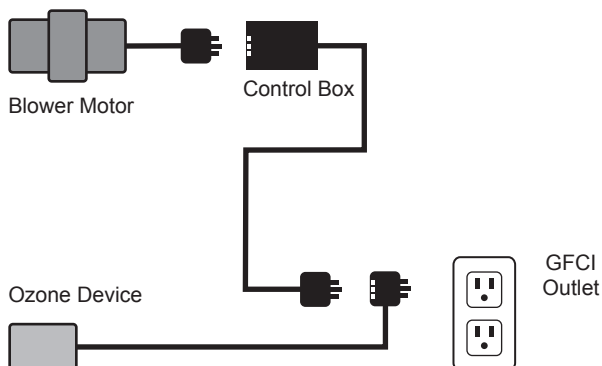

### Remote Location for Blower Motor

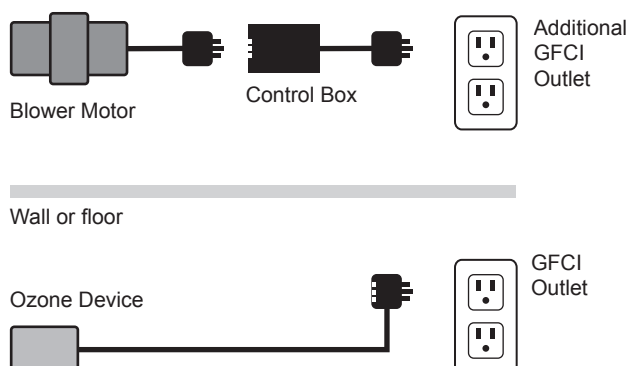

## DRAIN INFORMATION

A drain/overflow assembly (sold separately) must be installed on the bath, water tested, and connected to the sanitary system of the house. After opening the carton, inspect for damage and verify that the kit is in the proper finish. Follow the installation instructions provided with the drain/overflow kit. After the drain is fully installed, test for proper drainage. If the unit does not drain properly, rectify this condition before proceeding with the installation. Jacuzzi® Whirlpool Bath is not responsible for removal or reinstallation costs.

**NOTE:** Watertight installation of the drain is the installer's responsibility. Drain leakage is excluded from the warranty of this product.

## PLUMBING

All Comfort Series air baths are factory tested for proper operation and watertight connections prior to shipping. If leaks are detected, notify your dealer immediately. Do not install the unit.

## WATER SUPPLY

Consult local authorities for plumbing code requirements in your area.

**IMPORTANT:** Proper installation of the fill spout plumbing and compliance with local codes are the responsibility of the installer. Jacuzzi® Whirlpool Bath does not warrant connections of water supply fittings and piping, fill systems, or drain/overflow systems. Nor is it responsible for damage to the bath which occurs during installation.



**CAUTION:** A nonflammable protective barrier must be placed between soldering work and bath unit to prevent damage to the bath.



## INSTALLATION OF SKIRT

The installation instruction of the bath skirt does not require use of a template. It is necessary to follow these instructions in order to ensure that possible future servicing can be completed efficiently.

### A. Preparation for Bath Installation

The bath was supplied with a film liner inside the bath to protect the finish during the installation process. The film should be removed after unpacking the bath to inspect the bath for defects or damage to the finish. The liner should then be replaced until installation and final clean up are completed.

The floor structure must be able to support the total weight of the bath, bath water, and the bather, and the bath must be horizontally level and continuous to provide proper drainage. Also make sure that any water connections or electrical supplies are within the designated areas and that there will be no interference with skirt or bath installation.

Follow the installation instructions carefully to ensure stability and possible future service of the unit. Should service be required, see paragraph below, Gain Service Access.

#### 1. Set the skirt in its place and position it precisely with respect to the drain-overflow location.

With the indentation for the drain in relation to the the drain-overflow, see Figure 1. Note the electrical area at the opposite end within 15 inches where the electrical floor outlet is to be located.

Use a marker to outline the perimeter of the entire skirt directly on the floor.

#### 2. Mark trough for the overflow drain location.

The drain-overflow extends below the bottom of the bath. The drain-overflow requires a cut out of the floor for providing space to accomodate the extension. Do not exceed the dimensions of the skirt perimeter.

#### 3. Mark area for electrical outlet.

Mark the area for the electrical area from which you will measure the location of the electrical outlet to prevent interference during bath installation.

#### 4. Mark the six hole areas.


Six screws will be used to secure the skirt to the floor.

#### 5. Remove the bath skirt.

When the above locations have been marked on the floor, remove the skirt and set it aside, and continue with the installation procedure.

### B. Prepare the Drain-Overflow Trough

Prepare the drain-overflow trough according to the dimensions shown Rough-In. The depth of the trough depends on the vertical extension of the drain elbow at the bottom of the bath. It should accomodate the extension of the plumbing below the floor level.

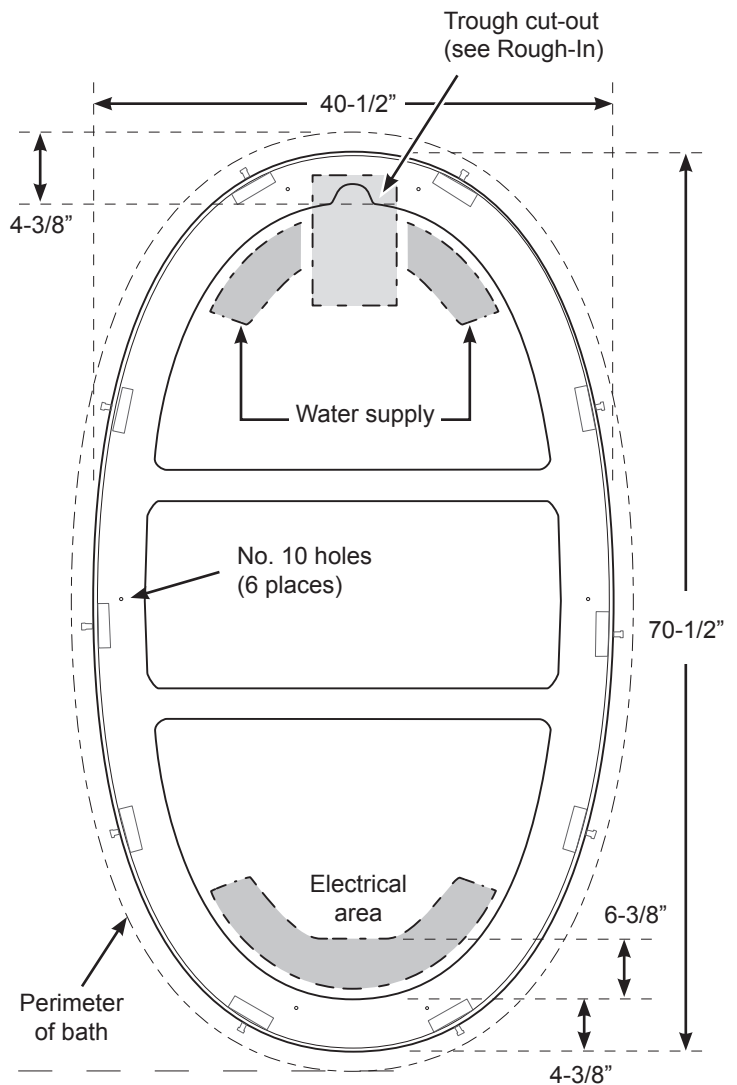

**Figure 1. Template for Skirt**

**NOTE:** Figure 1 shows the size dimensions for the Riva 6 bath. For size dimensions for the Riva 5.5, see Rough-In section of Specifications.

## C. Construction Required Before Installation

Before the skirt may be secured to the floor, the following steps must be completed.

### 1. Place the skirt on floor in relation to the drain-overflow and the electrical area (and water supply, if applicable).

According to the markings previously made on the floor, place the skirt on the floor and line up the skirt.

### 2. Drill holes for attaching skirt to wood floor.

Drill six holes into the floor that will accommodate the six screws (provided) that will be used to secure the bath skirt to the floor. Use a 1/8 inch drill bit, 1 inch deep.

### 3. Install drain and overflow plumbing.

Install floor plumbing for the overflow-drain equipment.

### 4. OPTIONAL: Attach deck-mounted faucetry, if applicable.

Faucetry is not supplied with the Freestanding bath. To use deck-mounted faucetry, flexible connection lines must be used, 72 inches in length. This needs to be installed prior to installing the bath in the skirt.


Refer to Figure 2 the faucetry diagram for possible locations of the faucetry in order to bring the water supply through the floor. If faucetry must be located outside of the recommended areas, you must be careful not to locate it where it will interfere with the location of the mounting brackets.

**NOTE:** If floor-mounted or wall mounted faucetry is to be used, exterior of the bath, this can be installed after the bath is installed in the bath skirt.

### 5. Prepare Electrical Outlet (Whirlpool and Air Bath Only)

A dedicated floor outlet with a double outlet must be provided in the area designated as the electrical area (Figure 1).

**CAUTION:** The 115 V outlet for a three-prong plug must be protected by a ground fault circuit interrupter (GFCI) circuit.

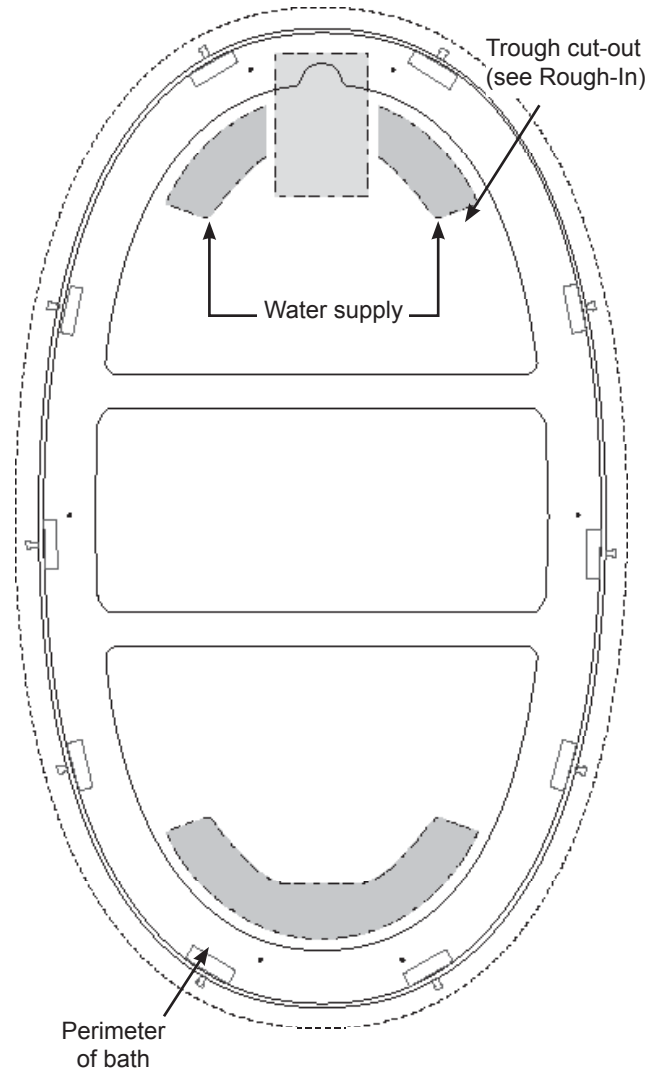

**Figure 2. Faucetry Installation**

## D. Clean the area after construction

Clean up any debris that has resulted in any of the above construction. Also remove the perimeter outline of the template on the floor.

## E. Secure skirt to the floor

Use six 1-1/2 inch length, No. 10 screws provided to attach the skirt to the floor. Make sure the skirt is properly oriented according to the drain-overflow end and the electrical area. Tighten the screws snug, do not over-tighten.

**NOTE:** If using adhesive to secure the skirt to the floor, a bead of adhesive sealant should be applied around the bottom of the skirt. Carefully place skirt on the floor in the correct position and press to the floor. Place weights around the perimeter and allow adhesive sealant to cure before proceeding.

**NOTE:** The water supply should be located in the area shown. Under no circumstances should installation permit interference with any of the equipment, without exception. Do not modify the mounting brackets to facilitate mounting faucetry.

## F. Prepare bath for installation into the skirt

1. Place the bath in the skirt momentarily without making any connections.

Place the bath into the skirt and center the bath in the skirt. Make sure that the drain and overflow piping will line up with the connection points on the bath, then remove the bath from the skirt and set it aside.

2. Set two, 2 by 4 inch wooden supports, of 5 foot lengths, across the top of the skirt.

Spread the wooden supports evenly over the skirt as shown in Figure 3. They will support the bath during connection of the water supply, drain-overflow, and during adjustment of the ten fasteners.

3. Set bath on the 2 by 4 inch supports.

Place the bath onto the 2 by 4 inch supports in the position that it will be lowered into the skirt. The 2 by 4 supports need to be positioned under the foam block base. Orient the bath properly with respect to the electrical area and the drain. Also make sure the drain and overflow areas line up.

4. Connect the water supply to the bath, if applicable.


Connect the flexible water lines to faucets if using deck-mounted faucetry. Make certain that valves are in the closed position. Turn on water supply and check for leaks at any of the connections.

5. Connect electrical source.

Connect all electrical plugs to the GFCI protected outlets at this time. Each electrical cord must be connected to a dedicated GFCI protected circuit.


6. Adjust the ten fasteners at the top edge of the skirt.

Make sure the 10 hex-head screws around the top edge of the skirt extend about 1/4 inch beyond the outside surface of the skirt, see Figure 4.

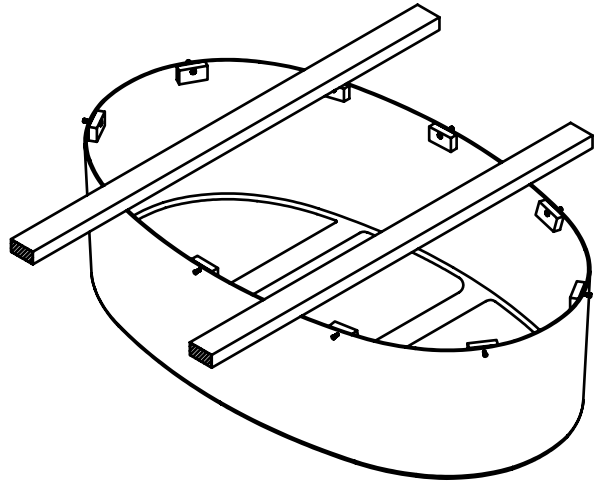

**Figure 3. Preparation for Bath Installation**

**NOTE:** Store the two 2 by 4 supports in the event that future service is required.

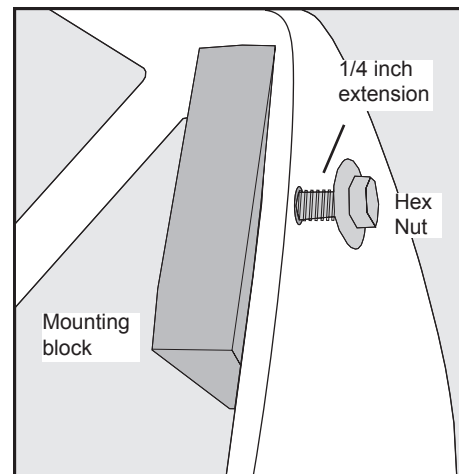

**Figure 4. Hex-Head Screws (10)**

## G. Position the bath into the skirt

1. Lower the bath into place.

Three persons will be required to lower the bath into the skirt. One person at each end of the bath will lift the bath, and the third person will remove the two supports from the top of the bath skirt.

**CAUTION:** Take caution not to damage the overflow pipe while lowering the bath into the skirt.

2. Align brackets and tighten nuts.

There are ten skirt mounting brackets underneath the rim of the bath, see Figure 5. Align the slots in the 10 brackets with the hex-head screws extending 1/4 inch from the skirt, and place the bath into place.

**CAUTION:** Handtighten the nuts to snug. Do not overtighten the nuts.

3. Make final connection of the drain fitting and the overflow fitting, and seal the connection.
4. Tighten the 10 hex-head fasteners around the top of the skirt until the skirt is secured by the brackets.

## GAIN SERVICE ACCESS

In the event service access is required to the plumbing or bath equipment, proceed with the following steps. Complete only service that is required and omit or skip any details of this instruction that may not apply.

1. You will need two, 2 by 4 inch wooden supports, of 5 foot lengths. Place them in the vicinity of the bath.
2. Shut off the water from the main valve(s). Remove power from the unit at the main switch(es).
3. Loosen the ten hex-head screws that secure the bath to the bath skirt. It is not necessary to remove the screws.
4. Make the appropriate plumbing disconnects as required.
  - a. Remove the drain flange at the drain.
  - b. Remove the drain overflow fitting.
5. With a person at each end of the bath, raise it out of the skirt enough to position two wood supports over the skirt to support the raised bath. Place the supports evenly onto the skirt (see Figure 3).
6. Set the bath onto the wood supports. The supports need to be positioned under the foam block base.
7. After completing service, restore all connections and attachments. Restore the tub to the skirt and make that securement.
8. Restore electrical power and water supply from the main source.

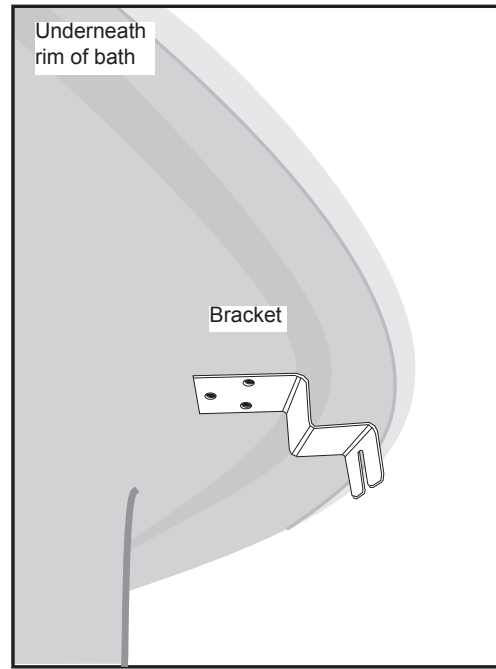


Figure 5. Skirt Mounting Bracket

## CLEAN-UP AFTER INSTALLATION

The acrylic finish will give long-lasting beauty when properly maintained. To avoid dulling and scratching of the finish, never use abrasive cleaners or harsh chemicals. A mild liquid detergent and warm water will clean soiled surfaces.

Remove spilled plaster with a wood or plastic edge. Metal tools will scratch the surface. Spots left by plaster or grout can be removed if lightly rubbed with a mild detergent and a damp cloth or sponge.

Minor scratches that do not penetrate the color finish can be removed by lightly sanding the surface with a 600-grit, wet-dry sandpaper. To restore the glossy finish, use a special compound like Meguiar's No. 10 Mirror Glaze. If it is not available, use an automotive rubbing compound followed by an application of automotive paste wax.

Major scratches and gouges that penetrate the acrylic surface may require refinishing. Ask your Jacuzzi® Whirlpool Bath dealer for special instructions or visit our web site at:

<http://www.jacuzzi.com/>

To find service agent listings for:

Electrical or Mechanical Repairs, visit:

<http://jacuzzi.com/pdf/ASA.PDF>

Finish, Surface, or Shell-Related Repairs, visit:

<http://jacuzzi.com/pdf/AFC.PDF>

Repair Parts or Accessories, visit:

<http://jacuzzi.com/pdf/MPD.PDF>

# OPERATION

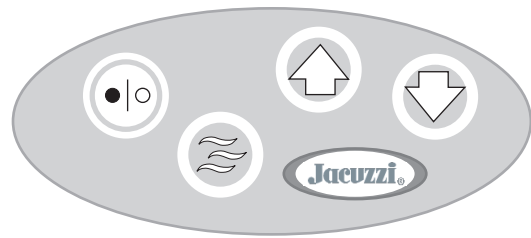


Figure 6. Airbath Controls

**NOTE:** These instructions pertain to all Comfort™ Freestanding bath products manufactured by Jacuzzi® Whirlpool Bath. Not all features discussed in this instruction booklet apply to all baths.

All baths manufactured by Jacuzzi® are designed for “fill and drain.” This means that the bath should be drained after each use and filled with fresh water by the next user. This is a health precaution, as these baths are not designed to hold water continuously, like pools or spas. If you want a unit designed to hold water continuously, see your Jacuzzi® dealer for the complete line of spas available.

## PrO<sup>3</sup> OZONE SANITATION SYSTEM

Air bath units have a PrO<sup>3</sup> Ozone Sanitation System installed. The ozone generator is set to operate as follows.

At the time the power is initiated, the ozone operates for 30 minutes, and then it will automatically shut off. Thereafter, every 4 hours, the ozone will operate for about 20 minutes.

**NOTE:** A soft noise is produced by the pump during operation of the equipment.

## Air Bath Control Operation

The Air Bath Control Panel is shown in Figure 6. The control switches are described below.



### Normal Mode

Press the Normal Mode button to turn the blower on. The blower will be on for 20 minutes. The intensity may be changed by using the Toggle Switches.

Pressing the Normal Mode button a second time will turn the blower off.



### Wave Mode

Press the Wave Mode button to change the blower's power from a minimum to a User-defined maximum. Press the Wave Mode button a second time to return to Normal Mode where the blower's power is constant.



### Toggle Switches

In the Normal mode, use the Toggle Switch (Up or Down) to increase or decrease the intensity of the air blower. In the Wave mode the switches change the blower to a user-defined intensity.

The Toggle Switch affects the motor speed a step at a time. Do not hold the button down but press the button repeatedly to lower or raise the speed.

**NOTE:** The balanced air flow feature has been optimized for use at the highest blower operation setting. As you decrease the speed of the blower to the lowest setting, it is normal to experience a gradual loss of pressure and air bubbles, especially toward the drain-end of the bath.

# MAINTENANCE

## CLEANING THE BATH

To clean your bath, simply use a mild, nonabrasive liquid detergent solution. You can protect and restore the gloss to a dulled acrylic surface by applying Meguiar's #10 Mirror Glaze, a product specifically designed for use on acrylic finishes. If Meguiar's is not available, an acrylic polish of equal quality or automotive paste wax is acceptable.

Never use abrasive household cleaners on any Jacuzzi® Whirlpool Bath product.

## DRYING THE AIR BATH

The air bath motor will operate for twenty minutes and then automatically shut off to end the bath, unless power is manually removed by the Normal Mode switch. In either case, twenty minutes after the motor has shut down, the blower will turn on for a one-minute drying cycle to blow out any water remaining in the air channel.

If the bath is used without the motor operating, the one-minute drying cycle may be initiated manually by use of the Normal Mode switch. Turn the switch on and off again as the tub is being drained, and the drying cycle will occur in twenty minutes.

## REPAIRS TO THE SURFACE


Major scratches and gouges that penetrate the acrylic surface will require refinishing. Ask your Jacuzzi® Whirlpool Bath dealer for special instructions. Also see Clean-up After Installation.



# MAINTENANCE

## AIRBATH INTERCONNECTION DIAGRAM

The airbath equipment is shown in the following figure. It shows the only acceptable manner in which the system components may be interconnected for efficient and safe operation. If the equipment is not configured as shown in the figure, the equipment may not operate or it may result in damage to the equipment

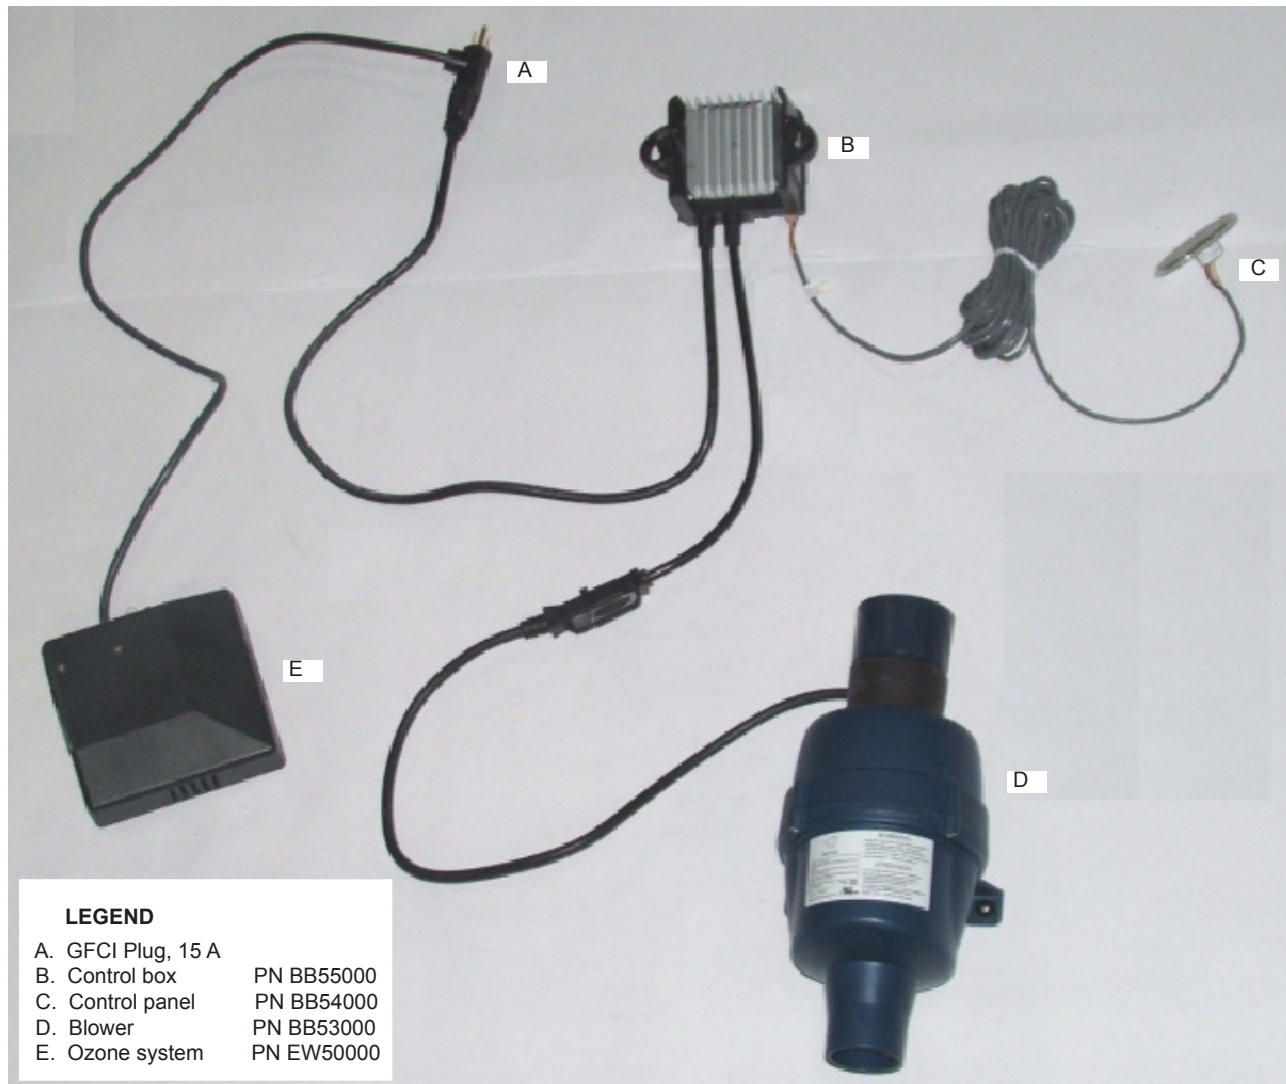

**Figure 7. Airbath Interconnection Diagram**

# AUTHORIZED SERVICE

If you need a referral for a service company near you, or need assistance with operation or maintenance related questions, please call our Service Support Department at 1-800-288-4002. Visit our web site at <http://www.jacuzzi.com/> for products, services, and an on-line copy of these Installation and Operation Instructions.

To find service agent listings for:

Electrical or Mechanical Repairs visit <http://jacuzzi.com/pdf/ASA.PDF>

Finish, Surface, or Shell-Related Repairs visit <http://jacuzzi.com/pdf/AFC.PDF>


Repair Parts or Accessories visit <http://jacuzzi.com/pdf/MPD.PDF>

When requesting service or technical assistance please have available both the model and serial number of your unit. This information can be obtained from the product registration card provided with your unit. If the card has been misplaced, this information can be obtained from the specification/serial number label on the unit itself (for location of specification/serial number label see below).

## BATH PRODUCTS

The label is located on the wall of the bath near the pump/motor.

### SPECIFICATION/SERIAL NUMBER LABEL

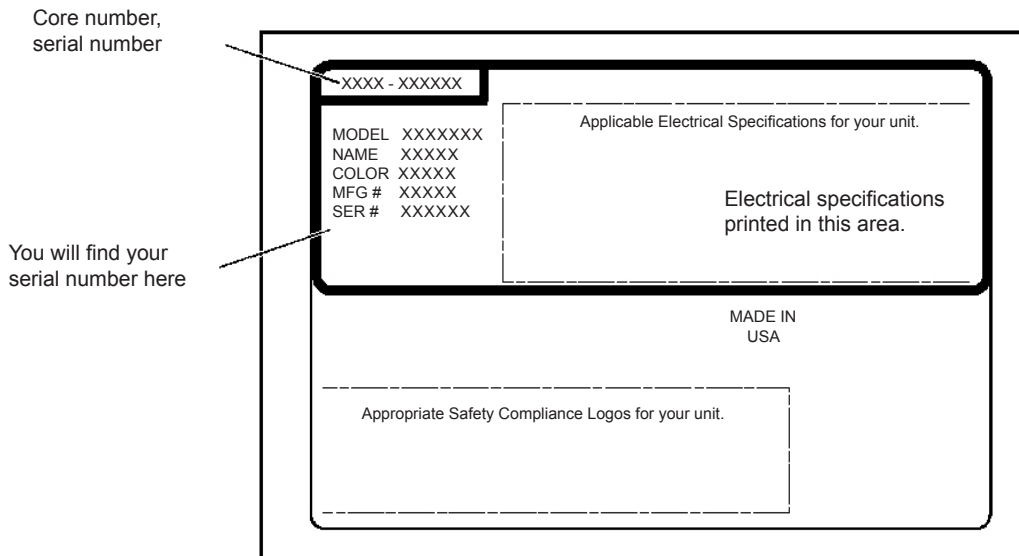

PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

USE INSTALLATION INSTRUCTIONS SUPPLIED WITH PRODUCT.

Jacuzzi® Whirlpool Bath has obtained applicable code (standards) listings generally available on a national basis for products of this type. It is the responsibility of the installer/owner to determine specific local code compliance prior to installation of the product. Jacuzzi® Whirlpool Bath makes no representation or warranty regarding, and will not be responsible for any code compliance.

**Jacuzzi® Whirlpool Bath**

14525 Monte Vista Avenue

Chino, California, 91710



## Limited Lifetime Warranty on Jacuzzi® Branded Baths for the for the Comfort™, Comfort Plus™, Pure Air®, Pure Air® II, and Luxury, Salon™ Spa, and Pure Air® II Collections

### WARRANTY COVERAGE

Jacuzzi® Whirlpool Bath (the "Company") offers the following expressed limited lifetime warranty to the original purchaser of any Jacuzzi® Whirlpool Bath products provided in the Company's Comfort, Comfort Plus, Pure Air®, Pure Air® II, and Luxury™ collections ("Bath") who purchases the Bath for personal or single family residential use ("User"): The Company will repair or replace, at its sole option, the Bath or its equipment in accordance with the following terms and conditions. This warranty does not apply to non-branded Bath products manufactured by the Company.

### LIFETIME WARRANTY ON BATHS

The Company extends to the User of the Bath a non-transferable limited lifetime warranty that the shell will maintain its structural integrity and configuration and be free of water loss due to a defect in the tub shell. This warranty covers only the tub shell and the manufacturer installed pump, jets, controls, and blower against defects in material or workmanship. This warranty does not apply to any display models or to any options or accessories which are covered under our limited ninety (90) day warranty set forth below. Warranty coverage begins on the date the unit was originally purchased by the User and upon receipt by the Company of a completely filled out Warranty Registration Card as described below.

### 2 YEAR LABOR WARRANTY FOR ALL FACTORY INSTALLED COMPONENTS

Our limited labor warranty is for a period of two (2) years from the date the unit was originally purchased by the User, but not more than Three (3) Years from date of manufacture. All factory installed components (e.g., pump, motor, blower, and plumbing) are covered under our labor warranty against failure due to defects in materials and workmanship.

### NINETY DAY (PARTS ONLY) LIMITED WARRANTY ON OPTIONS AND ACCESSORIES

Our limited warranty on options and accessories is for ninety (90) days for parts only. Our warranty covers options and accessories manufactured (e.g., fill spout kits, trim kits, skirts, video monitors, plasma television screens, CD and MP3 players and other music and video devices and optional heaters) against defects in material or workmanship. Warranty coverage begins on the date the option or accessory was originally purchased by the User. These items may be covered by a manufacturer's warranty which may have a longer duration than this limited warranty. Please confirm with the manufacturer the duration of the appropriate warranty for Options and Accessories.

### WARRANTY LIMITATIONS

Our limited warranty does not cover defects, damage, or failure caused by the common carrier, installer, user, or other persons, pets, or rodents, or resulting from, without limitation, any of the following: careless handling (lifting unit by plumbing, abrading finish, etc.) including its own negligence; modification of any type for any reason (including modification to meet local codes); improper installation (including installation not in accordance with instructions and specifications provided with the unit); connections supplied by the installer of the equipment; improper voltage supply or unauthorized electrical modification; misuse; incorrect operation, or lack of proper routine maintenance; operation of the unit without specified minimum amount of water or at inappropriate water temperature; use of abrasive or improper cleaners; or acts of God, such as lightning, floods, earthquakes, etc.

In addition, THE COMPANY WILL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES or losses arising from any cause (e.g., water damage to carpet, ceiling, tiles, marble, loss of use, etc.) including its own negligence; damages to, respecting, or resulting from: plated parts when pool and/or spa chemicals are used in the unit or hard water conditions; optional bath equipment not manufactured by the Company but supplied by Dealer, installer or the Company; the unit's prior usage as an operational display; or defects that should have been discovered before installation.

This limited warranty does not include: labor, transportation, or other costs incurred in the removal and/or reinstallation of the original unit and/or installation of a replacement unit; any costs relating to obtaining access for repair; or loss of use damage, including loss of sales, profit or business advantage of any kind under any circumstances. Bath units are excluded from any warranty coverage if any addition, deletion, or modification of any kind whatsoever has been made to the unit (or to any component). Warranty coverage is provided in the United States of America and Canada only.

### EXCLUSION OF IMPLIED WARRANTIES

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED TOGETHER OR TO THE FULLEST EXTENT ALLOWED BY LAW.

NOTICE: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. There are no warranties applicable to Jacuzzi® Whirlpool Bath products except as expressly stated herein or as implied by applicable state and federal laws. The Company will not be responsible for any statements or representations made in any form that go beyond, are broader than or are inconsistent with any authorized literature or specifications furnished by the Company. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Comfort Series Freestanding Baths  
GR59000 ~ September 2008



Jacuzzi® Whirlpool Bath  
14525 Monte Vista Avenue  
Chino, California 91710

## RETURN OF WARRANTY CARD

The attached Warranty Registration Card MUST be filled out by the purchaser within thirty (30) days from purchase and received by Jacuzzi® Whirlpool Bath in order for this warranty to become effective.

### RESPONSIBILITIES OF OTHERS

Inspecting the unit prior to installation is the responsibility of the installer or building contractor who acts on behalf of the User. They are responsible for ensuring the unit is free of defect or damage. Notices are placed on and in the unit and on the shipping carton advising the installer of this responsibility. In the event of a problem, the unit must not be installed. The Company is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing (including proper water testing) prior to installation.

Damage occurring in transit is the responsibility of the carrier. The User or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter.

It is the responsibility of the installer, building contractor, or User to provide access for service. The Company is not responsible for any costs relating to obtaining access for repair. The User shall bear such costs and, if appropriate, must seek recovery from the installer.

Damage occurring to the unit during installation is the responsibility of the installer and/or building contractor and damage occurring thereafter is the responsibility of the user.

Failure of any optional equipment is the sole responsibility of the equipment manufacturer except as provided above and shall not extend to or apply to any replacement parts for the Options and Accessories. Any replacement parts shall be covered by the original equipment manufacturer.

The Distributor or Dealer is responsible for knowing local code requirements and notifying the installing contractor and/or User of these requirements at the time of purchase. The Company is not responsible for costs to modify any product to obtain any code approval, such as city, county, or state building codes in U.S.A. or municipal or provincial codes in Canada.

### WARRANTY SERVICE

For the customer's benefit, the Company maintains a list of independent service personnel to perform required warranty service repairs. Such firms are not agents or representatives of the Company and cannot bind the Company by words or conduct.

The Company will provide the warranty service described above when the following conditions have been met: the failure is of the nature or type covered by the warranty; the User has informed an Authorized Jacuzzi® Whirlpool Bath Service Agent or Warranty Service Department Representative of the nature of the problem during the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; an authorized independent service person or Company representative has been permitted to inspect the unit during regular business hours within a reasonable time after the problem was reported by the User.

In order to obtain warranty service, contact the nearest Jacuzzi® Whirlpool Bath Authorized Service Agent ([http://www.jacuzzi.com/trade/bath\\_product\\_support/repairs/](http://www.jacuzzi.com/trade/bath_product_support/repairs/)) for listing. Describe the problem and the Authorized Service Agent will inspect the unit and provide the required warranty service. If you are unable to contact a Jacuzzi® Whirlpool Bath Authorized Service Agent, call or write:

### Jacuzzi® Whirlpool Bath

Warranty Service Department  
14525 Monte Vista Avenue  
Chino, California 91710  
Call: 1-(800) 288-4002

To obtain warranty replacement for factory-installed components for Company supplied options and accessories manufactured and supplied by the Company, call or write the above. Provide a description of the problem and proof of purchase. You will be instructed how to obtain replacements and where to return, at your expense, the failed component(s), option(s), or accessory(ies).

All replacement parts, equipment, and repairs shall assume the remaining warranty period of the part(s) replaced.

The Company's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates the Company's warranty obligation.

To register your product, please go to our web site, [jacuzzi.com](http://jacuzzi.com). Click on Bath and Showers, then select ONLINE WARRANTY REGISTRATION at the top of the page. You will then be prompted to enter your product Serial Number, followed by your warranty registration information.

Ninety-Day	Parts Only	Limited Warranty	On	Accessory(ies)
------------	------------	------------------	----	----------------

Ninety-Day	Parts Only	Limited Warranty	On	Accessory(ies)
------------	------------	------------------	----	----------------

JACUZZI® WHIRLPOOL BATH  
GR59000

This card must be filled out and returned to the address printed on the other side within thirty (30) days from date of purchase in order for this warranty to become effective.

Purchaser's Name \_\_\_\_\_

Purchaser's Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Model Name \_\_\_\_\_

Serial Number \_\_\_\_\_

Dealer's Name \_\_\_\_\_

Dealer's Address \_\_\_\_\_

- How did you first hear about this Jacuzzi® product?  
☐ Advertisement ☐ Article in Magazine/Newspaper  
☐ Visited Dealer/Plumbing Supplier ☐ Yellow Pages  
☐ Builder/Plumber/Remodeler ☐ Decorator/Architect  
☐ Visited Retailer/Home Center Store  
☐ Word of Mouth... Friend/Relative/Acquaintance  
☐ Other (Please Describe) \_\_\_\_\_
- Who first gave you specific information about this product (specifications, prices, etc.)?  
☐ Dealer/Plumbing Supplier ☐ Builder ☐ Remodeler  
☐ Plumbing Contractor ☐ Retailer/Home Center Store  
☐ Decorator/Architect ☐ Already Installed  
3. What was the main reason for purchase?  
☐ Styling ☐ Warranty Service ☐ Product Features  
☐ Brand Name ☐ Price ☐ Hydrotherapy  
☐ Home Resale  
☐ Other \_\_\_\_\_
- Who finally decided which product you would buy?  
☐ Self ☐ Spouse ☐ Self and Spouse Together  
☐ Other Family Member ☐ Designer/Architect  
☐ Builder/Plumber/Remodeler ☐ Already Installed  
5. Who installed? ☐ Already installed/New Home  
☐ Contractor/Plumber when remodeling  
☐ Self/Spouse when remodeling  
☐ Other \_\_\_\_\_
- What is the current market value of this property?  
6. Please estimate \$ \_\_\_\_\_
- What is the age of the head of the household? \_\_\_\_\_ years  
8. What other manufacturers did you consider? ☐ Aqua Glass  
☐ Eiler ☐ Lasco ☐ Price Pfister  
☐ Kohler ☐ American Standard ☐ Sterling  
☐ Other (Specify) \_\_\_\_\_
- How long did you shop before purchasing unit?  
☐ 1 day ☐ 2 months- 6 months  
☐ 2-7 days ☐ 6 months- 1 year  
☐ 1 week- 2 weeks ☐ 1 year- 2 years  
☐ 2 weeks- 4 weeks ☐ +2 years  
☐ 1 month- 2 months
- Approximately how long have you lived in this home? \_\_\_\_\_
- Please indicate, approximately, the total annual income of your household.  
☐ Up to \$24,999 ☐ \$50,000 to \$74,999  
☐ \$25,000 to \$29,999 ☐ \$75,000 to \$99,999  
☐ \$30,000 to \$39,999 ☐ \$100,000 to \$149,999  
☐ \$40,000 to \$49,999 ☐ \$150,000 and Above
- Was your purchase process?  
☐ Very easy ☐ Easy ☐ Difficult ☐ Very Difficult  
13. How technically aware were you of the patented Jacuzzi® jet system prior to your purchase?  
☐ Not aware ☐ Somewhat aware ☐ Very aware



WARRANTY  
REGISTRATION CARD