



Read all safety and maintenance tips in this Owner's Manual. Garage doors are the largest moving objects in your home. Proper installation, operation, maintenance, and testing of the garage door and electric garage door opener are necessary to provide safe, trouble-free operation. An improperly adjusted garage door or electric door opener can exert deadly force when the door closes.

Warnings

Read all safety and warning labels attached to the garage door and springs.

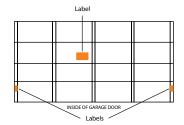

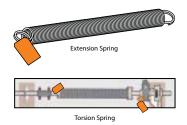



High spring tension can cause serious injury or death. Do not attempt to remove, repair, or adjust any springs, any red colored fasteners, cable or the hardware to which the red colored fasteners are attached. Removal, adjustment, or repair must be made by a trained garage door technician.



Keep fingers away from garage door section joints and moving parts to reduce chance of finger or hand injury.

Do not attempt to manually operate the garage door without the use of attached gripping points and/or pull cord.

NOTICE

Attempting to manually open a garage door equipped with an electric opener may result in damage to the garage door. Most electric openers prevent the garage door from being opened manually. In the event of emergency, power outage, or during monthly safety inspections, garage doors with attached electric openers must be released using the emergency release handle. To release opener and open door manually, see Operation instructions on page 2.



Additional parts can overload the springs causing serious injury or death. Do not add additional parts to the door. Every garage door has been specifically designed to bear the weight of the door as supplied from the manufacturer. Failure to comply with these instructions voids the warranty.



Garage doors equipped with electric openers should not have pull cords attached directly to the garage door.

Garage door may be damaged and people may be injured if pull cord is not removed.

NOTICE

Damage to the garage door due to an improperly installed electric opener, improperly adjusted electric opener or improper bracing of top section is not covered by the garage door warranty.

A WARNING

♠ Garage door safety is your responsibility. Garage doors, garage door openers, and electric transmitters are not toys. Careless operation or allowing children to use garage door controls can lead to serious injury or death. Discuss garage door safety with your children, explain the dangers and outline emergency procedures in the event of an accident.

- ⚠ Contact with a moving door could cause serious injury. Teach children to keep their hands and fingers clear of the garage door, section joints, hinges, track, springs, and other door parts during operation.
- ⚠ Do not stand or walk under a moving door. Do not let children or adults play "beat the door" as the door closes. This action is dangerous and can result in serious injury or death.
- ▲ Do not let children play with or use electric transmitters. Always place and store them out of reach of children.

- ♠ Pushbutton wall controls should be out of the reach of children. Mount at least ten feet away from the door and at least five feet from the floor and where the user can clearly see the moving garage door.
- Keep garage door in sight at all times until it has completely stopped moving, especially when using a pushbutton wall control or electric transmitter to operate the door.
- A Keep the door area clear at all times. Teach children never to play under or near an open garage door.