



**PROJECT
SOURCE.**

Project Source® is a registered trademark
of LF, LLC. All rights reserved.


ITEM #0394607

FOYER PENDANT

MODEL #FD11-074

Français p. 8

Español p. 15

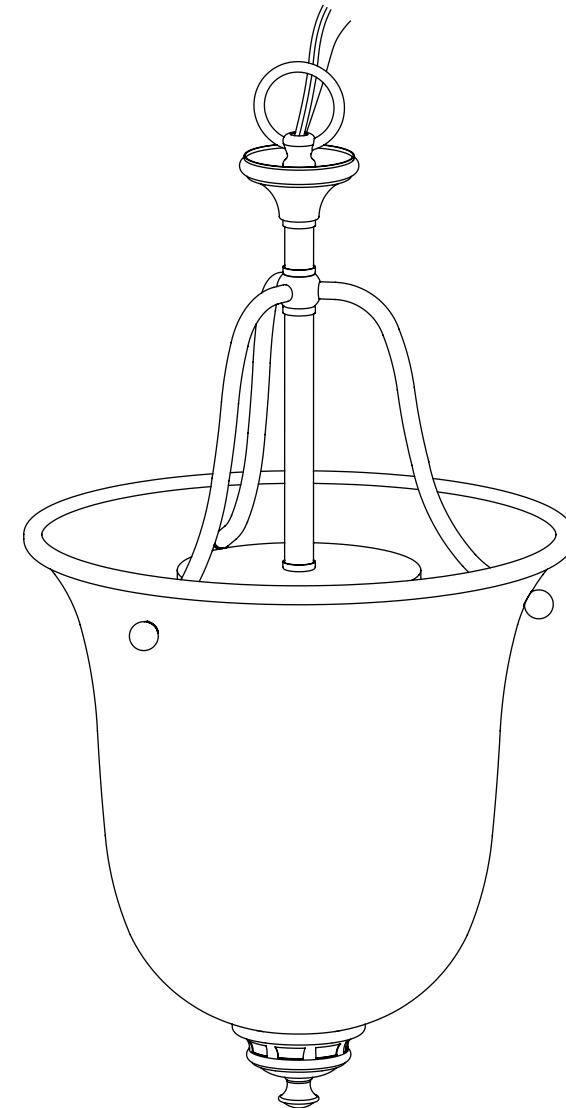

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Intertek




Questions, problems, missing parts? Before returning to your retailer, call our customer
service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday,
8 a.m. - 5 p.m., EST, Friday.

AB14607

Lowes.com




PACKAGE CONTENTS

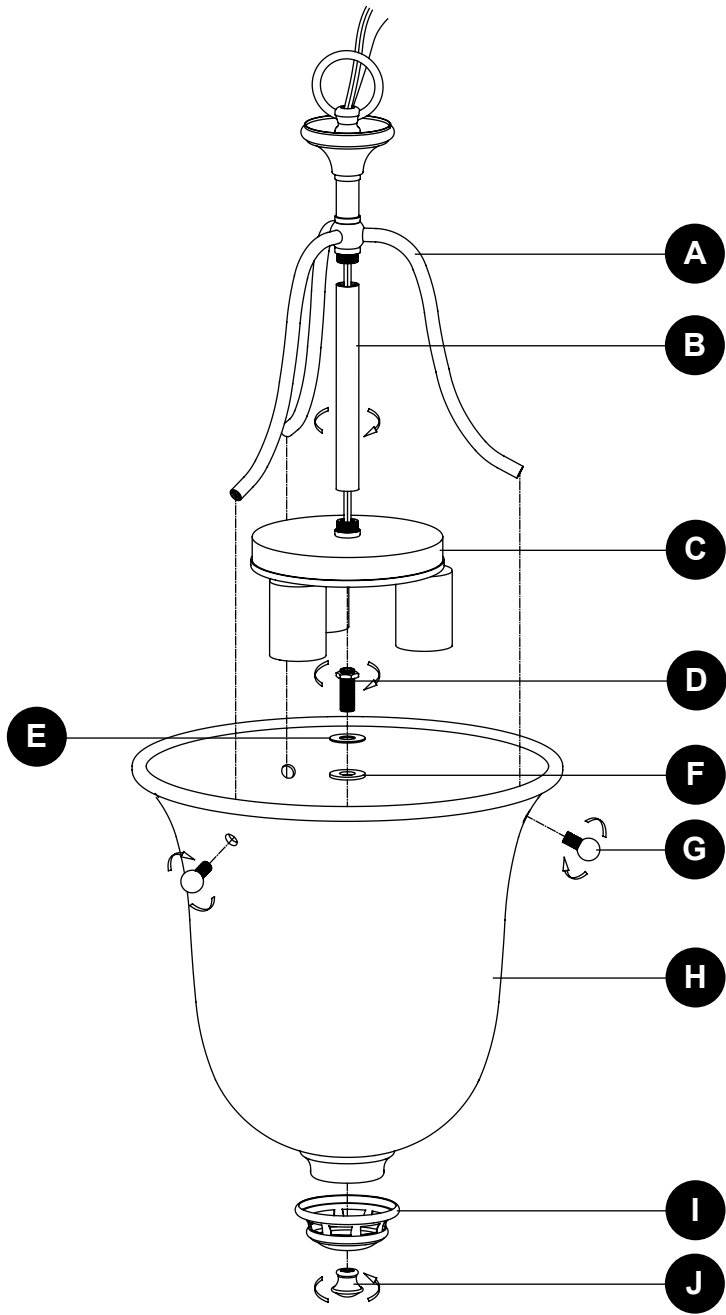

PART	DESCRIPTION	QUANTITY
A	Steel circle	1
B	Pole	1
C	Fixture	1
D	Threaded nipple	1
E	Washer (preassembled to Theaded nipple (D))	1
F	Rubber ring (preassembled to Theaded nipple (D))	1
G	Ball nut (preassembled to Steel circle (A))	3
H	Glass shade	1
I	Plate (preassembled to Theaded nipple and (D))	1
J	Finial (preassembled to Theaded nipple and (D))	1

HARDWARE CONTENTS (shown actual size)

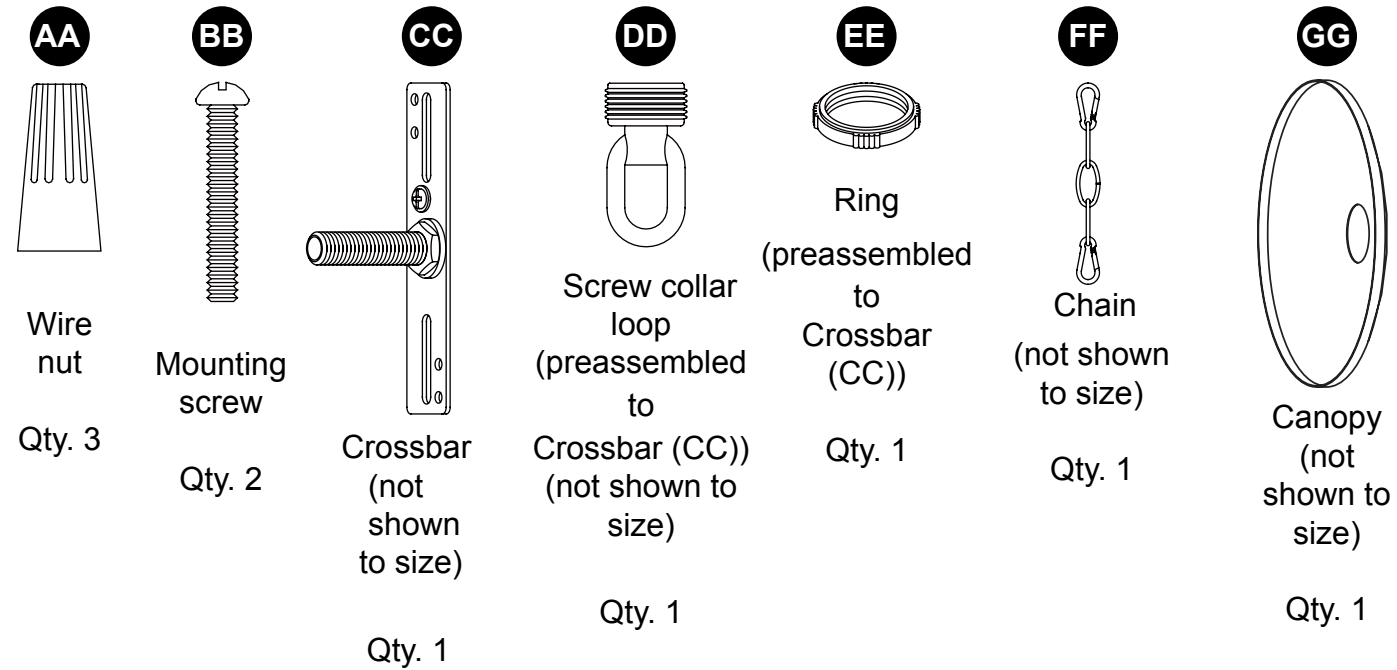

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 35 minutes


 
 
 
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.

ASSEMBLY INSTRUCTIONS

1. Remove ring (EE) from the preassembled screw collar loop (DD). Then, attach crossbar (CC) to outlet box (not included) using mounting screws (BB).
Note: The threaded nipple should protrude outward.

Hardware Used

BB	Mounting screw		x 2
CC	Crossbar		x 1
DD	Screw collar loop		x 1
EE	Ring		x 1

 
 



2. Choose the desired length for chain (FF), using pliers (not included) to remove links from chain (FF) as needed.
Note: The top and bottom section of chain (FF) are required.



Install pole (B) onto the steel circle (A), then install assembly to the fixture (C). Open the top link of the chain (FF) and attach it to the screw collar loop (DD). Pass the chain (FF) through ring (EE) and canopy (GG). Open the bottom link of the chain (FF) and attach it to the steel circle (A). Then weave the fixture wire and the fixture ground wire through the chain (FF), ring (EE), canopy (GG), screw collar loop (DD) and threaded nipple of crossbar (CC).

Lift canopy (GG) up over crossbar (CC). Adjust the screw collar loop (DD) on the crossbar (CC) as needed until the canopy (GG) is flush against the ceiling once tightened with ring (EE).

Note: Do not install canopy (GG) or ring (EE) yet!

Hardware Used

CC	Crossbar		x 1
DD	Screw collar loop		x 1
EE	Ring		x 1
FF	Chain		x 1
GG	Canopy		x 1

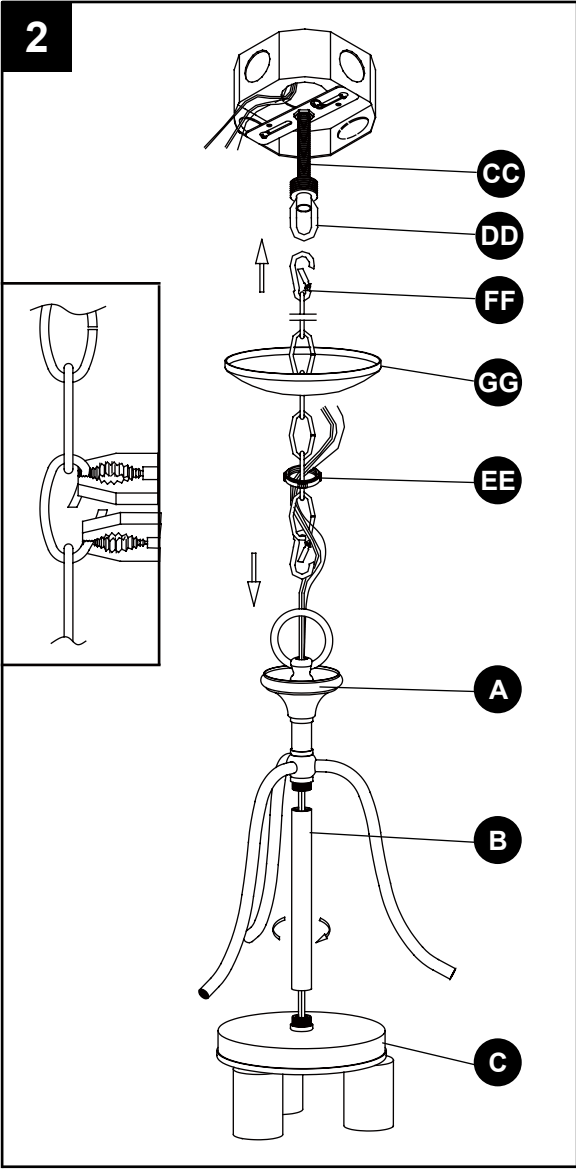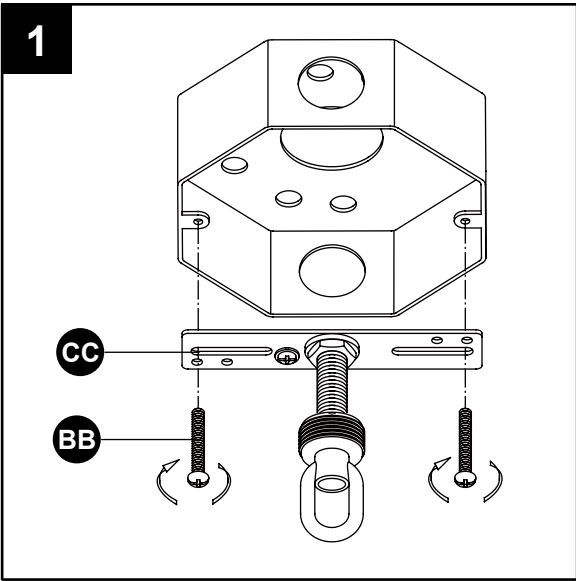

ASSEMBLY INSTRUCTIONS





3. Pull out the supply wires and supply ground wire from the outlet box. Strip 3/4 in. of insulation from wire ends.
Make wire connections:
• Connect the smooth wire (marked) from fixture to the black supply wire with a wire nut (AA).
• Connect the ridged wire (unmarked) from fixture to the white supply wire with a wire nut (AA).
• Attach the fixture ground wire to the crossbar (CC) with the preassembled green ground screw. Then connect it to the supply ground wire with a wire nut (AA). Tape wire nuts (AA) and wires together with electrical tape (not included) and carefully tuck wires back into the outlet box.

Hardware Used




AA	Wire nut		x 3
-----------	----------	---	-----

4. Lift canopy (GG) up over crossbar (CC), securing by tightening ring (EE) onto the screw collar loop (DD).

   Hardware Used


CC	Crossbar		x 1
DD	Screw collar loop		x 1
EE	Ring		x 1
GG	Canopy		x 1

5. Install light bulbs (not included). Use three 60-watt max. standard-base bulbs or three 13-watt standard-base CFL bulbs.

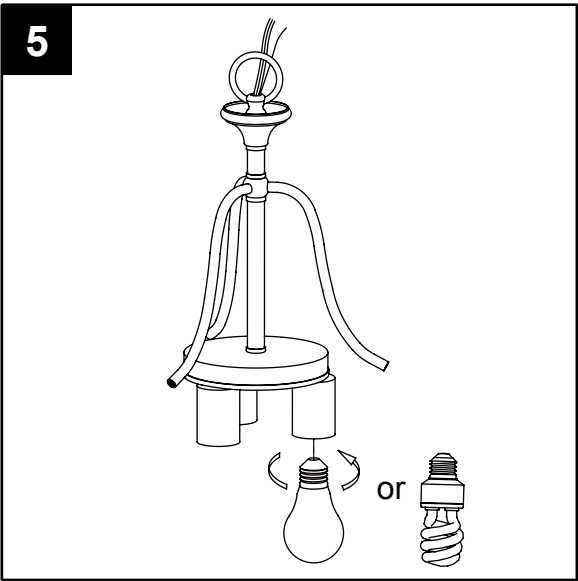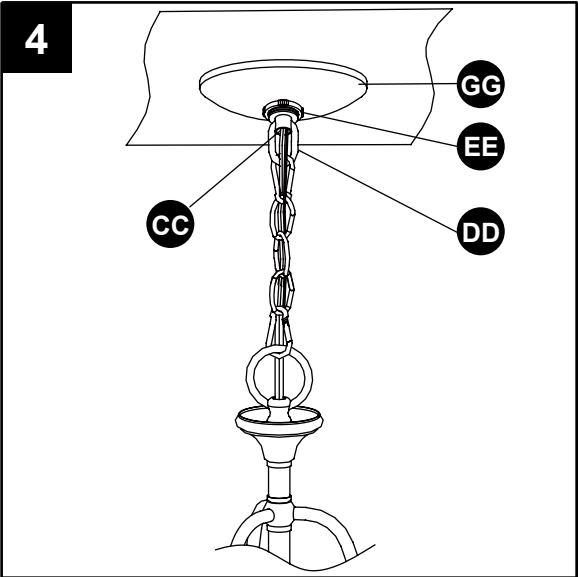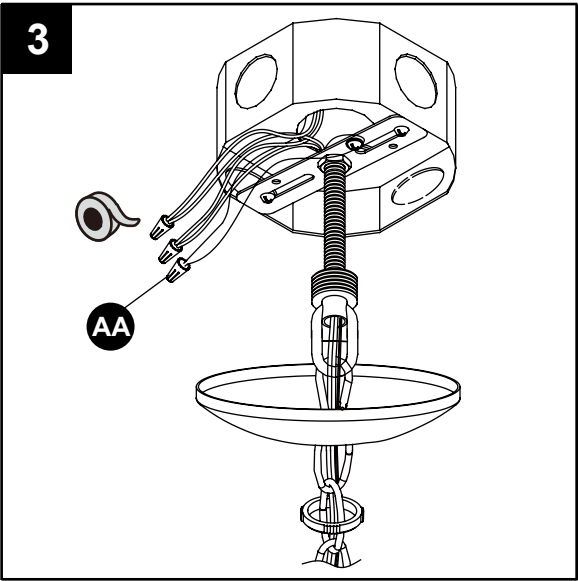

ASSEMBLY INSTRUCTIONS

6. Remove ball nuts (G) from the steel circle (A) and remove washer (E), rubber ring (F), plate (I), finial (J) from the threaded nipple (D). Install threaded nipple (D), washer (E) and rubber ring (F) through glass shade (H), securing with plate (I) and finial (J). Then install glass shade onto steel circle (A) with ball nuts (G).

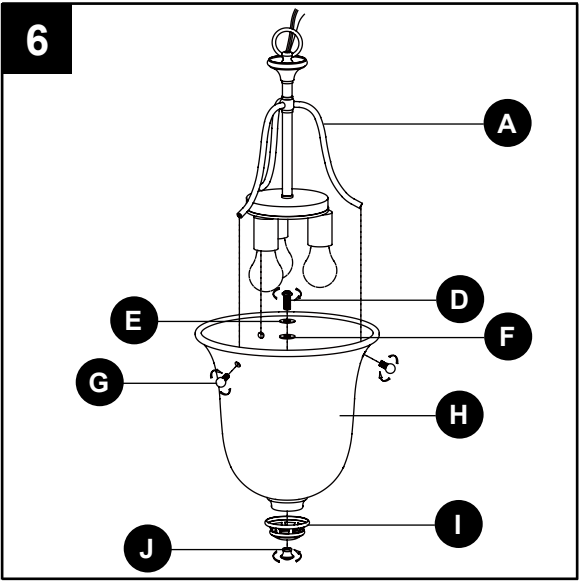

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Wire nut	375-022000
BB	Mounting screw	109-042600

