


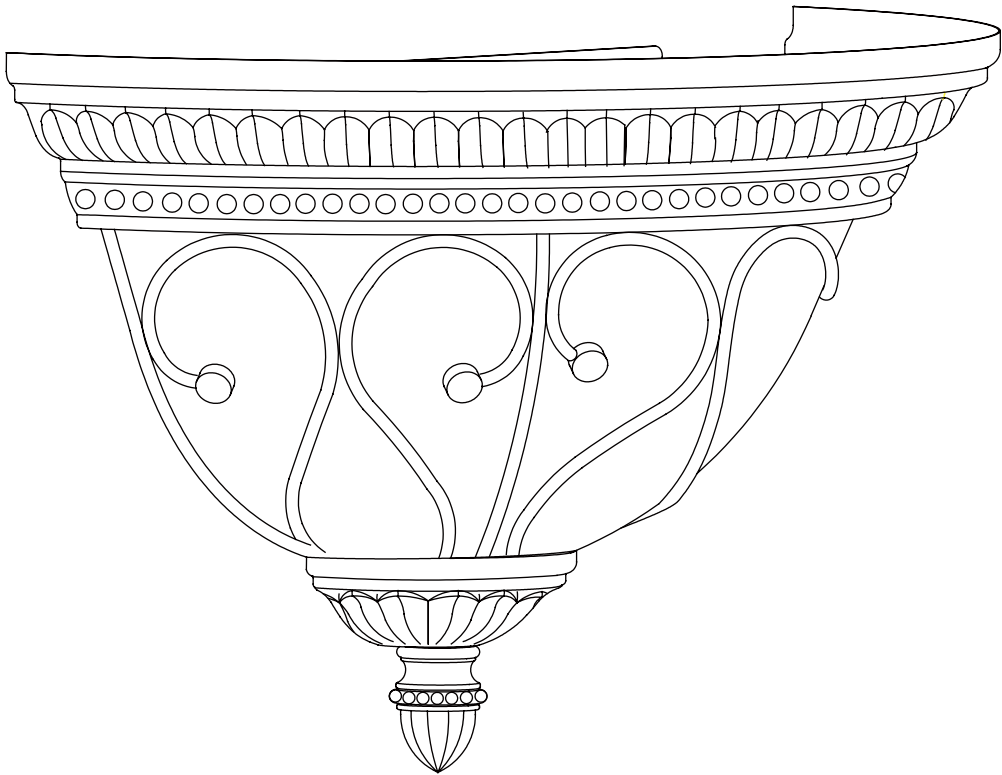

PORTFOLIO® and PORTFOLIO & Design™ are trademarks or registered trademark of LF, LLC. All rights reserved.

ITEM #0435035
WALL SCONCE
MODEL #FB12-021B
Français p. 8
Español p. 15



ATTACH YOUR RECEIPT HERE


Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.




PACKAGE CONTENTS

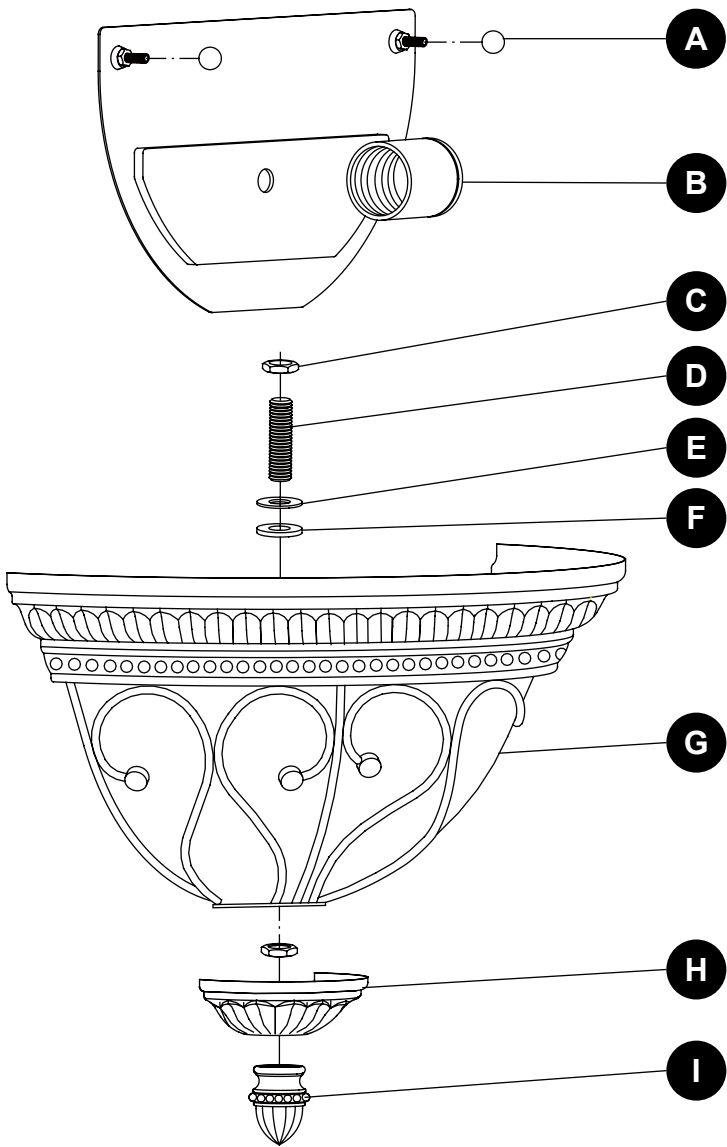

PART	DESCRIPTION	QUANTITY
A	Decorative nut (preassembled to Fixture (B))	2
B	Fixture	1
C	Nut (preassembled to Threaded nipple (D))	2
D	Threaded nipple	1
E	Gasket (preassembled to Threaded nipple (D))	1
F	Rubber ring (preassembled to Threaded nipple (D))	1
G	Glass shade	1
H	Cap (preassembled to Threaded nipple (D))	1
I	Knob (preassembled to Threaded nipple (D))	1

HARDWARE CONTENTS (shown actual size)

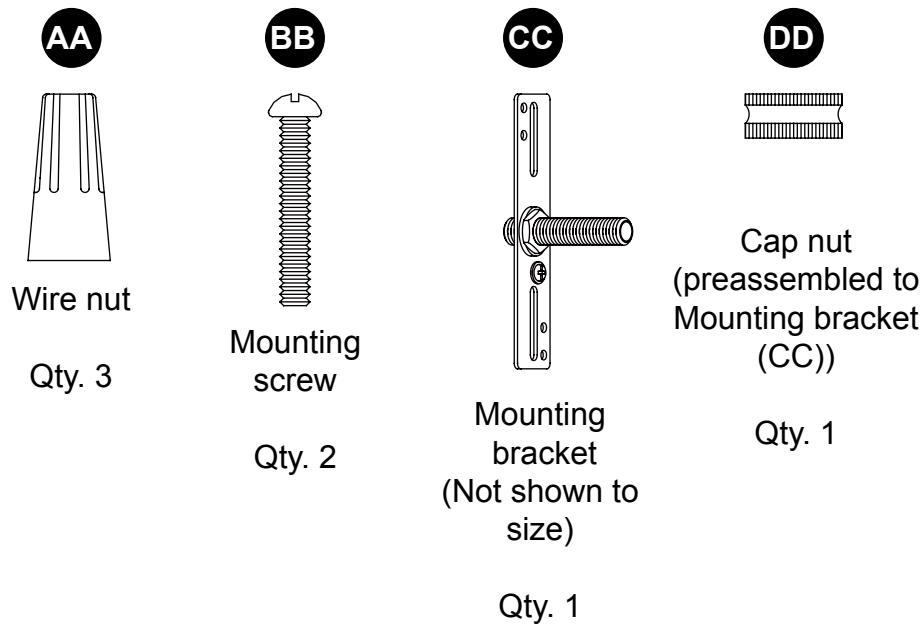

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90° C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes


 
 
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.


Helpful Tools (not included): Wire strippers.

ASSEMBLY INSTRUCTIONS


1. Remove cap nut (DD) from mounting bracket (CC). Attach mounting bracket (CC) to the outlet box (not included) with mounting screws (BB).
Note: Preassembled threaded rod on mounting bracket (CC) should protrude away from outlet box.

Hardware Used

BB	Mounting screw		x 2
CC	Mounting bracket		x 1
DD	Cap nut		x 1

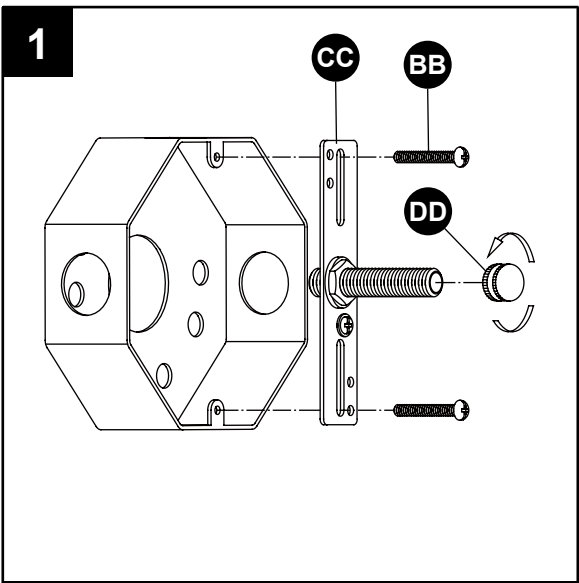


2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

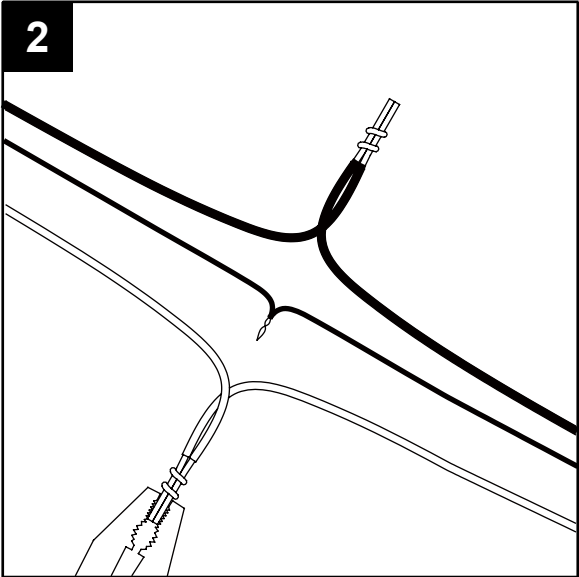

3. Attach wire nuts (AA). Tape wire nuts (AA) and wires together.


Hardware Used

AA	Wire nut		x 3
----	----------	---	-----

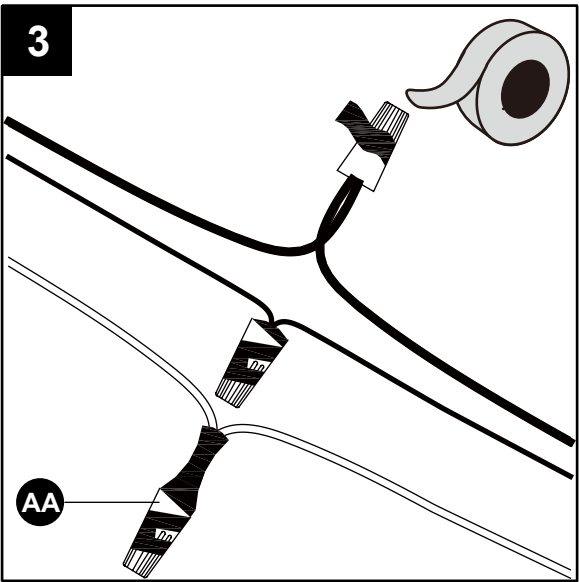



ASSEMBLY INSTRUCTIONS


4. Remove knob (I), cap (H), and nut (C) from threaded nipple (D). Tighten the remaining nut (C) as needed, adjusting gasket (E) and rubber ring (F) as needed. Install glass shade (G) onto the threaded nipple (D), securing with previously removed nut (C). Replace cap (H) and knob (I) onto threaded nipple (D).

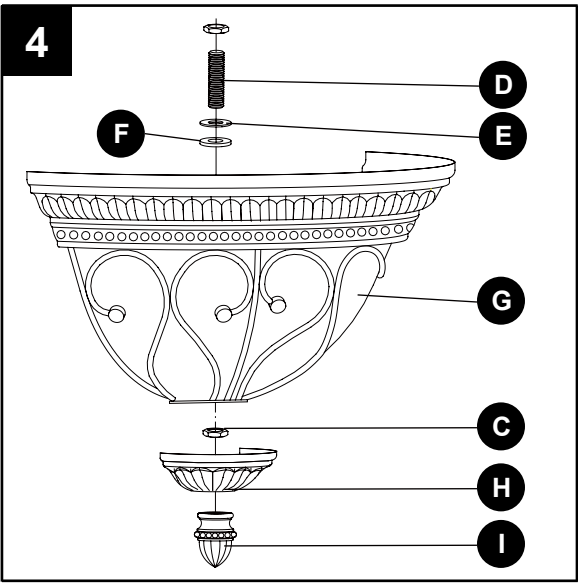


5. Place fixture (B) onto mounting bracket (CC), then secure with previously removed cap nut (DD).

 Hardware Used

CC	Mounting bracket		x 1
DD	Cap nut		x 1

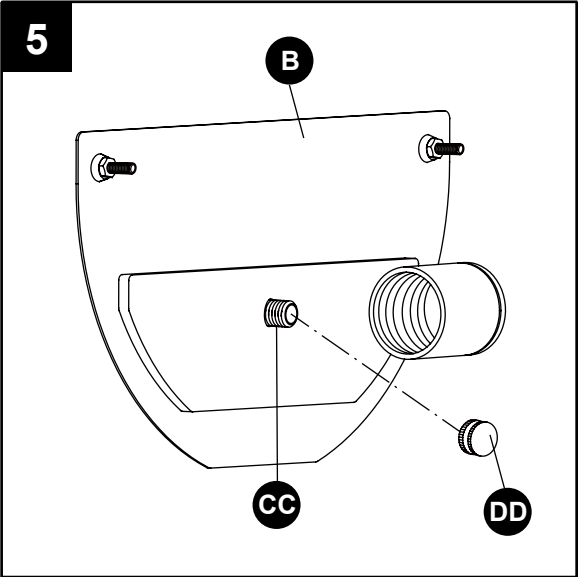


6. Install light bulb (not included). Use 60-watt max. standard-base incandescent bulb or halogen/CFL/LED equivalent.

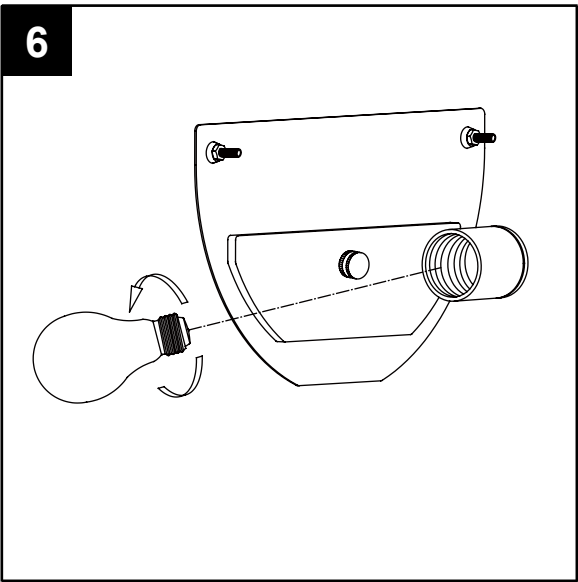

ASSEMBLY INSTRUCTIONS

7. Place the glass shade (G) onto the fixture (B), then secure with decorative nuts (A).

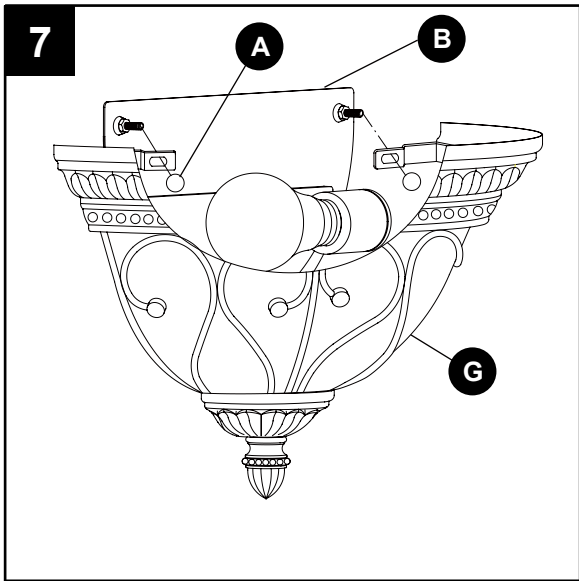

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Wire nut	375-022000
BB	Mounting screw	109-042600
CC	Mounting bracket	139-103009
DD	Cap nut	110-130600

