



Portfolio® is a registered trademark  
of LF, LLC. All Rights Reserved.


ITEM #0589520

## MINI PENDANT

MODEL #FD13-207

Français p. 8

Español p. 15

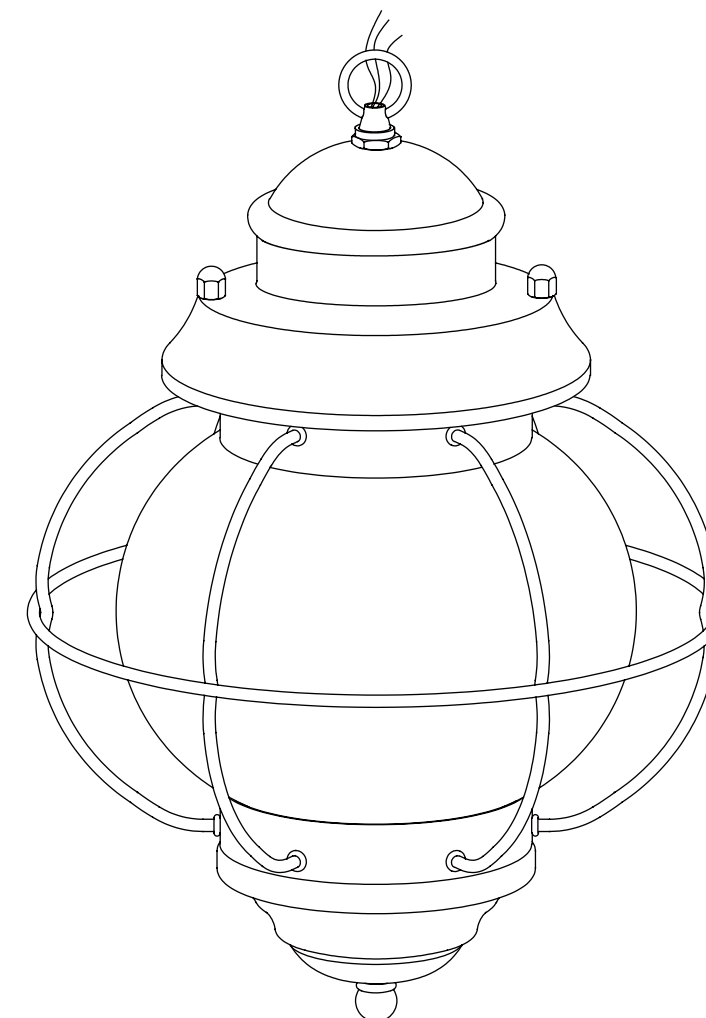

### ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




Intertek



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

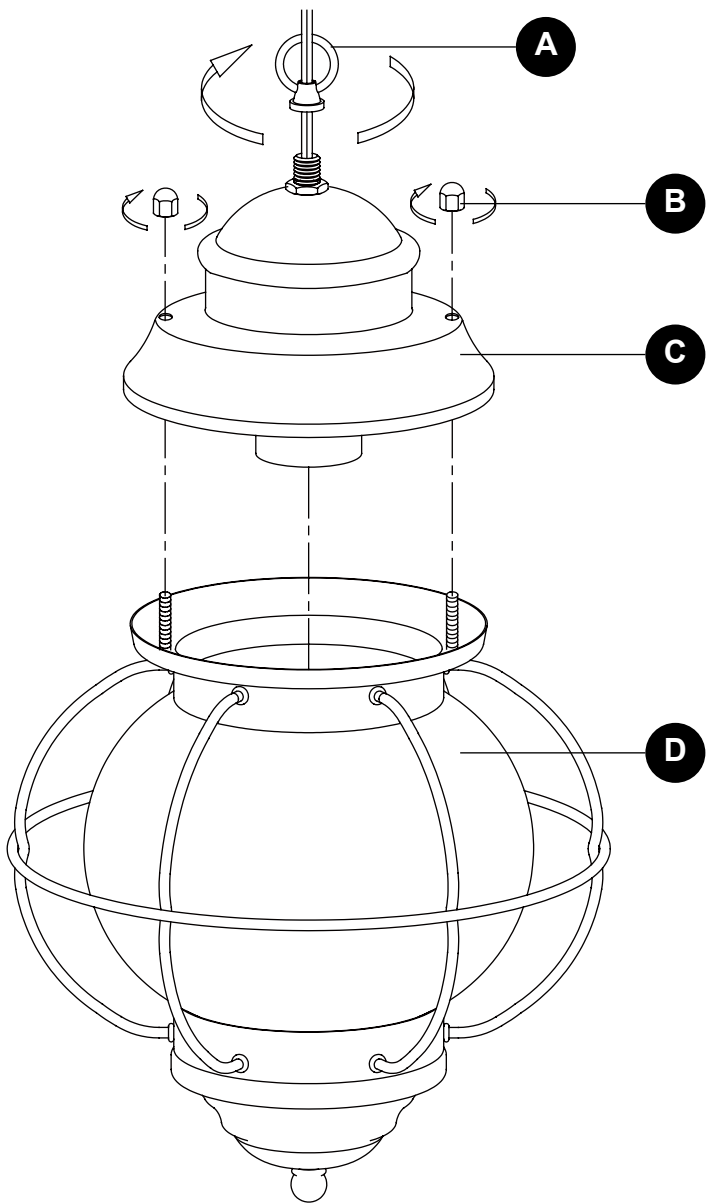

| PART | DESCRIPTION                               | QUANTITY |
|------|---|----------|
| A    | Flying ring (preassembled to Fixture (C)) | 1        |
| B    | Cap nut (preassembled to Fixture (C))     | 2        |
| C    | Fixture                                   | 1        |
| D    | Shade (preassembled to Fixture (C))       | 1        |

HARDWARE CONTENTS (shown actual size)

| AA       | BB             | CC                           | DD  | EE                                   | FF  | GG                         |
|----------|----------------|------------------------------|---|--------------------------------------|---|----------------------------|
|          |                |                              |   |                                      |   |                            |
| Wire nut | Mounting screw | Crossbar (not shown to size) | Screw collar loop (preassembled to Crossbar (CC)) (not shown to size) | Ring (preassembled to Crossbar (CC)) | Chain (preassembled to Crossbar (CC)) (not shown to size) | Canopy (not shown to size) |
| Qty. 3   | Qty. 2         | Qty. 1                       | Qty. 1  | Qty. 1                               | Qty. 1  | Qty. 1                     |

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes


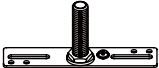
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.

ASSEMBLY INSTRUCTIONS






1. Remove chain (FF), ring (EE) and screw collar loop (DD) from preassembled threaded nipple on crossbar (CC). Then, attach crossbar (CC) to outlet box (not included) using mounting screws (BB).  
**Note:** The threaded nipple should protrude outward.



Hardware Used

|           |                |   |     |
|-----------|----------------|---|-----|
| <b>BB</b> | Mounting screw |  | x 2 |
| <b>CC</b> | Crossbar       |  | x 1 |

2. Attach screw collar loop (DD) to the threaded nipple of crossbar (CC). Choose the length of the chain (FF) you need.  
**Note:** The top and bottom section of chain (FF) are required.  
Open the top section of the chain (FF) and attach it to the screw collar loop (DD). Pass the chain (FF) through canopy (GG) and ring (EE). Then weave the fixture wire and the fixture ground wire through the chain (FF), ring (EE) and canopy (GG). then thread the fixture wire and fixture ground wire through the screw collar loop (DD) and threaded nipple on crossbar (CC).

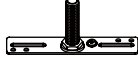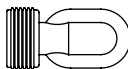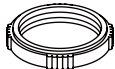Hardware Used


|           |                   |   |     |
|-----------|-------------------|---|-----|
| <b>CC</b> | Crossbar          |  | x 1 |
| <b>DD</b> | Screw collar loop |  | x 1 |
| <b>EE</b> | Ring              |  | x 1 |
| <b>FF</b> | Chain             |  | x 1 |
| <b>GG</b> | Canopy            |  | x 1 |

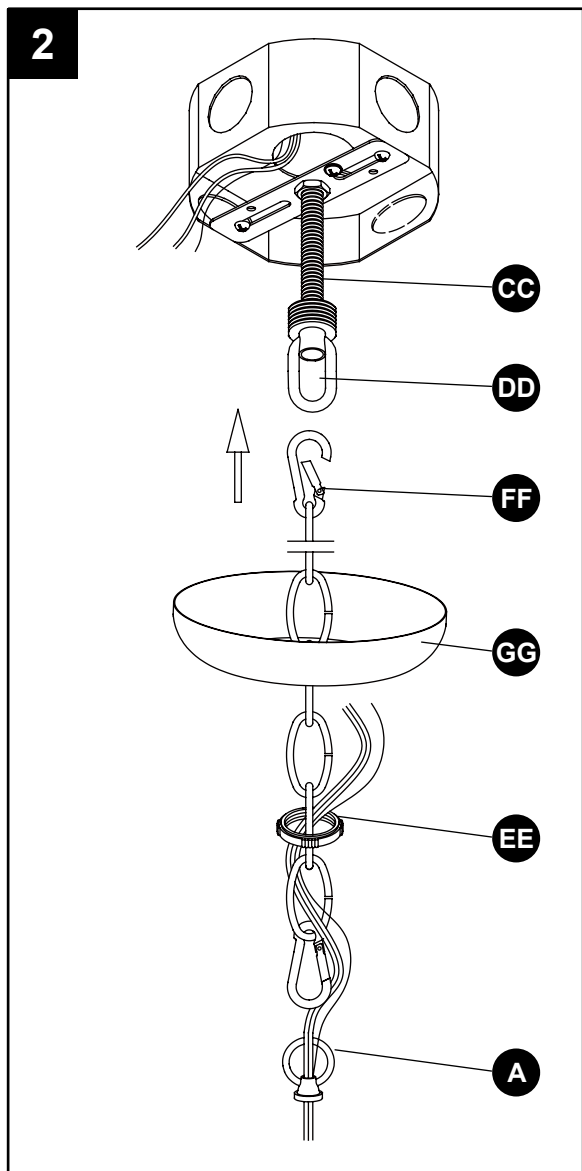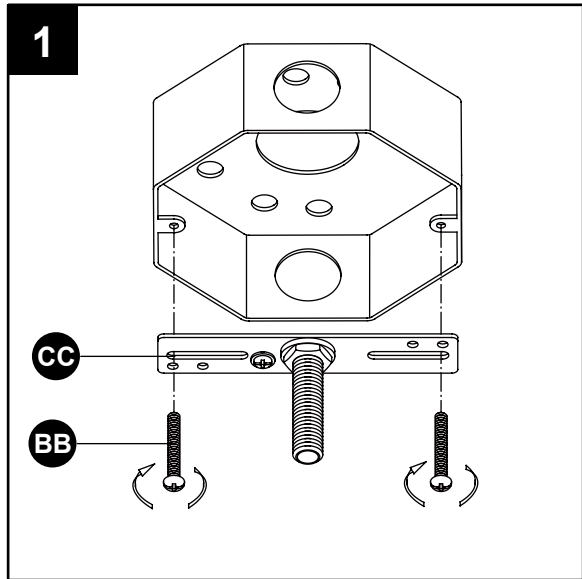

ASSEMBLY INSTRUCTIONS

3. Pull out the supply wires and supply ground wire from the outlet box. Strip 3/4 in. of insulation from wire ends.  
Make wire connections:  
• Connect the smooth wire (marked) from fixture to the black supply wire with a wire nut (AA).  
• Connect the ridged wire (unmarked) from fixture to the white supply wire with a wire nut (AA).  
• Attach the fixture ground wire to the crossbar (CC) with the preassembled green ground screw. Then connect it to the supply ground wire with a wire nut (AA). Tape wire nuts (AA) and wires together with electrical tape (not included) and carefully tuck wires back into the outlet box.

Hardware Used
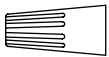
|           |          |   |     |
|-----------|----------|---|-----|
| <b>AA</b> | Wire nut |  | x 3 |
|-----------|----------|---|-----|





4. Secure the flying ring (A) to the fixture (C). Open the bottom section of the chain (FF) and attach it to the flying ring (A).




Hardware Used

|           |       |   |     |
|-----------|-------|---|-----|
| <b>FF</b> | Chain |  | x 1 |
|-----------|-------|---|-----|

5. Tighten ring (EE) onto screw collar loop (DD) to secure canopy (GG) over crossbar (CC).


Hardware Used
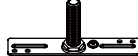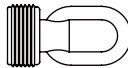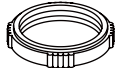
|           |                   |   |     |
|-----------|-------------------|---|-----|
| <b>CC</b> | Crossbar          |  | x 1 |
| <b>DD</b> | Screw collar loop |  | x 1 |
| <b>EE</b> | Ring              |  | x 1 |
| <b>GG</b> | Canopy            |  | x 1 |

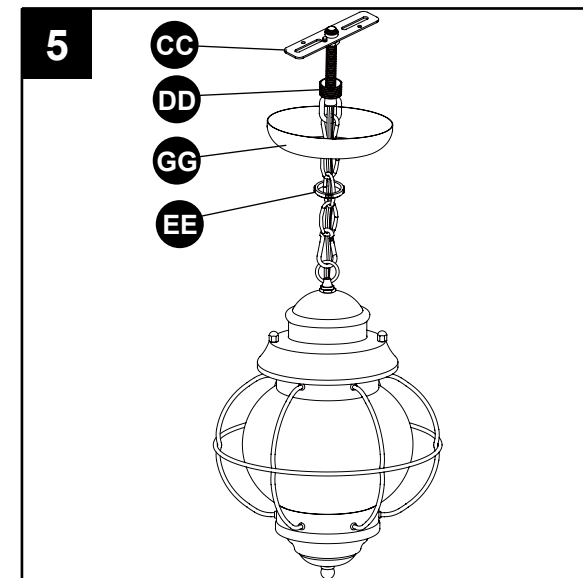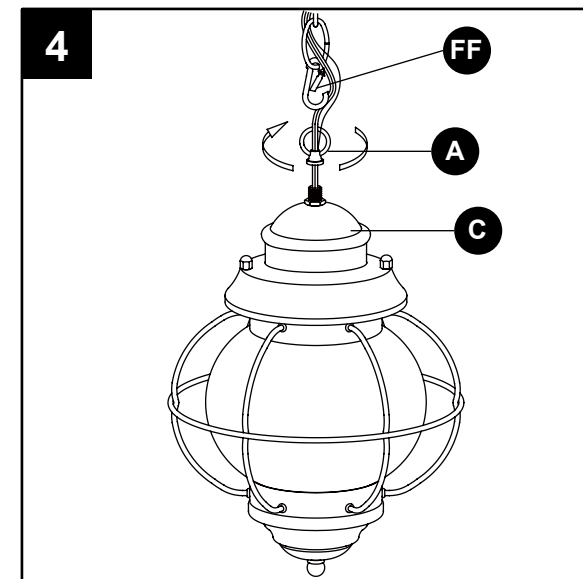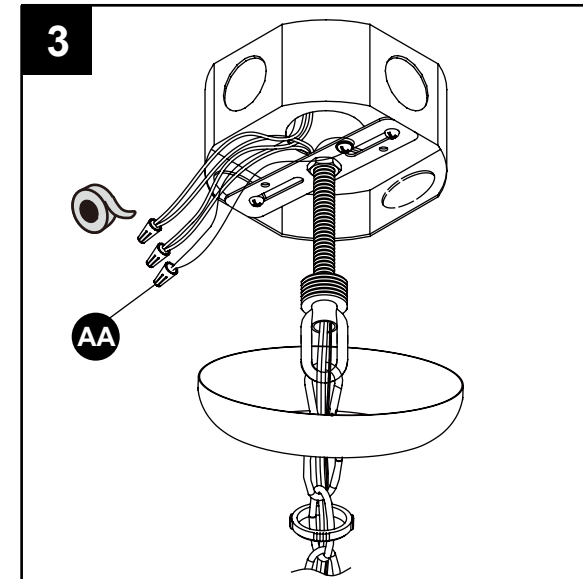

ASSEMBLY INSTRUCTIONS

6. Remove cap nuts (B) from the shade (D). Install light bulbs (not included). Use one 60-watt max. standard-base incandescent bulb or one 13-watt standard-base CFL. Replace shade (D) onto fixture (C), securing with cap nuts (B).

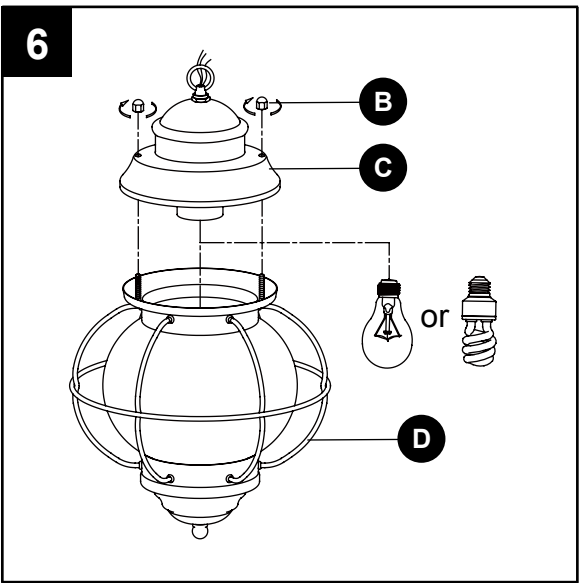

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

| PROBLEM  | POSSIBLE CAUSE  | CORRECTIVE ACTION  |
|--|---|--|
| Bulb won't light.  | 1. Bulb is burned out.<br>2. Power is off.<br>3. Faulty wire connection.<br>4. Faulty switch. | 1. Replace light bulb.<br>2. Make sure power supply is on.<br>3. Check wiring.<br>4. Test or replace switch. |
| Fuse blows or circuit breaker trips when light is turned on. | Crossed wires or power wire is grounding out.   | Check wire connections.  |


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

| PART | DESCRIPTION    | PART #     |
|------|----------------|------------|
| AA   | Wire nut       | 375-022000 |
| BB   | Mounting screw | 109-042600 |

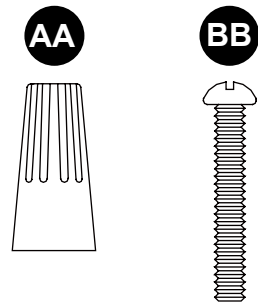

Printed in China  
Portfolio® is a registered  
trademark of LF, LLC.  
All rights reserved.