

ATTACH YOUR RECEIPT HERE


Serial Number _____

Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-888-919-0070, 8 a.m. - 5 p.m., EST, Monday - Friday.

PACKAGE CONTENTS

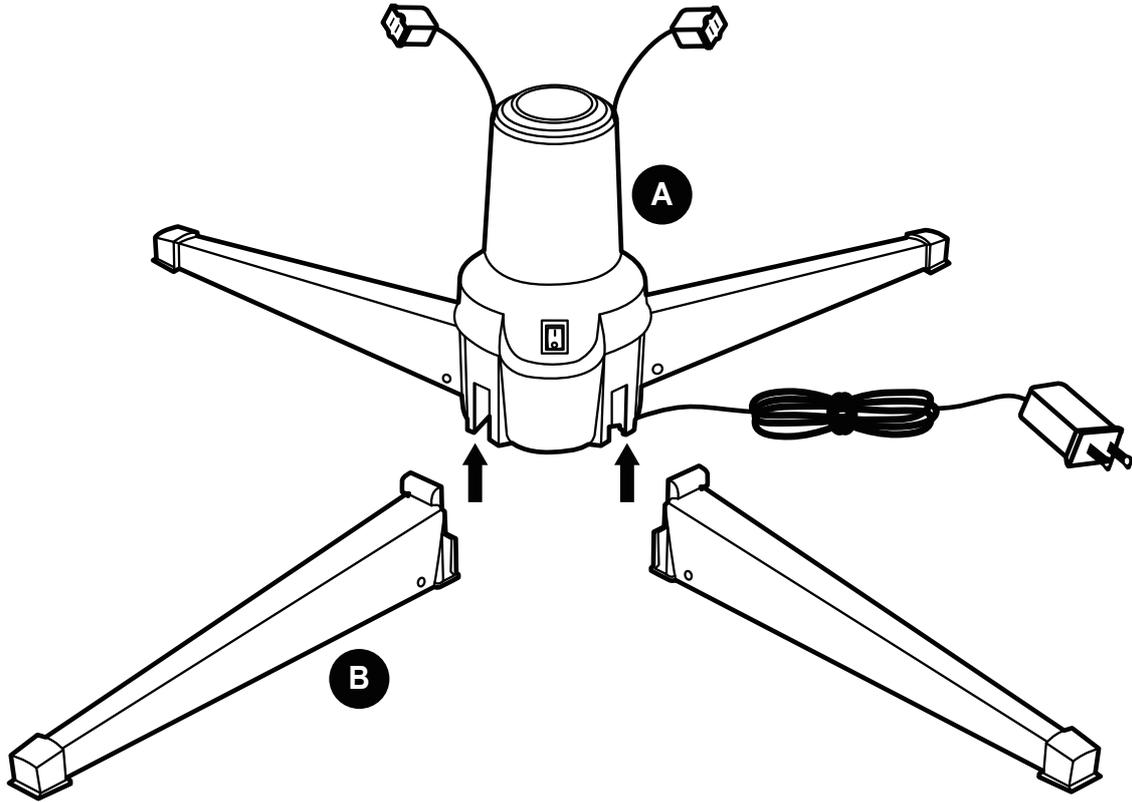

PART	DESCRIPTION	QUANTITY
A	Stand Base	1
B	Stand Legs	4

SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

⚠ RISK OF FIRE

Do not replace attachment plug. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

- **FOR INDOOR USE ONLY. USE ONLY WITH AN ARTIFICIAL TREE. THIS STAND DOES NOT CONTAIN A WELL FOR WATER.**
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product-not a TOY! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use. The stand is to be used just for the Christmas tree.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions. Follow product marking for proper fuse rating and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Max loading current / power: 7A /840W. Electrical Rating for the Stand: AC120V 60Hz Max 0.04A 4.8W.
- Load of tree: Max. 90 lbs. Height of tree: Max. 7.5 feet.
- Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS.

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 3 minutes.


No Tools Required for Assembly.

ASSEMBLY INSTRUCTIONS


1. Slide the four stand legs (B) upward into slots on the stand base (A) until secure.
Place assembled rotating tree stand on a level surface.

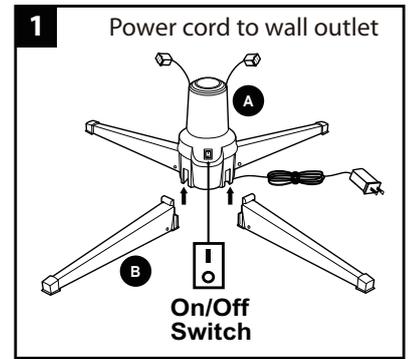


2. Insert the pole of your Christmas tree (not included) into the rotating tree stand. HINT: Insert your Christmas tree's bottom section ONLY into the rotating tree stand first and then continue with the remaining section(s) to minimize heavy lifting.

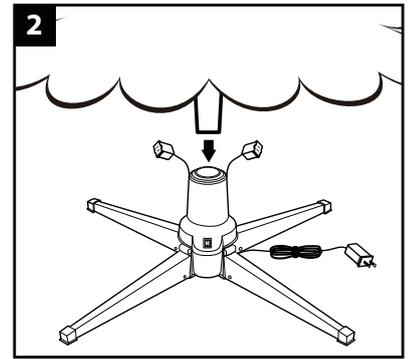


3. Plug in your Christmas tree lights into the yellow labeled outlet receiver on the rotating tree stand.

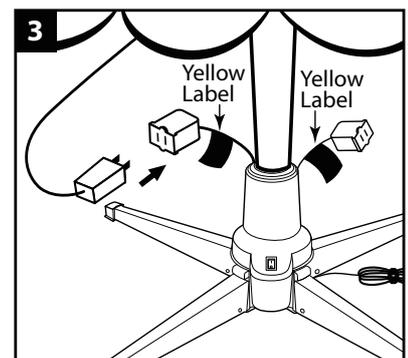

4. Plug in the green labeled rotating tree stand plug into wall outlet.

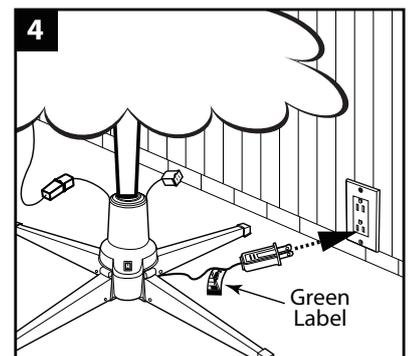

5. Turn on the power switch on the rotating tree stand. Your entire tree should now be lit and rotating. If some bulbs do not light or flicker, please refer to your Christmas tree's instruction manual.

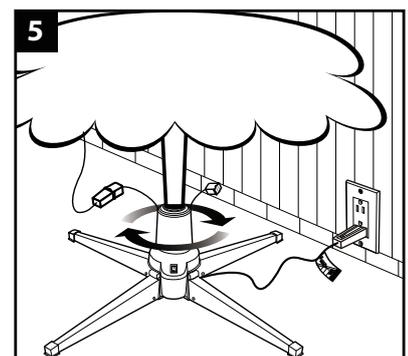


CARE AND MAINTENANCE

- Before you start to assemble your tree with rotating tree stand, choose an appropriate location near a wall outlet.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
- When storing the tree stand, carefully remove all other products including the Christmas tree, branches, or bushes, to avoid any undue strain or stress on the product's conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

FUSE REPLACEMENT INSTRUCTIONS:


1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully, turn fuseholder over and remove fuse.
4. Risk of fire. Replace fuse only with 7 Amp 125 Volt fuse for the power cord set (provided with product).
5. Close fuse cover. Slide closed fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

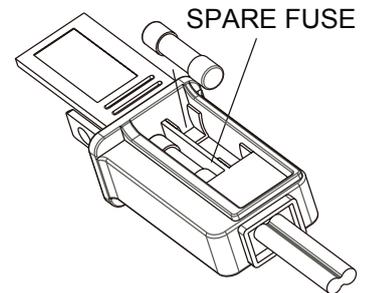

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-888-919-0070, 8 a.m. - 5 p.m., EST, Monday - Friday.

PART	DESCRIPTION
A	Fuse

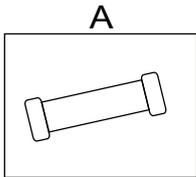

Fuse

PRINTED IN CHINA
Holiday Living & Design® is a registered trademark of LF, LLC. All rights reserved.

HOLIDAY
LIVING®
Lowe's.com