


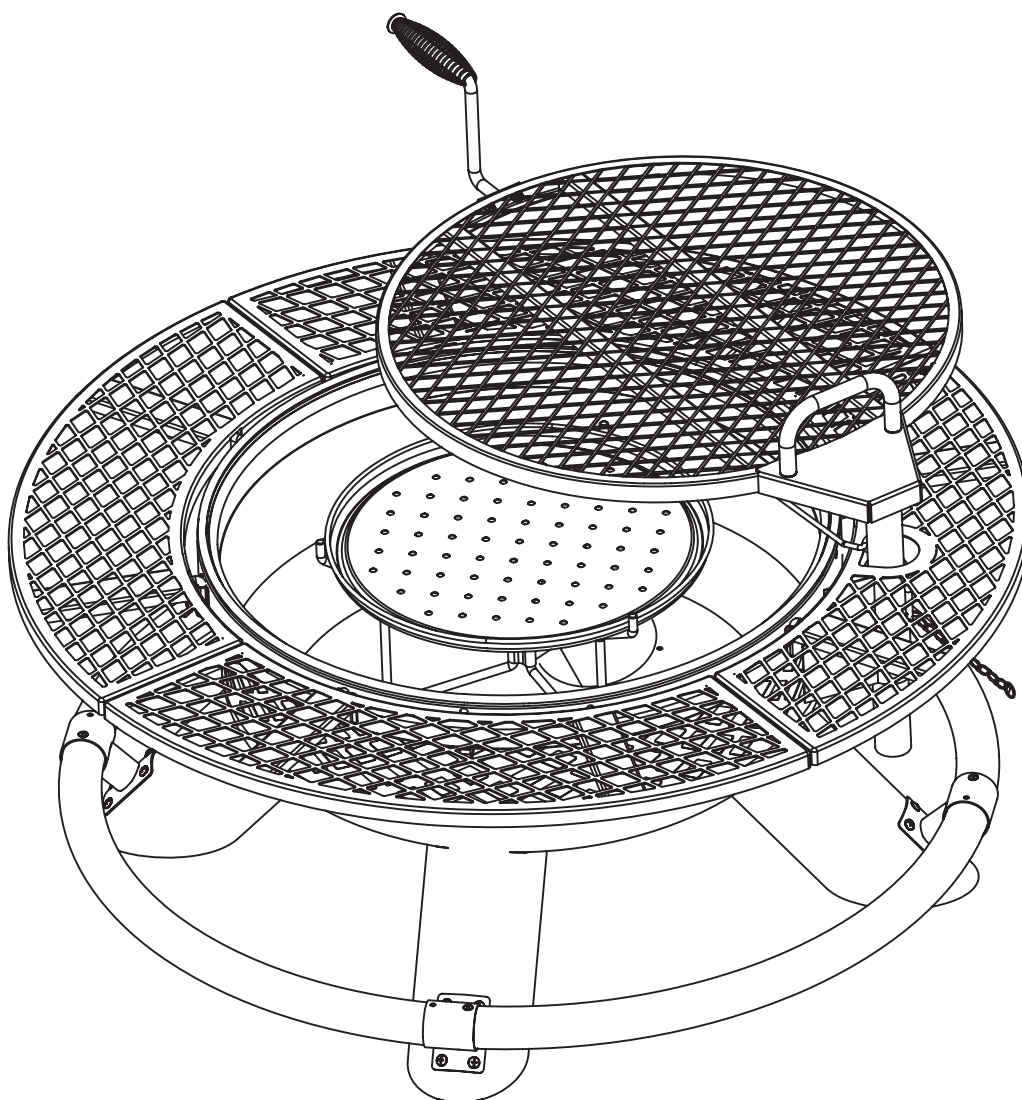

ITEM #796740

RANCH FIRE PIT

MODEL #SRFP96




ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 814-0585, 8 a.m. - 8 p.m., EST, Monday - Friday.

PACKAGE CONTENTS

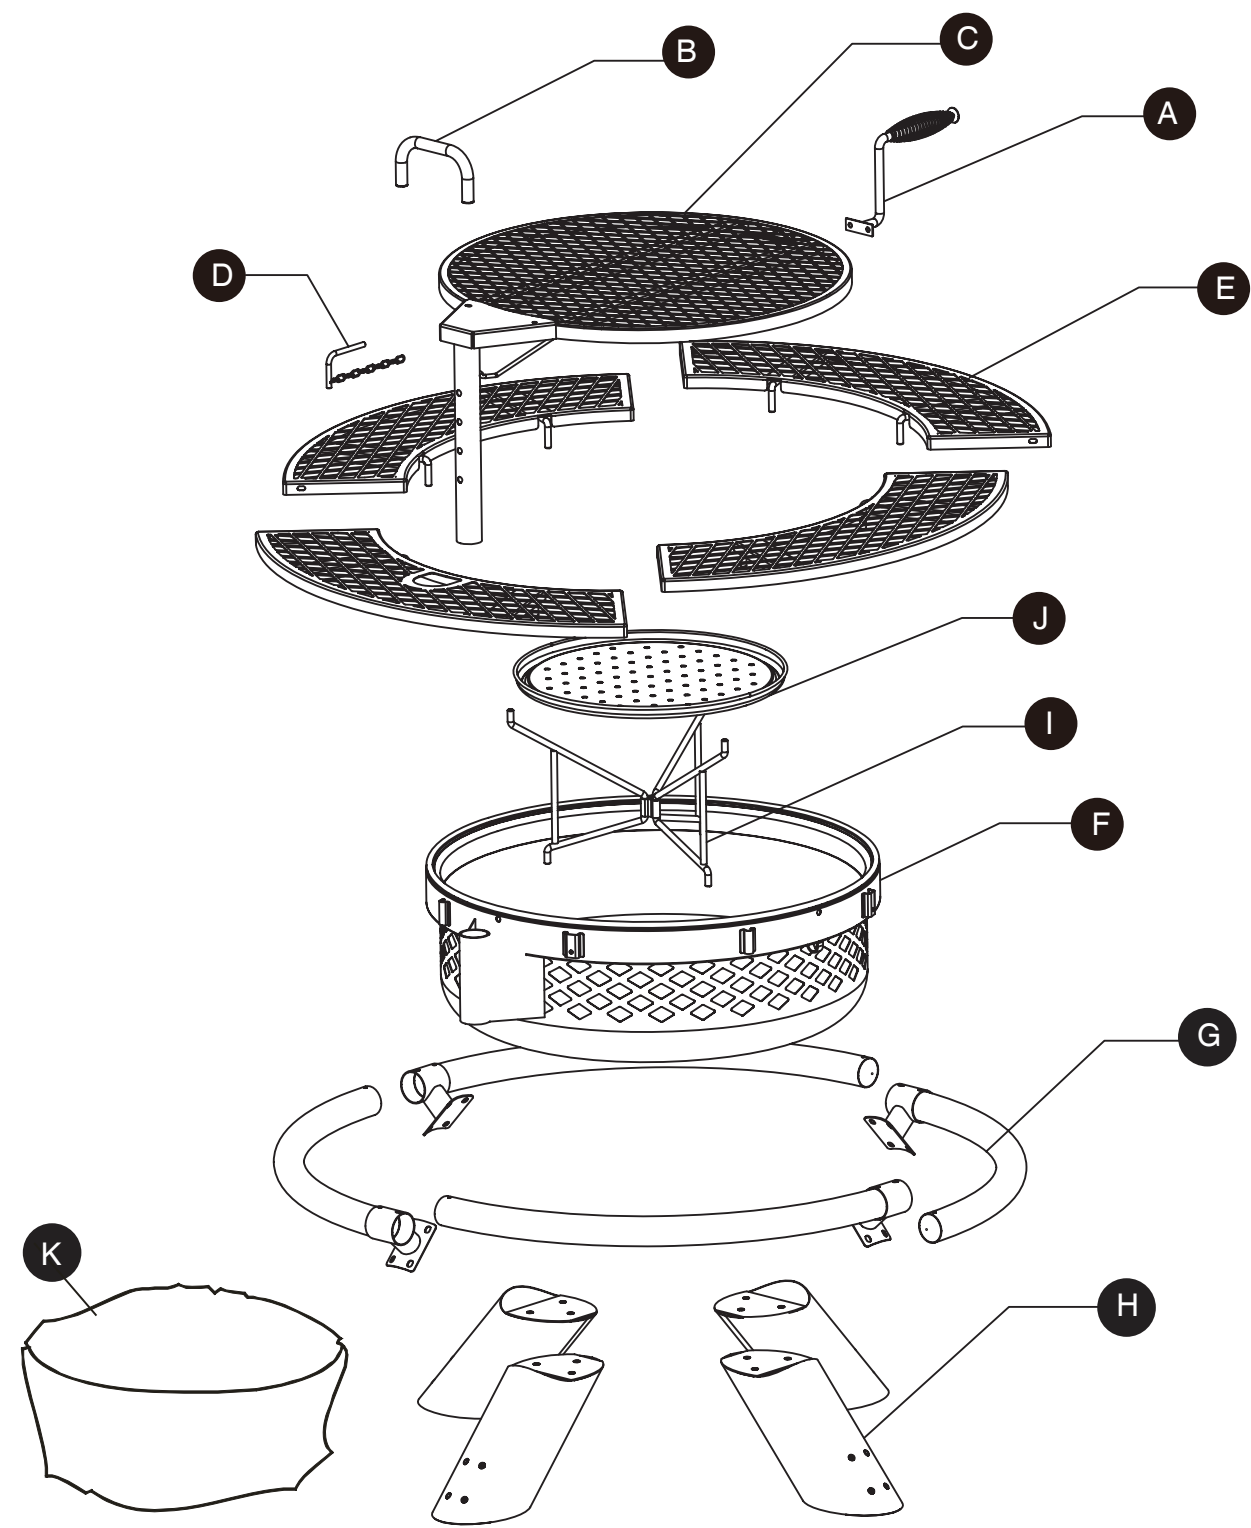


PART	DESCRIPTION	QUANTITY
A	Swing Handle	1
B	Lift Handle	1
C	Cooking Grate	1
D	L Pin	1
E	Table Panel	4
F	Fire Bowl	1

PART	DESCRIPTION	QUANTITY
G	Support Ring Section	4
H	Leg	4
I	Log Rack	1
J	Charcoal Pan	1
K	PVC Cover	1

HARDWARE CONTENTS (shown actual size)

 
AA



M6 x 14 Bolt

Qty. 30

 BB



M5 x 12 Bolt

Qty. 6

CC



M6 x 20 Bolt

Qty. 4


DD



M6 Nut

Qty. 6

EE

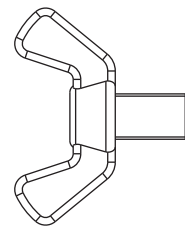

Wing Bolt

Qty. 4



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING **FOR YOUR SAFETY**

1. This item is for outdoor use only, and shall NOT be used in a building, garage or any other enclosed area.
2. DO NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
3. This fire pit is NOT for commercial use.
4. This fire pit is NOT to be operated by children.
5. This fire pit is NOT to be used in or on boats or recreational vehicles.
6. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
7. When using this fire pit, exercise the same precautions you would with any open fire.
8. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.
9. Do NOT use this fire pit without reading this entire document and all WARNINGS, cautions and instructions.
10. This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.
11. Do NOT burn charcoal briquette, lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
12. Do NOT alter this fire pit in any manner.
13. Do NOT use this fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.

Warnings

14. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
15. Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.
16. Do NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
17. Do NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
18. Do NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
19. Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
20. Always empty this fire pit before each use.
21. Do NOT wear flammable or loose clothing when operating this fire pit.
22. Do NOT use in windy conditions.
23. Do NOT use gasoline, kerosene, diesel fuel, or lighter fluid to start a fire or enhance an existing fire.
24. Keep all electrical cords away from a hot fire pit.
25. All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (potholders, gloves, BBQ mittens, hot pads & etc). Never touch ashes or coals to see if they are hot.
26. Do NOT leave a lit fire pit unattended, especially around children and pets.
27. Do NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.
28. Do NOT remove ashes or coals until they are completely and extinguished.
29. Use heat-resistant gloves or hot pads when contacting handles.
30. Use long, sturdy fire pit tools when adding or moving logs.
31. Do NOT place wood directly into bottom of the fire pit. Place wood only on the log rack.
32. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down.
33. Do NOT lean over this fire pit when lighting or when in use.
34. Do NOT place hot fire pit tools onto combustible surface such as grass, wooden deck or furniture.
35. Avoid breathing smoke from the fire and avoid getting it into your eyes.
36. This fire pit should be thoroughly inspected and cleaned on a regular basis.
37. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or clean up is executed.
38. Death, serious injury or damage to property may occur if the above is not followed exactly.
39. Do not burn more than 5 lbs of charcoal or 6 lbs of untreated wood at one time.

Warnings

THIS FIRE PIT CAN BE USED (not served) AS A GRILL



COOKING TIPS



WARNING

Do not grasp the cooking grate with your hands while it is hot. Use barbecue mitts for handling. Do not use water.

Cooking on the Grates: Use barbecue mitts for handling the cooking grate. For **SLOWER** cooking, shift the cooking grate toward the rear and into the upper grate bracket slots. For **FASTER** cooking, shift the cooking grate toward the front and into the lower grate bracket slots. Use the lower position for searing steaks and hamburgers or when more heat is needed. Food cooks very fast at this position, so watch your food carefully.

Raise the grate to the upper slot to finish cooking steaks and hamburgers. Start cooking with the grate in the upper position for meats, such as pork and chicken, that have to be cooked a long time. The top grate height is good for any time your fire is very hot.



FOOD SAFETY TIPS

Always wash your hands thoroughly with warm soapy water before starting your meal preparations and after handling fresh meat, fish and poultry.

Defrost meat, fish and poultry in the refrigerator before cooking, not at room temperature.

Thoroughly wash all plates and cooking utensils with warm soapy water.

Keep raw meats separate from cooking foods. Do not use the same plates to handle raw meats and cooked foods.

Use separate cooking utensils for handling raw meats and cooked foods when grilling.



CALIFORNIA PROPOSITION 65 WARNING

Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

This product can expose you to chemicals including carbon monoxide and carbon black, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

PREPARATION

Before assembling product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes

Tools required for assembly (not included): Phillips screwdriver, Adjustable open end wrench.


Assembly Instructions

NOTE: Assemble the fire pit on a non-abrasive surface.

Step 1

Attach (4) legs (H) to fire bowl (F) with (12) M6 x 14 bolts (AA).

Hardware Used

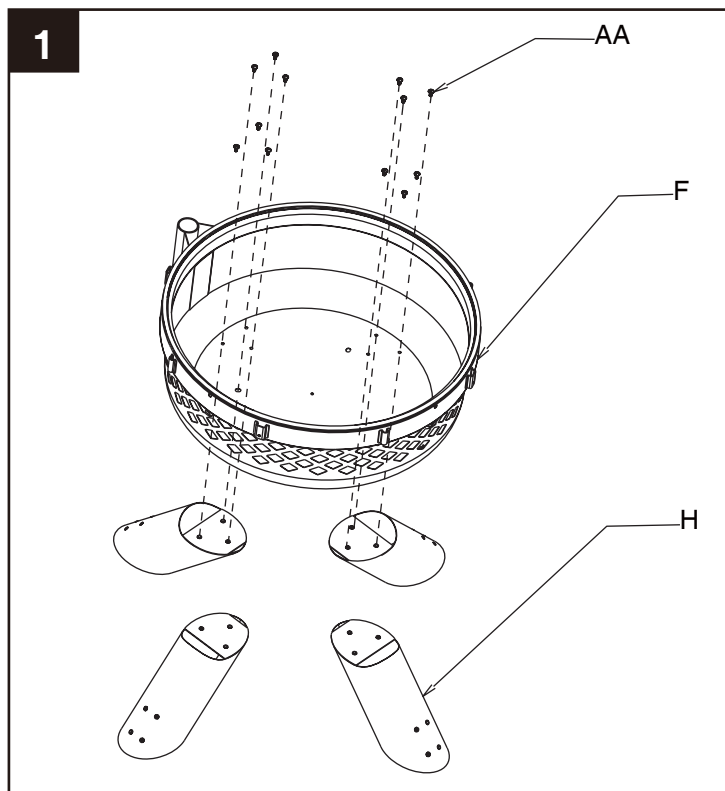


Step 2

Insert one support ring section (G) into another and attach the support ring assembly to leg (H) with (4) M6 x 14 bolts (AA) as illustrated. Repeat the same procedure to install the other support ring sections (G).

NOTE: Keep all bolts loose during the assembly of this step until all parts are installed into the correct position.

Hardware Used

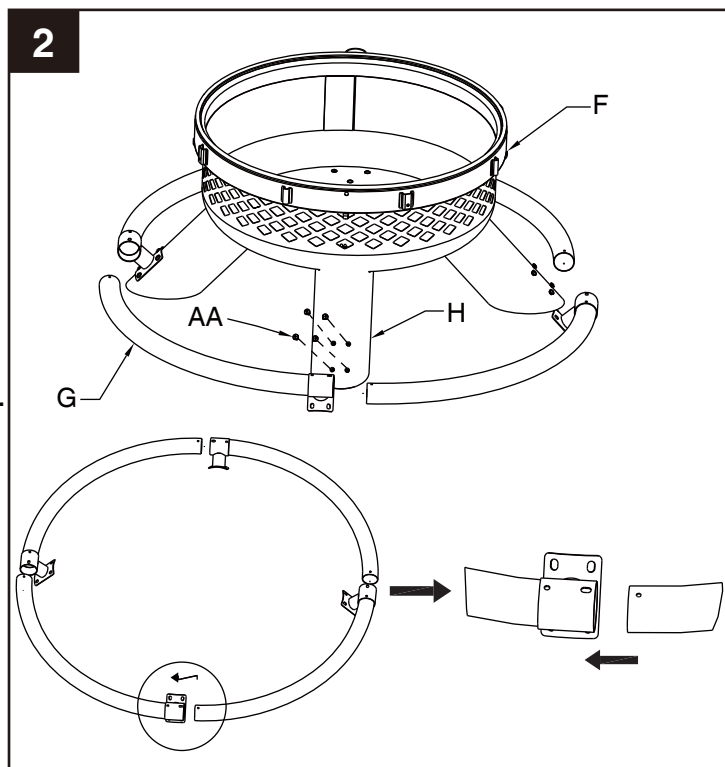


Assembly Instructions

Step 3

Secure (4) support ring sections (G) with (4) M5 x 12 bolts (BB).

Hardware Used

BB M5 x 12 Bolt  x 4

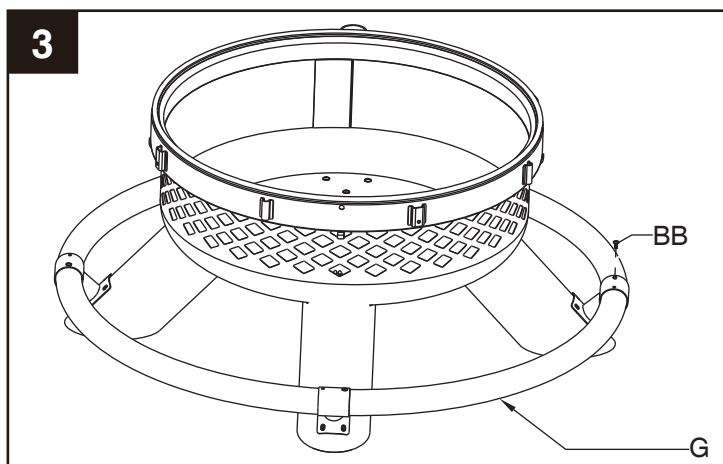


Step 4


Insert (2) the pins on table panels (E) into the fixed brackets on the fire bowl (F) as illustrated.


Connect (4) table panels (E) with (4) M6 x 20 bolts (CC) and (4) M6 nuts (DD). Attach (4) wing bolts (EE) to the fixed brackets on the fire bowl (F) as illustrated.


NOTE: The hole on the table panel (E) should be placed right upon the pole on the fire bowl (F).

 Hardware Used

CC M6 x 20  x 4

 DD M6 Nut  x 4

EE Wing Bolt  x 4

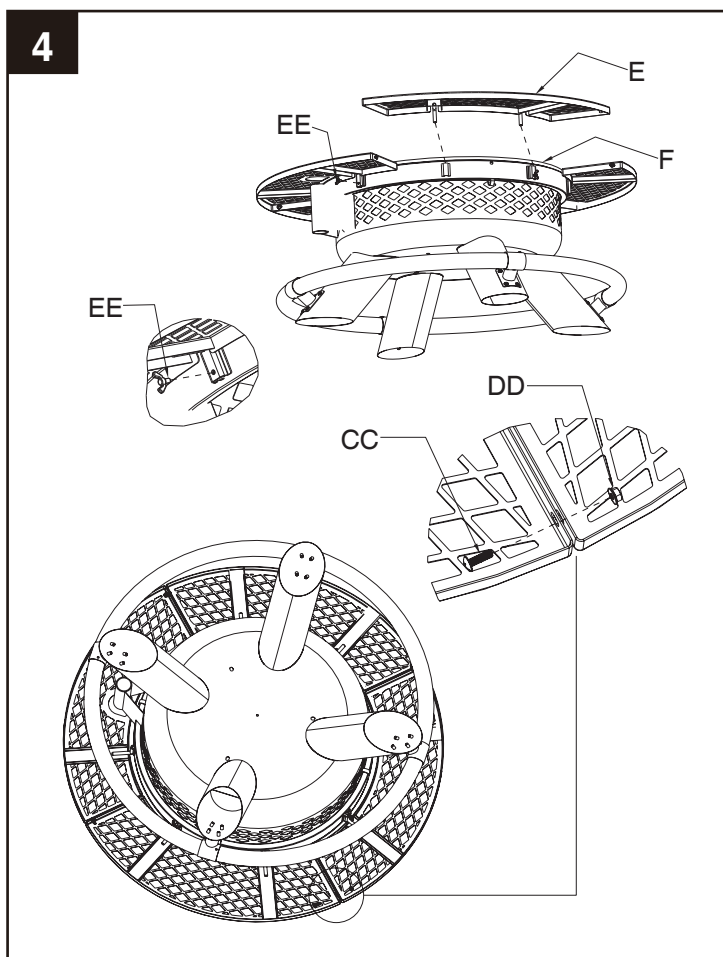




AssemblyInstructions


Step 5

Attach the lift handle (B) to cooking grate (C) with (2) M5 x 12 bolts (BB) as illustrated.

Attach the swing handle (A) to cooking grate (C) with (2) M6 x 14 (AA) and (2) M6 nuts (DD) as illustrated.

  Hardware Used

AA	M6 x 14 Bolt		x 2
BB	M5 x 12 Bolt		x 2
DD	M6 Nut		x 2

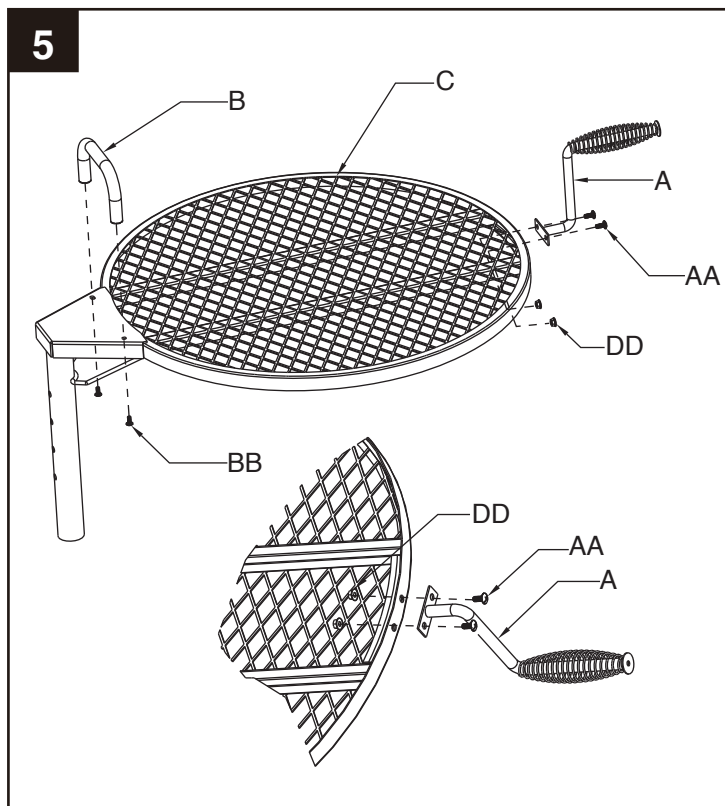


Step 6

Unfold log rack (I) as illustrated and put the charcoal pan (J) at the bottom of the fire bowl (F) then secure the 3 long legs at the edge of the charcoal pan (J). Wood can be put on the log rack for heating function.

The unit is ready for wood burning after the log rack (I) is installed

Note: When using the fire pit for heating and during lighting, swing the cooking grate (C) from over the fire bowl.

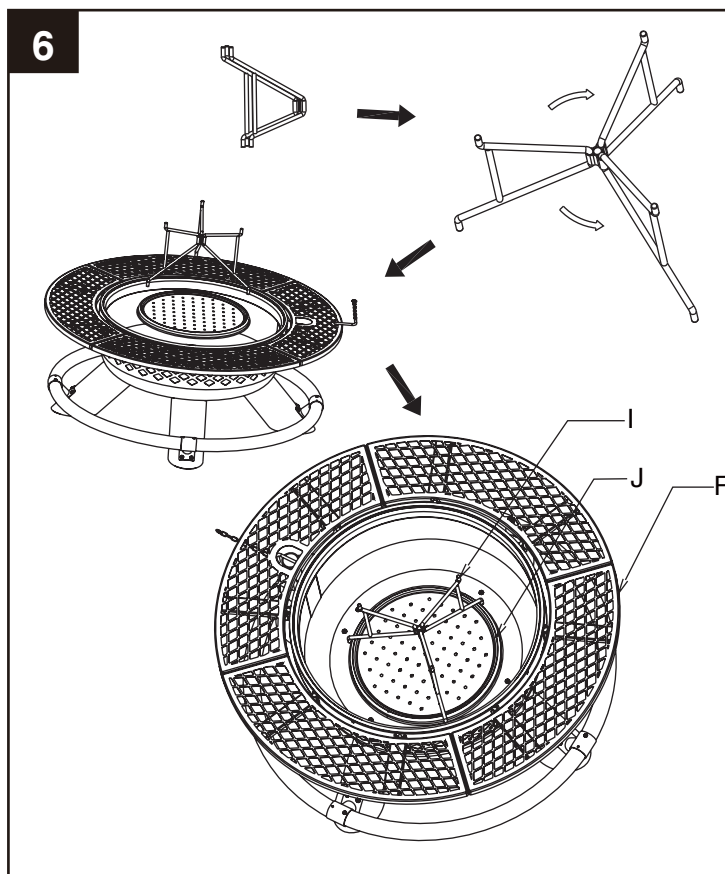


Assembly Instructions

Step 7

Secure the 3 long legs of the log rack (I) into the bottom of the fire bowl (F) as illustrated. Then place the charcoal pan (J) onto the 3 short legs of the log rack (I). Make certain the charcoal pan is securely resting and stable before adding charcoal.

To convert from fire pit to charcoal grilling function place charcoal pan (J) into center of log rack (I) as shown in the image.


Note: Do NOT move the parts or change the configuration during use or while the parts are hot.

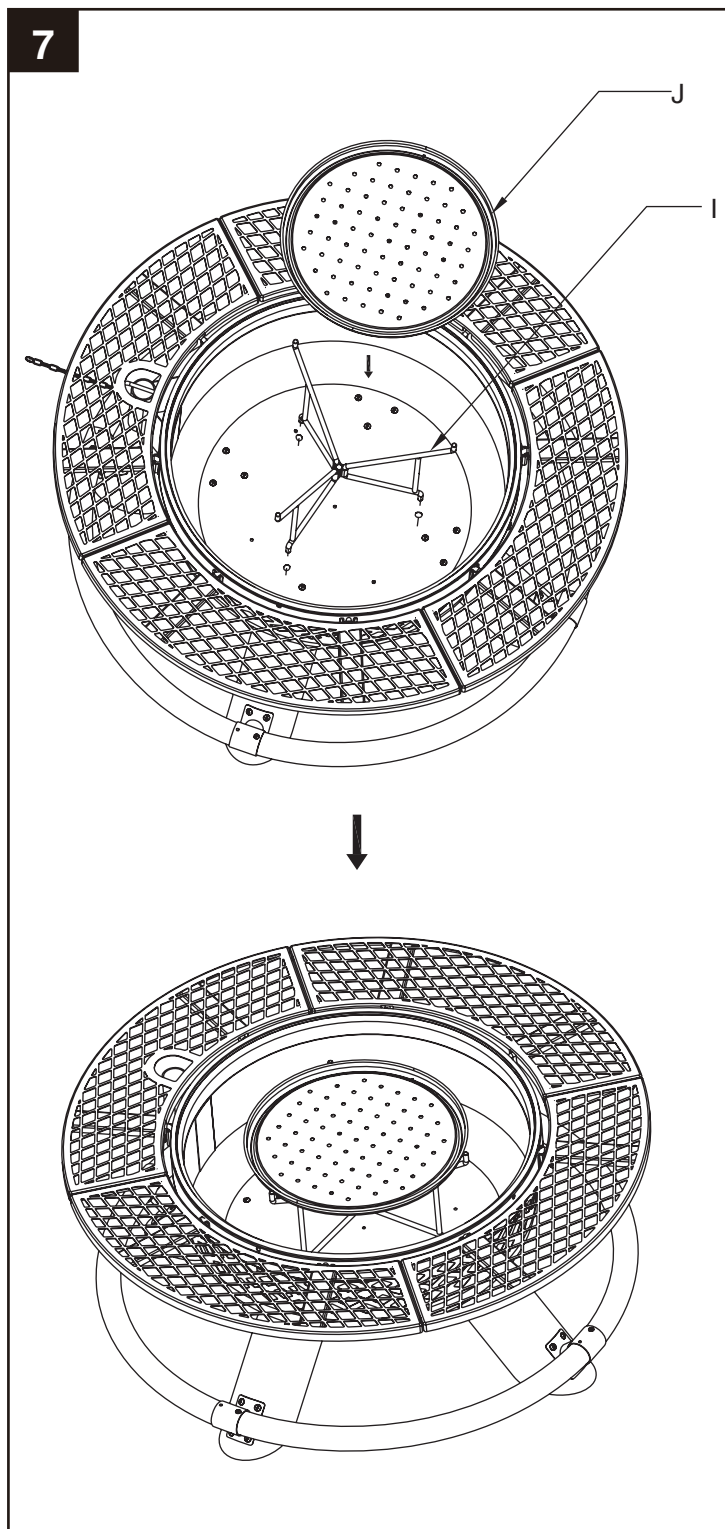

Assembly Instructions

Step 8


Insert the cooking grate (C) post into the table opening.
Insert L pin (D) into the hole on the cooking grate securing the pole.

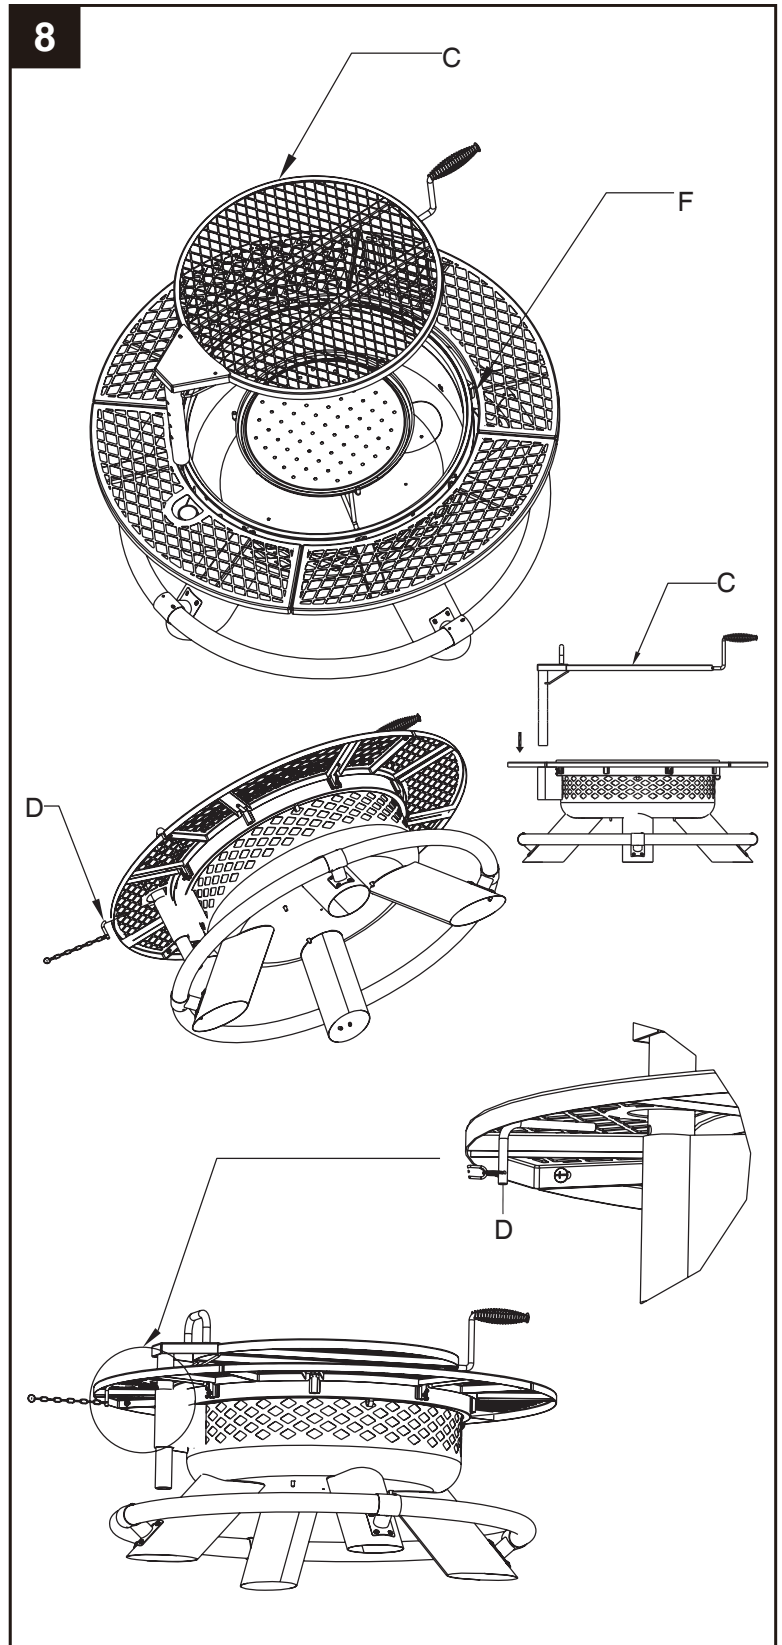

Assembly Instructions

Step 9

Fire pit is assembled. Cooking grate (C) can be swung freely as illustrated.

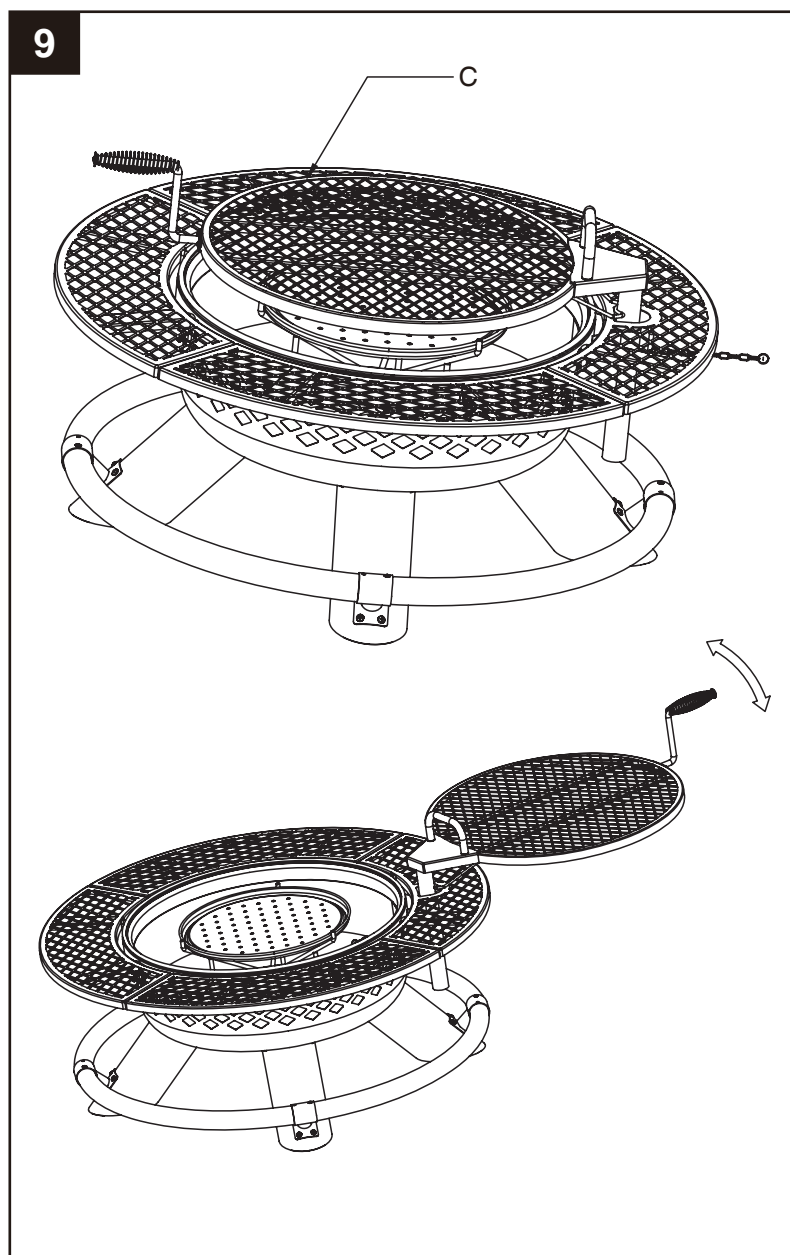


Operating Instructions

Grate Adjustment

Swing the cooking grate into position as needed. Adjust the height of the grate as desired by removing the L Pin (D) and raise the grate using Lift Handle (B). Secure the grate by re-inserting the L pin (D).

CAUTION: Height adjustment handle can become hot during use. If adjustment is needed, always use a heat resistant glove/mitten.

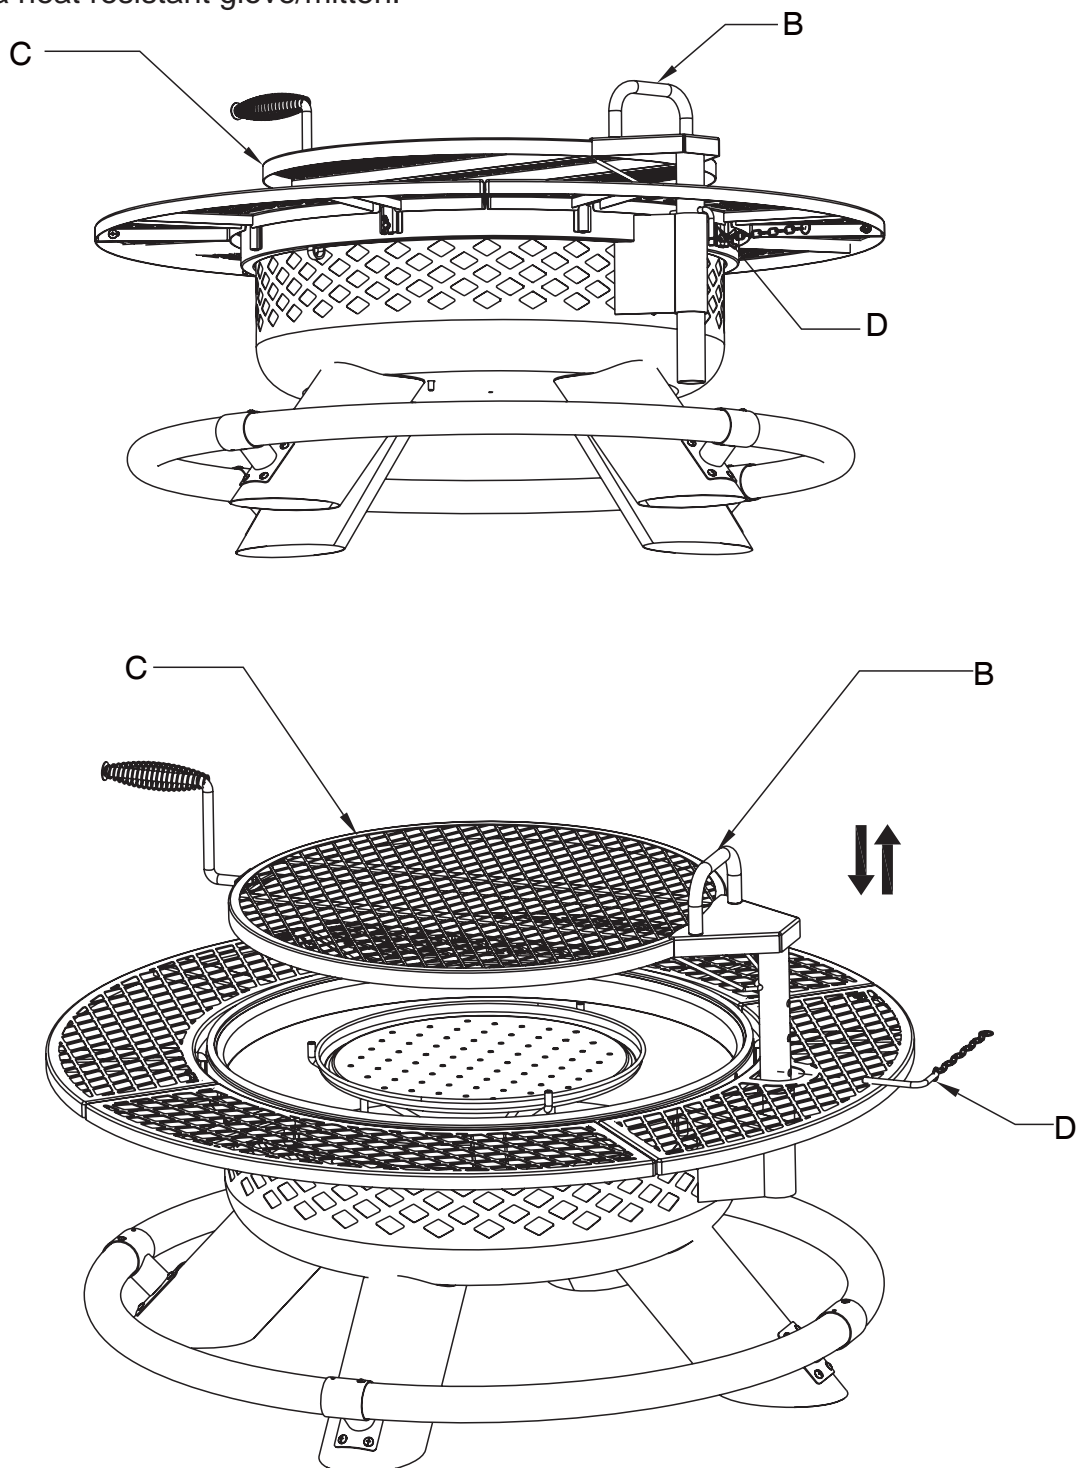

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural fire-starter onto the center of the grate.
3. Place above that a layer of dry seasoned hardwood that is put to lengths no more than 3/4 the diameter of the bowl.
4. Use a match to light kindling or fire-starter.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

1. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
2. Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
3. Wait until glowing coals have developed before adding any additional wood. If addition wood is required, place wood on top coals, be careful not to shift ashes.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Care and Maintenance

Inspecting

This fire pit should be inspected on a regular basis to ensure product safety and longer product life. Do NOT attempt to inspect this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Check components for any signs of damage or rust.
2. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

Do NOT attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.

Do NOT use oven cleaner or abrasive cleaners as they will damage this product.

Do NOT clean any part of this fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse and clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Storage

Do NOT move or store this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Once the fire is out, coals are cold and fire pit is cool to the touch, remove ashes and properly dispose.
2. Store the fire pit in a dry location to maximize product life.
3. Store assembled in a location away from children and pets.
4. Cover outdoor fire pit with the PVC cover (K).

Warranty Information

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser's receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and / or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.



Need help?

call our toll free number at:

1-866-814-0585 or



e-mail:

customerservice@shinerichgroup.com

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at (866) 814-0585, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART#
B	Lift handle	796740-B
C	Cooking grate	796740-C
E	Table Panel	796740-E
F	Fire Bowl	796740-F
H	Leg	796740-H
AA	M6x14 Bolt	796740-HW
BB	M5x12 Bolt	
CC	M6x20 Bolt	
DD	M6 Nut	
EE	Wing Bolt	

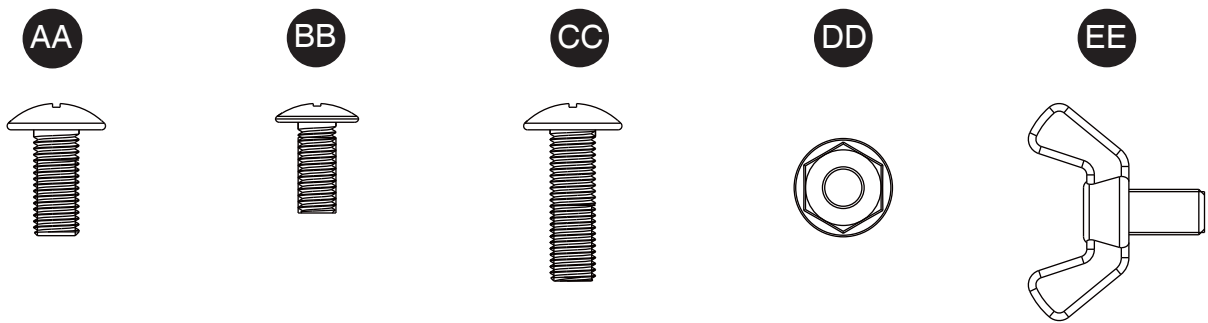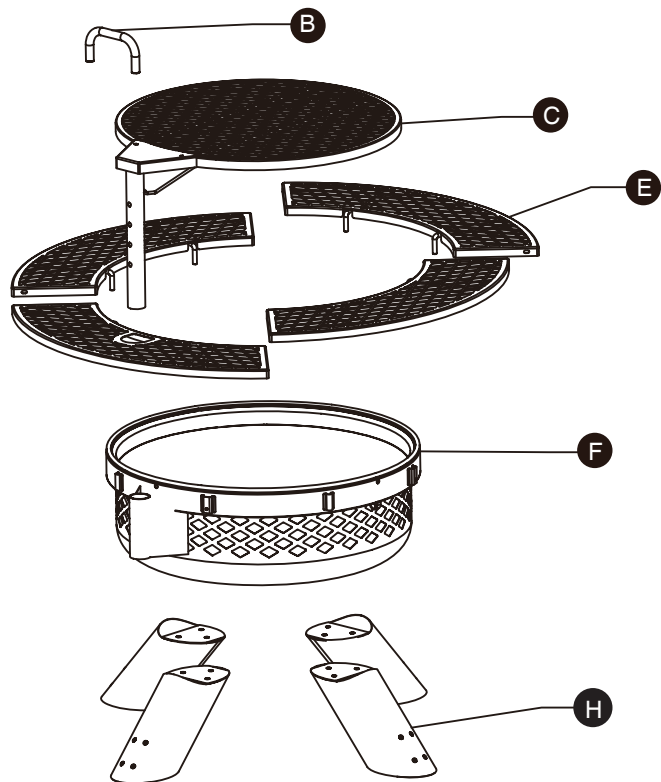

Printed in China