



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2010 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 02/07/11)



MSB64 SERIES

Margarita & Slush Maker

Instructions and Recipes



CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	6
HELPFUL TIPS	7
CLEANING & MAINTENANCE	7
RECIPES	8
RETURNS & WARRANTY	11

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz

200 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse the MARGARITA & SLUSH MAKER Base or cord in water.
2. NEVER use near water.
3. NEVER leave unit unattended if used near children.
4. NEVER use a scouring pad on the MARGARITA & SLUSH MAKER.
5. NEVER use an abrasive sponge or harsh cleaning products on or inside of the MARGARITA & SLUSH MAKER.
6. NEVER use for anything other than what this item was originally intended.
7. Avoid contact with moving parts.
8. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
9. DO NOT place parts in dishwasher.
10. Keep out of reach of children.
11. Unplug MARGARITA & SLUSH MAKER from electrical outlet when not in use and before cleaning. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
12. This appliance is NOT A TOY.
13. This appliance is not intended for use by young children or cognitively challenged individuals without supervision.

IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. NEVER put fingers or utensils into feed or discharge areas.
3. Keep hands and utensils out of container while blending to reduce the risk of severe personal injury or damage to the MARGARITA & SLUSH MAKER.
4. To protect against electrical shock do not immerse cord, plug or main unit in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before removing parts for cleaning.
7. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. The manufacturer does not recommend the use of accessory attachments. Use of attachments may cause injuries.
9. Blades are sharp. DO NOT touch.
10. DO NOT remove Lid when in use.

11. DO NOT let the cord touch hot surfaces.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving this appliance with liquids inside.
14. This unit must be on a level surface to operate properly.
15. DO NOT use this appliance for other than its intended use.
16. DO NOT leave unit unattended while in use or when plugged into an outlet.
17. Check inside of the Blending Chamber for foreign objects prior to use.
18. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
19. Extension cord can be used if care is exercised in use.
20. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
21. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
22. Always operate the MARGARITA & SLUSH MAKER with cover in place.
23. Make sure the Blending Chamber is properly attached to the Base before turning on unit.
24. SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the MARGARITA & SLUSH MAKER from Nostalgia Electrics™! The MARGARITA & SLUSH MAKER is a frozen drink machine that will add thirst-quenching fun to any occasion!

The MARGARITA & SLUSH MAKER uses crushed ice or small ice cubes from your freezer. It not only makes fantastic margaritas, but can also mix up batches of your other favorite frozen drinks such as daiquiris and slushes for the kids! This machine is designed for kitchen or home bar use but can also be used in places such as:

- Family Rooms
- Dorm Rooms
- Offices
- Club Houses

Your MARGARITA & SLUSH MAKER has a generous, 64-ounce, clear mixing chamber and is ideal for small groups. It features an attractive, slim, upright design that will take a limited amount of space on the counter.

Features include:

- Patented dual swivel system that pulverizes and shaves ice, dispensing consistently smooth frozen drinks
- Tank detaches from Base for easy clean up
- Convenient On/Off Dial

- Detachable cup rest also catches drips



PARTS & ASSEMBLY

After Taking the Unit Out of the Box:

1. Wipe down the MARGARITA & SLUSH MAKER exterior with a clean, non-abrasive cloth or sponge. Thoroughly wash Blending Chamber, Lid and Drip Tray in warm, sudsy water and thoroughly dry. **DO NOT** put the Base in water.
2. After drying, firmly attach Blending Chamber to Base by placing the Blending Chamber on top of Base and twisting Blending Chamber counterclockwise so that it locks into place.
3. If Blending Chamber is attached properly, it will be aligned with Base so that the Spout is over the Drip Tray.

Assembling the Drip Tray



Insert the three prongs of the Drip Tray into the three holes on the Base of the unit. Make sure Drip Tray locks firmly in place.



Drip Tray should be level to ensure that cup does not sit at an angle.

Now you are ready to enjoy cold, refreshing margaritas and drinks from your MARGARITA & SLUSH MAKER!

HOW TO OPERATE

1. First, find a stable surface near an electrical outlet before starting. Make sure the cord is away from any water source. It is acceptable to use an extension cord if needed.
2. **DO NOT** place the MARGARITA & SLUSH MAKER near the edge of a table or countertop.
3. Fill the Blending Chamber with ice up to the max fill line. **DO NOT** exceed the max fill line.
4. Add your favorite liquor, drink mix or fruit. You may choose to follow one of the recipes included in this Instruction Manual.
5. After adding ingredients, attach Lid firmly to the Blending Chamber.
6. Plug in unit and turn **ON** by turning the side knob to the **BLEND** position.
7. Blend for approximately 7-10 minutes or until mixture has reached the desired consistency.
8. While the unit is still on, place a glass or a cup on the Drip Tray under the Spout and dispense the drink by turning the the Spout clockwise. Turn Spout counterclockwise to stop dispensing beverage.
9. **NOTE:** Always dispense beverage while unit is running.
10. When you have finished, turn side knob to **OFF** position and unplug unit.

HELPFUL TIPS

- If Spout is stiff during first use, use as much force as necessary to turn the knob.
- Add more liquid to Blending Chamber if vacuum occurs around shaving cage during use.
- Blending Chamber must be firmly attached to Base or unit will not turn on.



Cord Location

The cord storage is located at the base of the unit:

CLEANING & MAINTENANCE

1. After using your MARGARITA & SLUSH MAKER, disconnect from electrical outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
2. Thoroughly wash the Blending Chamber, Lid and Drip Tray in warm, sudsy water and thoroughly dry. **DO NOT** put the Base in water. When needed, use a damp, non-abrasive cloth to wipe exterior.
3. Once washing and drying is complete, reassemble your MARGARITA & SLUSH MAKER. Wind the cord and return to the convenient storage location in the bottom of the Base. Now your MARGARITA & SLUSH MAKER is ready to use again.

(continued on next page)

RECIPES

Use your imagination to create many different drinks with your MARGARITA & SLUSH MAKER. Here, you will find several recipes. You can adjust the ingredients to your particular taste, or create your own – so have fun! If you have a recipe for a drink made for one, your MARGARITA & SLUSH MAKER has the capacity for 8 – 8 oz. drinks – so remember to adjust your recipes accordingly.

For each recipe below, fill the Blending Chamber with ice up to the max fill line. DO NOT exceed the max fill line.

1 SHOT = 1½ ounces (45 ml)

1 CUP = 5.33 Shots (239.85 ml)

BASIC MARGARITA

- 2 Shots of Tequila Serves one
- 1 Shot of Triple Sec
- 1½ Cups of Margarita Mix
- 1 Shot of Freshly Squeezed Lime Juice
- Salt & Lime Wedge for Garnishing

STRAWBERRY MANGO MARGARITA

- 1 shot of Tequila Serves one
- 8 ounces Mango Juice
- 3 16-ounce Fresh Strawberries, Cut in Quarters
- Salt for Rimming Glass (optional)

ORANGE JULIUS SLUSH

- 2½ ounces Rum Serves two
- 12 ounces Orange Juice
- 2¼ ounces Vodka

STRAWBERRY DAIQUIRI SLUSH WITH HONEYDEW MELON

- 1 12-ounce Package of Frozen, Unsweetened Strawberries **Serves four**
- 1½ cup Light Corn Syrup
- ⅔ cup White Rum
- 3 tablespoons of Fresh Lime Juice
- ½ Fresh Honeydew Melon, Seeded and Cut Into ½ Inch Cubes
- Lime Slices for Garnishing

APRICOT SMOOTHIE

- 2 ounces White Rum **Serves two**
- 1 ounce Triple Sec
- 26 ounces Apricot Juice
- ½ ounce Cream

KAHLUA COLADA

- 1½ ounce Kahlua **Serves one**
- ½ ounce Rum
- 2¼ ounces Coconut Cream
- 2¼ ounces Pineapple Juice
- ½ ounce Cream

GINGER FRUIT SLUSH

- 6 ounces Ginger Ale Serves four
- 6 ounces
Orange Juice
- 2 Bananas, Sliced
- 1 12-ounce Can of
Crushed Pineapple
in its Juice

BERRY SLUSH

- 5 Strawberries Serves four
- $\frac{3}{4}$ cup Blueberries
- $\frac{1}{2}$ cup Peach, Sliced
- 6 ounces
Orange Juice
- $\frac{1}{4}$ cup Sugar
- 2 tablespoons
Lemon Juice

CHOCOLATE PEANUT BUTTER PROTEIN SHAKE

- 1 tablespoon Serves one
Smooth Peanut
Butter
- 2 scoops of
Chocolate
Protein Powder
- 1 tablespoon
Lowfat Milk

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

MARGARITA & SLUSH MAKER / MSB64 SERIES

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

