

# Owner's Manual



 
Please review the following instructions and make yourself familiar with the parts and function of your Quik Shade® canopy.

- Parts included:**  
 [1] assembled canopy frame  
 [1] fabric canopy top  
 [1] storage bag  
 [4] stakes

**Set-Up --Step 1:** Place your canopy in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps back until you extend the frame to a full arm's length - approximately four feet (Fig. A).



**Step 2:** Open the canopy to about 80% (Fig. B). Install your top at this point.

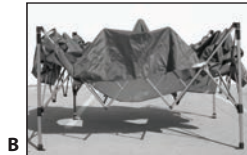

**Step 3:** Open the frame the rest of the way by pushing on the top and bottom of diamond (Fig. C). Be sure your partner is across from you diagonally. Open the frame completely by pressing down on the top cap while pushing up where the eave meets the slider (Fig. D).



**Step 4:** Align the hook and loop patches at each corner (Fig. E).

**Step 5:** Pull the inner leg out to extend the height of the canopy to the first level. The Quik latch extenders will click into place (Fig. F).

**Step 6:** Extend the legs of your canopy to the desired height (Fig. G). Use stakes to secure frame to the ground if necessary.



**Step 7:** Fill out included product information card with a stapled copy of your receipt and store in a safe place. Product information can be found on the sticker located on the eave of the frame (Fig. H).



Go to [BravoSportsCorp.com/ServiceProductRegistration.aspx](http://BravoSportsCorp.com/ServiceProductRegistration.aspx) and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line (800) 248-5327.

**Take Down --Step 1:** Remove stakes from the ground (Fig. I). Reduce legs to their lowest position by releasing the Quik latch (Fig. J).



**Step 2:** If you have a wall accessory installed, remove this first. Then at each corner either pull or push the Quik latch to release the sliders. Be careful not to pinch your hands by staying away from the bottom part of the slider (where the plastic ends), the slider may move fast once released. If the slider is hard, relieve the ceiling assembly a little by lifting the tubes attached to the slider upwards (Fig. K).



**Step 3:** Lift the canopy slightly and slowly walk towards your partner as the frame folds in. Keep walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers. Hold outside legs and continue closing canopy as you walk towards your partner. The completely folded canopy should stand on its own (Fig. L).



**Step 4:** With the canopy standing, unzip the wheeled bag and slide bag down slowly until entire canopy is in. Invert the canopy, close the wheeled flap and zip shut (Fig. M).

**Note:** The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.

# DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE

Please contact Bravo Sports for questions, comments, parts & accessories, or assistance with any warranty related issues.

E-mail: [consumer@bravosportscorp.com](mailto:consumer@bravosportscorp.com)

Toll free : (800) 248-5327

## Limited 1 Year Warranty

Subject to the following limitations, in addition to any imposed by virtue of applicable law, Bravo Sports warrants this QUIK SHADE® Canopy to be free of defects in material or workmanship for a period of one year from the date of original purchase. This warranty is limited to the replacement of defective parts only.

1. This Limited Warranty will apply only if the QUIK SHADE® and/or its parts are properly returned to the Bravo Sports customer service department listed below and are determined by Bravo Sports in its sole discretion, to be defective. In some cases, pictures of the unit may be requested in place of the unit itself.
2. This Limited Warranty applies only to QUIK SHADE® Multi-Purpose Canopies purchased from authorized dealers. This Limited Warranty is extended only to the original purchaser and is not transferable.
3. Be sure to retain your original purchase sales receipt for any warranty claim. All warranty claims must be accompanied by a copy of the original purchase receipt from the authorized dealer.
4. Before returning any QUIK SHADE® Canopy and/or parts to Bravo Sports for warranty inspection, the consumer purchaser must obtain prior authorization from Bravo Sports. Such authorization can be obtained by calling our customer service representatives at the toll-free numbers listed below, or writing to the Bravo Sports customer service department at the address listed below. Customer is responsible for shipping costs.
5. Certain regions of the country have environmental conditions that are extremely hard on canopy covers of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, OR in high altitudes [above 3000 feet], the warranty period for your canopy top will be limited to 6 months from the date of original purchase. [After expiration of that 6 month period and up to a period of one year following date of original purchase, you may purchase a replacement canopy top at a reduced price from our customer service department.]
6. This Limited Warranty does not cover damage or loss from: wind, rain, fire, snow, ice, or other forces of nature; accident; normal wear; improper assembly disassembly, or adjustment during set-up or take-down; or any abuse, neglect or misuse of this QUIK SHADE® Canopy and/or its parts.
7. To the extent allowed by applicable law, any implied warranty of merchantability or fitness applicable to this QUIK SHADE® Canopy is limited to the duration of this Limited Warranty. Bravo Sports does not warrant against, and in no event shall Bravo Sports or its authorized agents be liable for any personal loss, injury, or direct or indirect incidental or consequential damage resulting from the use of this product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.
8. Upon receipt of authorization from our customer service department, you must submit your warranty claim to the address below, shipped prepaid and accompanied by a copy of the original dated purchase receipt. Do not return this product to the place of purchase. For warranty service, or for missing parts, replacement parts or any other problems, call or write to our customer service department below. We will send any replacement parts via FedEx Ground.
9. Any alterations made to the canopy by the customer will void the warranty.

**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

**WARNING:** Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

## Please read completely before setting up your QUIK SHADE® Instant Canopy

1. It is your responsibility to read below and save these instructions before attempting to set up or take down your instant canopy.
2. The canopy is designed to provide shade protection only and caution must be used in any adverse weather conditions, including wind and rain.
3. Do not use or continue to use in any rain, wind, or storm conditions -- especially lightning storms. Damage to the canopy can occur and put you and others in potential danger.
4. Always take your time when opening or closing the frame to avoid pinching your fingers or hands or damaging the frame.
5. Do not set up the canopy on steep inclines or uneven surfaces.
6. Do not use your canopy for permanent shelter or leave unattended, it is intended for temporary use only.
7. Keep canopy away from heat and flame at all times. Do not BBQ or build fires under or near the canopy.
8. The fabric top may be hand washed using mild soap and water. Do not use harsh detergents, abrasives or bleach and do not machine wash.
9. Never fold or store the canopy when it is wet or damp, allow to dry completely to avoid mildew.

**QUIKSHADE®**  
INSTANT CANOPY

**BRAVO**  
SPORTS

12801 Carmenita Rd.

Santa Fe Springs, CA 90670

©2012 Bravo Sports. All Rights Reserved