

Owner's Manual

QUIKSHADE®
INSTANT CANOPY

Please review the following instructions and make yourself familiar with the parts and function of your Quik Shade® canopy.

 
Parts included:

- [1] assembled canopy frame
- [1] fabric canopy top
- [1] storage bag
- [4] stakes



Set-Up --Step 1: Place your canopy in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps back until you extend the frame to a full arm's length - approximately four feet (Fig. A).



Step 2: Open the canopy to about 80% (Fig. B). Install your top at this point.



  Step 3: Open the frame the rest of the way by pushing on the top and bottom of diamond (Fig. C). Be sure your partner is across from you diagonally. Open the frame completely by pressing down on the top cap while pushing up where the eave meets the slider (Fig. D).



Step 4: Align the hook and loop patches at each corner (Fig. E).

Step 5: Pull the inner leg out to extend the height of the canopy to the first level. The Quik latch extenders will click into place (Fig. F).

Step 6: Extend the legs of your canopy to the desired height (Fig. G). Use stakes to secure frame to the ground if necessary.

 


Step 7: Fill out included product information card with a stapled copy of your receipt and store in a safe place. Product information can be found on the sticker located on the eave of the frame (Fig. H).



Go to BravoSportsCorp.com/ServiceProductRegistration.aspx and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line (800) 248-5327.

Take Down --Step 1: Remove stakes from the ground (Fig. I). Reduce legs to their lowest position by releasing the Quik latch (Fig. J).



Step 2: If you have a wall accessory installed, remove this first. Then at each corner either pull or push the Quik latch to release the sliders. Be careful not to pinch your hands by staying away from the bottom part of the slider (where the plastic ends), the slider may move fast once released. If the slider is hard, relieve the ceiling assembly a little by lifting the tubes attached to the slider upwards (Fig. K).



Step 3: Lift the canopy slightly and slowly walk towards your partner as the frame folds in. Keep walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers. Hold outside legs and continue closing canopy as you walk towards your partner. The completely folded canopy should stand on its own (Fig. L).



Step 4: With the canopy standing, unzip the wheeled bag and slide bag down slowly until entire canopy is in. Invert the canopy, close the wheeled flap and zip shut (Fig. M).

Note: The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.