



## 3.5Qt. Deep Fryer



**Model EDF-3507**

## Instruction Manual

Before operating your new appliance, please read all instructions carefully and keep for future reference.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs if applicable.
3. This appliance produces heat. Do not use appliance on any surface that may be sensitive to heat damage.
4. Remove all packaging plastics and other materials from unit before operating.
5. Wash all removable accessories before using for the first time.
6. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
7. Close supervision is necessary when appliance is used by or near children.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
10. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
11. Do not place any of the following materials in the unit: Paper, cardboard, plastic and / or similar non-food materials.
12. Some countertop and table surfaces, such as Corian®, wood, stone and/ or laminates, are not designed to withstand prolonged heat generated by certain appliances. It is
13. Do not use outdoors.
14. Do not let cord hang over edge of table or counter or touch hot surfaces.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn control(s) to OFF position, then remove plug from wall outlet.
17. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
18. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
20. Extreme caution should be exercised when using containers constructed of a material other than metal or glass.
21. Always place the deep fryer on a stable surface and keep all flammable materials away from the unit during operation.
22. Make sure that the deep fryer is never near or on a switched-on stove or cooking surface.
23. Before you use the deep fryer it must be filled with the required amount of oil or fat. \*\*Never use the deep fryer without oil or fat because this could damage the unit.
24. If the deep fryer and/or cord are damaged, they must be repaired by

## IMPORTANT SAFEGUARDS

26. The electrical component is equipped with a safety heat switch, which ensures that the heating element can only function when the element is correctly placed on the fryer.
27. Do not overload the basket. For safety reasons never exceed the maximum quantity.
28. The oil level must always be between the MIN and MAX markings.
29. If the fryer has a removable pot, never remove it while the deep fryer is on.
30. The cooking times are given as guidelines only.
31. The oil must be filtered regularly and changed after 8 to 12 uses.
32. If you use solid vegetable shortening, cut it into pieces and melt it over slow heat in a separate pot beforehand, then slowly pour it into the deep fryer pot. Never pour shortening directly into the deep fryer pot or basket as this will lead to deterioration of the appliance.
33. Before you use the deep fryer it must be filled with the required amount of oil or fat. \*\*Never use the deep fryer without oil or fat because this could damage the unit.
34. **Never move the deep fryer during use.** The oil becomes very hot. Wait until the unit and the oil has completely cooled down before moving.
35. This deep fryer is protected with a thermal safety device which switches the machine off automatically if it
37. Be sure handles are properly assembled to basket and locked in place. See detailed assembly instructions.
38. Never immerse the appliance in water.
39. Never leave the deep fryer unattended while in use.
40. Always ensure the safety of children if they are near the deep fryer.
41. **In the case of overheating, the thermal protective device will switch off the fryer automatically. This device is a small reset button found either on the underside of the electrical component, or in the cord storage compartment. It can be re-activated by pushing the button in again with a pointed object (e.g. a pen).**

**\*\*Disconnect from power outlet before resetting!**

# SAVE THESE INSTRUCTIONS

## THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

### SHORT CORD PURPOSE

**NOTE:** A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. **Longer power-supply cords or extension cords are available and may be used if care is exercised in their**

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can unintentionally be pulled on or

### POLARIZED PLUG

 
If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the


### BEFORE FIRST USE

- Remove all printed documents and any other packaging materials.
- Pullout all removable parts and wash gently with hot water.
- When you fry several different kinds of food, always fry the food that uses the lowest temperature setting first.
- Do not mix different types of

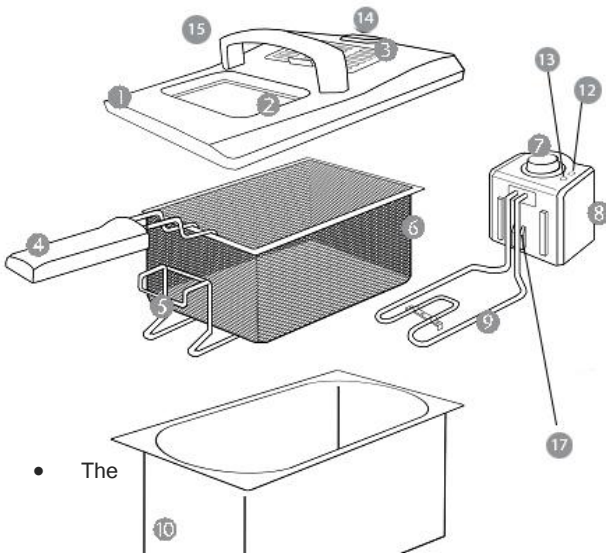

• The

## PARTS & FEATURES

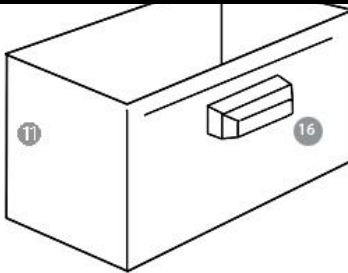 


- 1) Lid
- 2) Viewing Window
- 3) Filter Compartment
- 4) Basket Handle
- 5) Basket Drain Support
- 6) Wire Basket
- 7) Temperature Control Knob
- 8) Control Box
- 9) Heating Element
- 10) Removable Oil Tank
- 11) Main Body
- 12) Power Indicator Light (Red)
- 13) Temperature Ready Light (Green)
- 14) Filter Compartment Latch
- 15) Lid Handle
- 16) Main Body Handle
- 17) Safety Switch
- 18) Reset Button

## Reset button

 **Reset Function:** Your appliance is equipped with safety features. To prevent overheating, the thermal protective device will switch off the fryer automatically. This device is a small reset button found either on the backside or underside of the electrical component, or in the cord storage compartment. It can be re-activated by pushing the button in again with a toothpick or non-metal object.

**\*\*Disconnect from power outlet before resetting.**

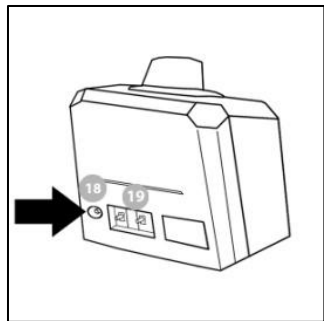

# HOW TO USE YOUR DEEP FRYER

## ASSEMBLING/PREPPING YOUR DEEP FRYER FOR USE:

1. Make sure the Deep Fryer is UNPLUGGED when assembling.
2. Make sure the Temperature Control Knob is set to the OFF position.
3. Place main body (11) on a flat, stable surface.
4. Insert oil tank (10) into main body (11).
5. Align grooves of Control Box (8) with grooves found on the main body (11). This will properly engage the small Safety Switch and ensure proper activation. Push down firmly to secure. If Safety Switch is not properly engaged, the unit will not power on.
6. Fill Oil Tank with Vegetable oil.

 
**NOTE:** The oil level should always be between the MIN and MAX level of the Oil Tank.

Do not exceed the maximum fill line as boiling oil may overflow during frying and can cause severe burns.

For best results we recommend vegetable oil.


7. To assemble handle (4), squeeze tines of handle together and insert into

8. Place tank rest tank

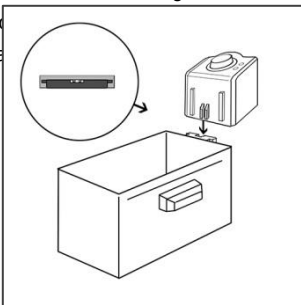

**NOTE:** Never use different types of oil at the same time as this may cause the oil to overflow.

MAX	14 CUPS/3.5Qt.
MIN	12 CUPS/2.9Qt.

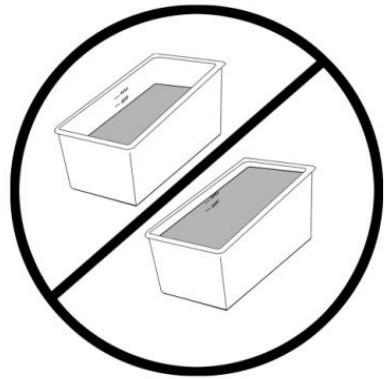 

**MAKE SURE TO ENGAGE THE SAFETY SWITCH:**


During assembly, make sure the control box is secured properly to the slots on the back of the body frame. This will properly engage the small safety switch and ensure proper activation.

## HOW TO USE YOUR DEEP FRYER

1. Attach the magnetic power cord to the inlet on the back of the control box.
2. PLUG the power cord into an outlet.
3. Move the Thermostat knob to desired temperature setting according to the particular recipe you are using. The RED and the GREEN indicator light will turn on.
4. While the oil is preheating, prepare the food that is going to be fried.
5. When the oil has reached the set temperature, the GREEN light will turn off.
10. Secure Lid (1) by placing on top of the wire basket (6), ensuring that the 2 small slots align with the tines of the wire basket handle (4).
11. When food has finished frying, remove the lid. Lift the basket up slowly out of the hot oil and place the basket on the drain support located on the back of the fry basket.
12. After the excess oil has drained, place the food on a paper towel lined baking sheet absorb excess oil.
13. If you are frying more than one batch, ensure the oil re-heats to the required temperature.
14. When frying is complete, turn controls to OFF position.

**NOTE:** *The GREEN ready light will cycle On and Off with the thermostat to maintain the set temperature. The RED power light will remain illuminated throughout use.*

 6. When placing the food into the basket, make sure it is as dry as possible. Do not add water, ice or wet food, it may cause HOT OIL SPLATTER or FOAMING.
7. When frying frozen food, clear off any ice particles and thaw food thoroughly.
8. Do not overfill the basket. Reduce the quantity for frozen foods.

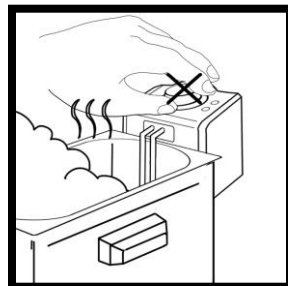



FOOD	Temp. (°F)	Weight	Estimated Time
------	------------	--------	----------------

foaming of the oil and overflowing.

AFTER FOOD IS FRIED:

## HOW TO USE YOUR DEEP FRYER

		(ounces)	
Shrimp	285	8	3-5 minutes
Onion	285	5	3-4 minutes
Mushrooms	285	10.5	6-8 minutes
Fish Fillet	300	8	5-6 minutes
Fish Fillet in batter	300	14	6-8 minutes
Fish Cakes or Balls	300	14	6-8 minutes
Sliced Meat	340	14	7-10 minutes
Steak	340	14	7-10 minutes
Chicken Strips	360	18	7-10 minutes
French Fries (1 <sup>st</sup> time)	375	18	6-10 minutes
French Fries (2 <sup>nd</sup> time)	375	8	3-5 minutes

**FRYING GUIDE:**

\*The frying times given in the chart are only a guide and should be adjusted accordingly to the quantity of food being fried.

 
**NOTE: No matter what the recipe, food must be dried thoroughly before frying. Otherwise, the moisture may cause foaming of the oil and**

# HOW TO USE YOUR DEEP FRYER

## AFTER FOOD IS FRIED:

- Make sure to turn the temperature control knob to the OFF position and unplug the deep fryer.
- Once food is done cooking, remove the lid, and hang the basket on the hook and let excess oil drip into the oil pot.

**WARNING: REMOVING THE LID WILL RELEASE HOT STEAM. TAKE EXTREME CARE WHEN HANDLING. KEEP FACE AND BARE SKIN CLEAR OF THE STEAM RELEASE.**

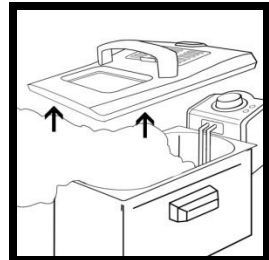

- Remove the basket and place the food on paper towels to absorb excess oil. **Do not touch the basket while it is still hot. Always use the handle.**
- After the excess oil has drained, place the food on a paper towel lined baking sheet to allow any remaining oil to drain away.
- Place the basket into the deep fryer.
- Do not move the deep fryer until it is cooled entirely.
- Unplug the power cord and place into storage if necessary.

# CARE AND CLEANING

1. Remove the lid and basket.

**WARNING: Before cleaning the deep fryer, make sure that it is disconnected from the power outlet, make sure the unit and the oil has completely cooled. Oil retains its temperature for a long period after use. Do not attempt to carry or move the deep fryer while the oil is hot.**

2. Wait for the fryer to cool, lift out the Control Box Assembly & Heating element.
3. Remove the oil pot and pour out the oil. It is recommended to filter the oil after each use if you are to re-use the oil again.
4. After removing the oil pot, the fryer can be divided into separate components to clean.
5. The oil pot and the main body can be immersed into water to clean.



6. **Note: Do not use abrasive scrubbing brushes or chemical cleaners to clean the unit.**  
The Control Box & Heating Element should be wiped clean with absorbent paper towels. Then use a damp cloth and a mild soap to clean.  
**WARNING: NEVER immerse the Control Box & Heating Element into water to clean.**
7. Dry all parts thoroughly.

## CARE AND CLEANING (CONT.)

 
### HOW TO REPLACE THE FILTERS:

Your carbon filter (black piece) should be changed every 6 months.

The oil filter (white piece) should be changed every 12 months.

- 1) Unclip and remove the filter cover.
- 2) Take out both white and black filter pieces.
- 3) Throw out old filters and replace with new filters. Make sure the White filter piece rests on the metal surface **BELOW** the carbon filter (black piece).

**NOTE:** Filters can be gently rinsed in warm soapy water as well and reused again. But it will need to be replaced after considerable amount of usage.

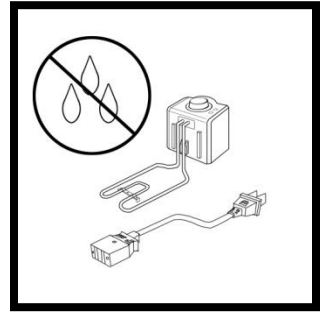

### **STORING YOUR DEEP FRYER:**

Always allow the appliance to cool completely before storing. Store the appliance in a dry location. Keep the power cord out of reach of children.

# RECIPES

## BATTER VARIETY

The following are a few quick recipes with different types of batter to use with a variety of foods to fry up in the deep fryer for a delicious meal.

### **Beer Batter:**

Mix together 1 ½ cups of flour and 1 ½ cups of any kind of beer in a large mixing bowl. Cover the bowl after mixing and allow the batter to sit at room temperature for approximately 3 hours. When ready to fry, dip desired food into the batter and follow the directions for frying battered foods in this booklet.

### **Egg Batter:**

Combine 2 egg yolks, ¾ cup of flour, 1-½ teaspoons of vegetable oil, ½ teaspoon of salt and 1 cup of milk. Mix thoroughly. Add more milk if desired to adjust the density of the mixture. When ready to fry, dip desired food into the batter and follow the directions for frying battered foods in this booklet.

### **Egg Coating:**

Combine 2 whole eggs with 1-½ teaspoons of vegetable and a pinch of salt and pepper to taste. When ready to fry, dip desired food into the mixture and follow the directions for frying foods in this booklet.

### **Extra Crispy Coating:**

Beat together ½ cup milk and one whole egg in a small mixing bowl. In a separate bowl, mix together ½ cup of flour and any of your favorite seasonings such as salt, pepper, chili powder, garlic powder, etc. When read to fry, dip desired food into the wet mixture first, then dip into the dry flour mixture. Then follow the directions for frying foods in this booklet.

### **Bread Crumb Coating:**

Beat together 1 ½ teaspoons of vegetable oil and 2 egg yolks in a small mixing bowl. IN a separate bowl, mix together ½ cup of bread crumbs, 1/3

cup of flour plus any of your favorite seasonings such as salt, pepper, chili powder, garlic powder, etc. When ready to fry, dip desired food into the wet mixture first, then dip into the dry bread crumb mixture. Then follow the directions for frying foods in this booklet.

### **TIPS FOR FRYING FOOD WITH BATTER COATING**

- Make sure food is always sliced thinly and evenly. This helps the food to be fried evenly.
- Shake off any excess flour or bread crumb coating to prevent any clumps from forming when frying.
- If you wish to use the basket when frying foods coated with batter, it is recommended to lower the basket into the hot oil first and then gently and carefully place battered foods into the oil directly. This will prevent the batter from catching and sticking to the wiring of the basket.
- Never fill the basket more than 2/3 full. In order to cook evenly, the food needs space for the frying oil to fry each side.

## **RECIPES**

### **FRIED CHICKEN WITH CREAMY GRAVY**

1/2 cup milk	1/4 teaspoon poultry seasoning
1 egg, beaten	1 (4 pound) whole chicken, cut into pieces
1 cup all-purpose flour	3 cups vegetable oil
2 teaspoons garlic salt	1 cup chicken broth
1 teaspoon paprika	1 cup milk
1 teaspoon ground black pepper	

- In a medium bowl, beat together 1/2 cup milk and egg.
- In a re-sealable plastic bag, mix together the flour, garlic salt, paprika, pepper and poultry seasoning.
- Place chicken in bag, seal, and shake to coat. Dip chicken in milk and egg mixture, then once more in flour mixture. (Reserve any remaining flour mixture.)
- In the deep fryer, heat oil to 365°F until ready.
- Place coated chicken in the hot oil, and brown on all sides. Reduce heat to 325°F, and continue cooking chicken until tender, about 30 minutes. Remove chicken from fryer, and drain on paper towels.
- Discard all but 2 tablespoons of the frying oil and place into a saucepan over low heat. Stir in 2 tablespoons of the reserved flour mixture. Stirring constantly, cook about 2 minutes. Whisk in chicken stock.
- Stir in 1 cup milk, and bring all to a boil over high heat, stirring constantly. Reduce heat to low, and simmer for about 5 minutes.

- Serve immediately with the chicken.

## **BEIGNETS**

Vegetable oil for frying	1/3 c. butter
1 c. all-purpose flour	1/4 tsp. salt
4 tsp. sugar	1 tsp. vanilla extract
1/4 tsp. nutmeg	4 eggs, at room temp.
1 c. water or milk	

- In the deep fryer, heat oil to 350°F degrees.
- Meanwhile, combine flour, sugar and nutmeg, set aside. In medium saucepan heat water or milk, butter and salt over medium heat until boiling and butter is melted. Add vanilla, then add flour mixture all at once.
- Stir briskly with a wooden spoon until mixture leaves sides of pan and forms a ball. Continue stirring a few minutes more until dry.
- Remove from heat and beat until slightly cooled.
- Add eggs, one at a time, beating well after each addition. Using 2 spoons, shape a generous tablespoon dough into an oblong and drop into hot oil.

# RECIPES

## **BEIGNETS CONTINUED...**

- Fry 3 or 4 at a time, turning beignets as they rise to the surface. Fry 3 to 4 minutes, until golden brown.
- Drain on paper towels and sprinkle immediately with sifted confectioners' sugar. Repeat with remaining batter.
- Makes about 2 dozen beignets

## **SHRIMP EGG ROLLS**

1 c. sifted flour	1/4 c. minced water chestnuts
3 eggs	1 tbsp. finely chopped onion
2 c. minced cooked shrimp	1 qt. corn oil
1 c. finely chopped celery	1/2 tsp. salt
1/4 c. minced bamboo shoots	1/4 tsp. Accent

- Combine flour, 1-cup water and 2 eggs. Beat at low speed of electric mixer for 5 minutes. Set aside for at least 15 minutes.

- Mix shrimp, celery, bamboo shoots, water chestnuts, onion, 2 tablespoons corn oil and seasonings thoroughly.
- Heat heavy 6-inch skillet until drop of water will sizzle. Grease lightly with corn oil before cooking each skin. Hold skillet off heat; pour 2 to 3 tablespoons batter into pan, moving and tilting pan while pouring. Pour excess back into bowl of batter; return skillet to heat. Batter will set very quickly.
- Cook just until set and edge curls slightly. Turn out onto dry dishtowel until ready to roll.
- Place about 2 tablespoons filling in center of each skin; brush edge with beaten egg. Fold nearest edge over filling; fold over sides about 1 inch. Roll skin; seal with beaten egg. Pour enough of remaining corn oil into deep fryer or skillet to fill 1/3 full.
- Heat over medium heat to 375 degrees or until 1-inch square of bread turns brown in 10 seconds.
- Add several egg rolls slowly; fry until lightly browned on all sides, turning as needed. Drain on absorbent paper. Repeat with remaining rolls. Yield: 15 egg rolls.

## RECIPES

### FUNNEL CAKE

2 c. flour  
 1 tsp. baking powder  
 1/2 tsp. salt  
 2 eggs  
 1 1/2 c. milk

- Combine all the above ingredients in order. Mix thoroughly.
- Heat cooking oil in deep fryer until correct temperature.
- Put batter in funnel (be sure to cover hole with one finger), then, holding the funnel over hot oil (be very careful!), release some of



the batter in circular motion, then criss-crossing motions to form one funnel cake.

- The funnel cake will rise quickly and expand – so be careful how much batter you use.
- Cook to light golden brown on both sides.
- Remove from oil and place on paper towels.
- Sprinkle with powdered sugar and serve warm.

## **GOLDEN FRIED ONION RINGS**

6 med. mild white onions

1 1/8 c. sifted flour

1/2 tsp. salt

1 egg, slightly beaten

1 c. milk

- Slice onion 1/4 inch thick and separate into rings.
- Combine remaining ingredients in a bowl and stir just until dry ingredients are moistened.
- Dip onion rings into flour mixture.
- Fry several at a time in a deep fryer until golden brown. Drain on paper towel and sprinkle with salt.

# RECIPES

## **BUFFALO WINGS**

24 wings (4 lbs.)

Salt & pepper (optional)

4 c. cooking oil

1/4 c. butter

2 to 5 tsp. hot sauce

1 tsp. white vinegar

- Cut off tips and separate wings at joint; sprinkle with salt and pepper, to taste.
- Heat oil in deep fat fryer or large heavy pot. When quite hot, add 12 wings and cook 10 minutes, stirring occasionally.
- When wings are golden brown and crisp, remove and drain well. Add rest of wings; repeat process.
- Meanwhile, melt butter in saucepan; add hot sauce, to taste and vinegar. Pour sauce over wings and mix well to cover.
- Serve with Blue Cheese Dressing and celery sticks.

### **CORN DOGS**

1/2 c Yellow corn meal

6 ea Skewers or sticks

1/2 c Flour

1 tbsp Sugar

1 tsp Honey

1 tsp Baking powder

1/2 tsp Salt

1/2 c Milk

1 ea Egg, lightly beaten

1 tbsp Melted shortening

6-8 Hot Dogs / Frankfurters

- Combine the cornmeal, flour, sugar, mustard, baking powder and salt, mixing well.
- Add the milk, egg and shortening, mixing until very smooth.
- Pour the mixture into a tall glass. Put the frankfurters on sticks.
- Dip them into the cornmeal batter to coat them evenly.
- Deep fry in oil heated to 375 degrees until golden brown, about two minutes.
- Drain on paper towels.

## **RECIPES**

## **BEER BATTER FISH FILETS**

1 cup all-purpose flour	1/2 cup milk
1 teaspoon salt	2 eggs
1 teaspoon baking powder	2 pounds cod fillets
1/2 teaspoon dried dill weed	2 quarts vegetable oil for frying
3/4 cup beer	

- In a large bowl, mix together flour, salt, baking powder, and dill. Add beer, milk, and eggs; mix well.
- Place fish fillets in batter mixture, coat well, and let stand for 15 minutes.
- Heat deep fryer to 375°F. Place fish in hot oil, and fry until golden brown.
- Cook fish in batches to maintain oil temperature. Serve.

## **FRIED GREEN TOMATOES**

3-4 lg. green tomatoes	1 tbsp. seasoning salt
2 c. flour	2 eggs
1 tbsp. salt	2 c. milk
1 tbsp. pepper	Oil for frying

- Cut tomatoes into almost 1/2-inch thick slices.
- Mix flour, salt, pepper and seasoning salt in one bowl.
- Mix eggs and milk in another bowl. Dip each tomato slice into the milk mixture, then into the flour, back to the milk and then to the flour again, coating well.
- Heat oil in a deep fryer to 350 degrees and add battered tomato slices a few at a time, and cook for 5 minutes or until golden brown.

## **CHURROS**

Vegetable for frying	1 cup all-purpose flour
1 cup water	3 eggs
1/2 cup margarine or butter	1/4 cup sugar
1/4 teaspoon salt	1/4 teaspoon ground cinnamon

- Prepare to fry the churros by heating oil in deep fryer to 360 degrees F.
- To make churro dough, heat water, margarine and salt to rolling boil in 3-quart saucepan; stir in flour.
- Stir vigorously over low heat until mixture forms a ball, about 1 minute; remove from heat.

- Beat eggs all at once; continue beating until smooth and then add to saucepan while stirring mixture.

## RECIPES

### CHURROS CONTINUED...

- Spoon mixture into cake decorator's tube with large star tip (like the kind use to decorate cakes).
- Squeeze 4-inch strips of dough into hot oil. Fry 3 or 4 strips at a time until golden brown, turning once, about 2 minutes on each side. Drain on paper towels.
- Mix Sugar and the optional cinnamon; roll churros in sugar mixture.

### SWEET & SOUR CHICKEN

#### **MARINADE:**

1/2 tsp. salt  
 1 1/2 tsp. soy sauce  
 1 tbsp. cornstarch  
 1 tbsp. cold water

#### **BATTER:**

1/2 c. chicken coating mix  
 1/2 c. ice water  
 1 egg yolk

#### **SWEET AND SOUR SAUCE:**

1/2 c. Kraft Sweet and Sour Sauce  
 1/4 c. chicken broth  
 1/4 c. water  
 1/2 tsp. cornstarch  
 1 green pepper, cut into 1 inch pieces  
 1 med. carrot, sliced inch long then  
 lengthwise  
 1/2 c. sliced water chestnuts  
 1 can chunk pineapple

- Combine marinade ingredients in a small bowl. Add chicken, mix well. Let stand 30 minutes.
- Combine batter ingredients in a medium bowl until just mixed. Do not stir to blend.
- Combine Sweet and Sour Sauce, chicken broth, water and cornstarch in a small bowl, set aside.
- Heat oil in deep fryer to 350 degrees
- While oil is heating, coat each piece of chicken with batter. Reduce heat to medium.

- Carefully lower coated chicken into hot oil with fryer basket.
- Deep fry chicken 3 minutes or until browned. Remove from oil.
- Turn heat up to high and heat oil to 400 degrees.
- Carefully place chicken all at once in hot oil and deep-fry until crisp, about 30 seconds.
- Remove chicken, draining well. Place on platter.
- Using a fry pan, place 2 tablespoons oil. Heat to medium. Stir-fry green peppers, carrots and water chestnuts 2 minutes.
- Add Sweet and Sour Sauce mixture. Stir in pineapple. Stir-fry until sauce has thickened. Remove from heat.
- Stir in chicken and serve immediately. Makes 4 servings.

**LIMITED WARRANTY\* ONE (1) YEAR**  
**WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE**

1. Your small kitchen appliance is built with precision, inspected and tested before leaving our factory.
2. It is warranted, to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are past the store's allowed return policy period, please see the enclosed Warranty.
4. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
5. During the one-year warranty period, a product with a defect will be either repaired or replaced with a new or reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below).
6. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
7. **This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does NOT cover:**
  - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
  - Damages caused in shipping.
  - Damages caused by replacement or resetting of house fuses or circuit breakers.
  - Defects other than manufacturing defects.
  - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
  - Lost or missing parts of the product. Parts will need to be purchased separately.
  - Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
  - Damage from service or repair by unauthorized personnel.
  - Extended warranties purchased via a separate company or reseller.
  - Consumer's remorse is not an acceptable reason to return a product to our Service Center.

\*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty.

For international warranty, please contact the local distributor.

\*\*Any instruction or policy included in this manual may be subject to change at any time.

***MAXI-MATIC, USA***

18401 E. Arenth Ave. City of Industry, CA 91748

Customer Service Dept: (626) 912-9877 Ext: 120/107 MON-FRI 8am-5pm PST

Website: [www.maxi-matic.com](http://www.maxi-matic.com) email: [info@maxi-matic.com](mailto:info@maxi-matic.com)

## **RETURN INSTRUCTIONS**

### **RETURNS:**

A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service (contact information shown below) to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

B. IMPORTANT RETURN INSTRUCTIONS. Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic USA:

1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.

2. Before packing your unit for return, be sure to enclose:

a) Your name, full address with zip code, daytime telephone number, and RA#,

b) A dated sales receipt or PROOF OF PURCHASE,

c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and

d) Any parts or accessories related to the problem.

3. Maxi-Matic USA recommends you ship the package U.P.S ground service for tracking purposes. We cannot assume responsibility for lost or damaged products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.

**4. All return shipping charges must be prepaid by you.**

5. Mark the outside of your package:

MAXI-MATIC USA

18401 E. ARENTH AVE.

CITY OF INDUSTRY, CA 91748

6. Once your return has been received by our warehouse, Maxi-Matic USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.

**7. Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**

# IMPORTANTES MEDIDAS DE SEGURIDAD

Cuando use aparatos eléctricos, precauciones básicas de seguridad deberán seguirse, incluyendo las siguientes.

- Lea todas las instrucciones cuidadosamente, antes de usar el aparato
- No toque las superficies calientes, use el mango o las agarraderas.
- Remueva todo material de empaque, antes de usar el aparato
- Lave todas las partes o accesorios removibles, antes de usar por vez primera.
- Para protegerse, de una descarga eléctrica, no sumerja el cordón, enchufe eléctrico o aparato en agua o ningún otro líquido.
- Cercana supervisión es necesaria, cuando el aparato sea usado por o cerca de niños
- Desconecte el aparato, cuando no esté en uso y antes de limpiarlo. Permita que se enfríe, para remover las partes o accesorios.
- Nunca use ningún aparato con el cordón dañado, enchufe, mal funcionamiento o dañado en alguna otra forma.
- El uso de accesorios no recomendados por el fabricante, pueden causar daños personales o al aparato.
- No lo use a la intemperie o en lugares húmedos.
- No deje que el cordón cuelgue de la orilla de la mesa, mostrador o toque cualquier superficie caliente.
- No lo ponga sobre o cerca de superficies calientes como estufas y hornos
- Siempre deberá conectar el cordón eléctrico al aparato y después al toma corriente eléctrica, si aplica.
- Siempre deberá de apagar el aparato antes de desconectar del toma corriente.
- Nunca introduzca utensilios de metal en el aparato, podría causar fuego, descarga eléctrica o daños personales
- Fuego podría ocurrir, si el aparato es cubierto o toca material inflamable como cortinas alfombras y paredes cuando esté en uso.
- Extrema precaución deberá tener cuando use depósitos construidos de otro material que no sean de metal o vidrio, si aplica.
- No guarde ni ponga ningún material dentro del aparato, únicamente los accesorios recomendados por el fabricante, cuando no esté en uso.
- No ponga dentro o en la superficie exterior del aparato los siguientes materiales, papel, cartón, plásticos o algún otro material inflamable.
- Para reducir el riesgo de una descarga eléctrica, este Aparato tiene una ploga polarizada (un lado de las navajas de la ploga es mas ancha que la otra) y esta diseñada para entrar en un reseptáculo polarizado de una sola manera..
- No utilice este aparato para otra cosa, sino para lo que fue diseñado.
- Nunca coloque los siguientes materiales dentro de la unidad: Papel, cartón, plásticos o materiales similares que no sean comestibles.
- Algunos superficies de mesas y mostradores hechos o recubiertos de laminados de CORIAN, MADERA FINA O FORMICA, no estan diseñados para soportar calores prolongados generados por ciertos aparatos eléctricos de cocina. SE RECOMIENDA COLOCAR MANOPLAS DE COCINA O MANTELES RESISTENTES AL CALOR BAJO SU APARATO.



- En caso de sobrecalentamiento el dispositivo termico de seguridad apagara la freidora automáticamente. Este dispositivo es un pequeno boton y lo puede localizar en la base o el compartimento donde se guarda el cordón eléctrico. Y puede ser activado utilizando un objeto puntiagudo para empujar el dispositivo o botón de seguridad .**GUARDE ESTAS INSTRUCCIONES**

## PROPÓSITO DEL CORDÓN CORTO

**ESTE PRODUCTO ES PARA USO DOMÉSTICO ÚNICAMENTE.**

- 1) Se incluye un cordón eléctrico corto en este aparato con el propósito de reducir riesgos de lastimarse usted mismo ya que podría tropezar .
- 2) Extensiones eléctricas pueden usarse .
- 3) Si va a utilizar un cordón más largo, tenga en consideración lo siguiente:

La extensión eléctrica a utilizar deberá ser igual o de mas amperaje que las especificaciones eléctricas del aparato.

 
Para evitar un tropiezo o enredarse con la extensión eléctrica, deberá de acomodarse de tal manera de que no cuelgue del lugar donde tiene colocado el aparato, o que éste pueda ser jalado por niños o sus mascotas.

## USO DE ENCHUFE POLARIZADO

**Ésta tiene un enchufe polarizado.** Significa que una de las dos navajas que componen el enchufe es más ancho que el otro, favor de seguir las siguientes recomendaciones:

**Para reducir el riesgo de una descarga eléctrica.** Este enchufe solo se conecta de una sola manera en la toma de corriente eléctrica, si el enchufe no entra en el receptáculo inviértalo y trate de introducirlo de nuevo, si aún no entra en el receptáculo, contacte a un electricista calificado. No intente modificar el enchufe de ninguna manera.

## DESCRIPCION DE PARTES

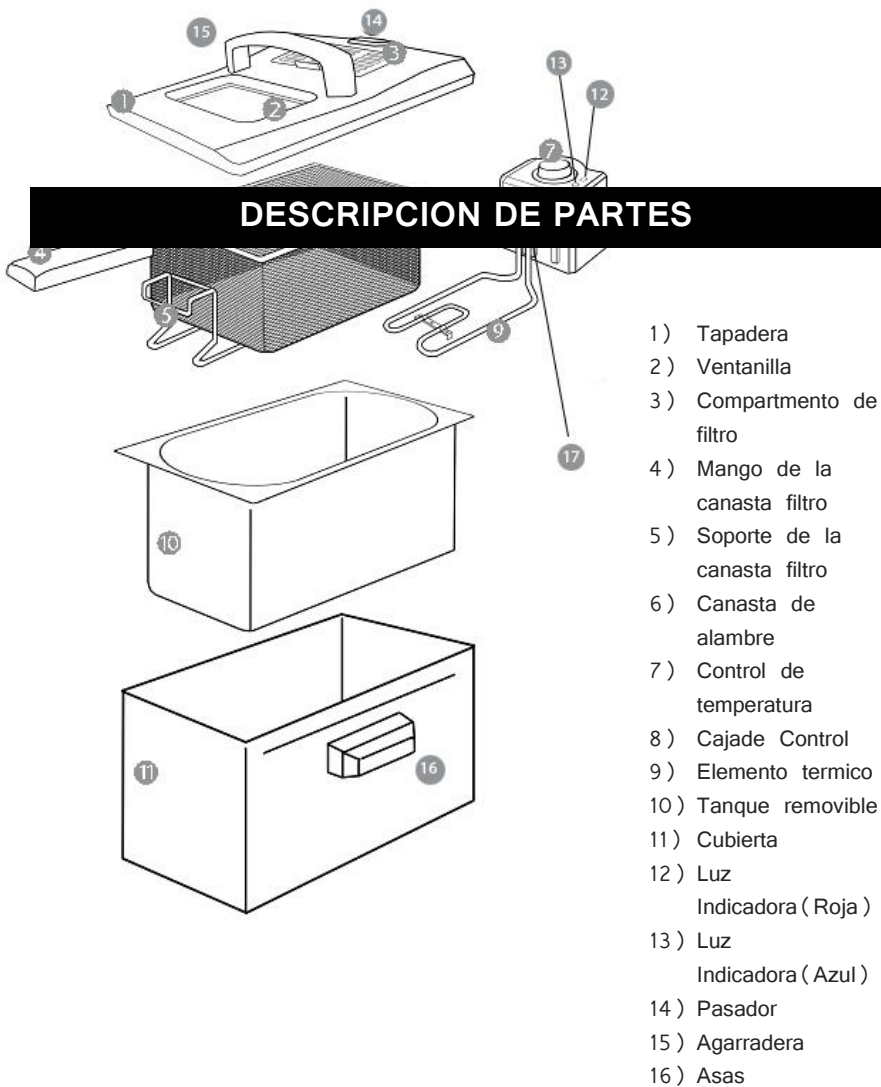


En caso de sobrecalentamiento el dispositivo termico de seguridad apagara la freidora automáticamente. Este dispositivo es un pequeno boton y lo puede localizar en la base o el compartimento donde se guarda el cordón eléctrico.

Y puede ser activado utilizando un objeto puntiagudo para presionar el dispositivo o botón

## RECOMMENDACIONES

 1. Siempre ponga la freidora en una superficie plana y estable y mantenga todo material inflamable alejado de la unidad mientras la este utilizando.
2. Asegurese de que la freidora no este cerca o en la estufa
3. Antes de utilizar la freidora de vera de llenarse con la cantidad necesaria de aceite. \*\*Nunca utilice la freidora sin aceite podría dañarse la unidad.
4. **Nunca trate de mover la freidora durante su uso.** El aceite se calienta mucho, espere a que la unidad y el aceite se enfríe completamente antes de moverlo.
5. La freidora esta protegida con un interruptor térmico integrado el cual apaga la unidad si se sobrecalienta.
6. Nunca sumerja la unidad en agua o en ningún otro líquido.
7. Nunca deje la freidora desatendida mientras este en uso.
8. Siempre asegurese de la seguridad de los niños cuando esten cerca de la unidad
9. Si la freidora o el cordón eléctrico estan dañados, deberan ser reparados inmediatamente en un centro de servicio profesional, no lo trate de reparar o reemplazar el cordón eléctrico usted mismo. Se requiere herramienta especial.
10. Asegurese de no dañar el elemento térmico. No lo doble o golpee.
11. La freidora tiene un interruptor térmico que funcionara si el elemento térmico esta

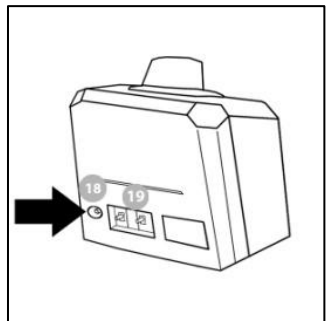


correctamente colocado en la freidora.

12. En caso que la freidora se sobre caliente, el interruptor térmico se activara y apagara la freidora automáticamente. Este dispositivo es un boton de color rojo que se localiza bajo el compartimento del cordón eléctrico. Puede ser reactivado con solamente presionarlo con un objeto puntiagudo como con una pluma. **\*\*Disconecte del toma corriente antes de reactivarlo.**

## COMO PREPERAR SU FREIDORA

 - Quite todo material de empaque incluyendo manuales
- Lave todas las partes suavemente con agua y jabón

**No sumerja el cordón eléctrico o elemento térmico en agua o ningn otro líquido.**

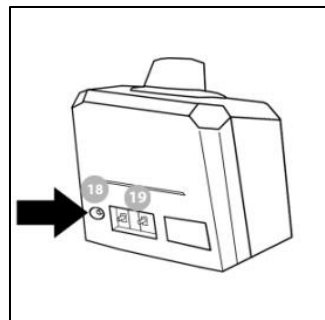

- Seque todas las partes perfectamente antes de ensamblarlas en la freidora
- No utilice la freidora sin suficiente aceite en el deposito

- La freidora siempre debe ponerla en una superficie plana y estable donde el cordón eléctrico este fuera del alcance de los niños y que se enreden en el mismo.

**Ideas:**

- Cuando fría diferentes tipos de alimentos siempre empiese con los alimentos que se frían a mas baja temperatura.
- Nunca mezcle diferentes tipos de aceite para freir alimentos.
- Al freir alimentos pre-cocinados tomaran menos tiempo para freir que los que estan crudos.
- Reemplace el aceite despues de cada 10-15 usos; O más pronto si el aceite se torna café y espeso.

## **ADVERTENCIAS PARA MAYOR SEGURIDAD**

- **ESTA FREIDORA ESTA DISEÑADA PARA FREIR CON ACEITE LÍQUIDO ÚNICAMENTE. SI MANTECA O GRASA SOLIDA ES UTILIZADA VAPOR DE AGUA QUEDARA ATRAPADA Y EL ACEITE CALIENTE PODRIA SALTAR FUERA DE LA FREIDORA CON FUERZA CONSIDERABLE**
- Nunca encienda la freidora sin aceite, al acerlo podria dañar la unidad. No ponga agua u otras sustancias en el contenedor.
- Ponga la freidora en una superficie estable y plana. La freidora se calentara durante su uso, asegurese de que no este muy cerca de algún objeto y pueda causar un incendio.

## **COMO UTILIZAR LA FREIDORA**

- Asegurese de que la freidora este desconectada del toma corriente.
- Coloque el elemento térmico en el contenedor de aceite. Asegurese de que el elemento térmico este instalado correctamente y el interruptor

(**ROJO**) de seguridad este activado. De otra manera la freidora no encendera.

- Quite la canasta freidora y cuelguela de la orilla del deposito de aceite.
- Utilize unicamente aceite de buena calidad como aceite de cacahuete, aceite vegetal, aceite de elote, aceite de girasol, aceite de canola o aceite de oliva (**se recomienda no mezclar el aceite de una clase con otro tipo**)
- Llene el contenedor con aceite entre las marcas de **MIN. y MAX.**
- **Nunca se sobrepase de la marca de MAX. O menos de MIN.**
- Asegurese de que el control de temperatura este en apagado(**OFF**).
- Conecte la unidad al toma corriente.
- Ajuste el control de temperatura a la temperatura deseada o de acuerdo a su recetario de cocina. La luz indicadora **ROJA y LA VERDE** encenderán.
- Mientras el aceite se calienta, prepare los alimentos que van a ser freídos.
- Cuando el aceite aya alcanzado la temperatura seleccionada la luz verde se apagara.

**NOTA:** La luz verde de preparado tendra ciclos de apagado y encendido manteniendo asi la temperatura seleccionada. La luz roja se mantendra iluminada durante todo el tiempo que este en uso la freidora.

- Cuando coloque los alimentos en la canasta freidora, asegurese de que esté completamente seca. No agregue agua, hielo o alimentos mojados, **podría causar que el aceite salpicara.**
- Cuando fria alimentos congelados, limpielo de cualquier particula de hielo y descogele por completo.
- No sobre llene la canasta freidora con alimentos.
- Baje la canasta con alimentos dentro del aceite caliente
- Tape la freidora.

**ADVERTENCIA:** NO MUEVA EL TABLERO DE CONTROL DURANTE EL PROCESO DE FREIR. VAPOR CALIENTE PODRÍA ESCAPAR Y CAUSARLE QUEMADURAS GRAVES.

- Cuando los alimentos se han terminado de freir, remuva la tapadera. Levante la canasta y saque lentamente del contenedor de aceite y coloquelo en el soporte localizado detras de la canasta freidora.
- Despues que el exeso de aceite se a drenado ponga los alimentos sobre toallas de papel para quitar el exedente de aceite.
- Si va a continuar friendo asegurese de que el aceite se recaliente otra vez a la temperatura seleccionada.

# GUIA DE COMO FREIR

Los tiempos dados en esta tabla son unicamente una guía y deberan ajustarse de acuerdo a la cantidad de alimentos que van a ser freidos.

**TABLA DE SUGERENCIAS APROXIMADAS**

TIPO DE ALIMENTO	Temp. °F	PESO EN (GRAMOS)	Estimated Time
Camarones	285°	226	3-5 minutos
Cebollas	285°	141	3-4 minutos
Hongos	285°	297	6-8 minutos
Filete de pescado	300°	226	5-6 minutos
Fish Fillet in batter	300°	396	6-8 minutos
Pastelillos o bolas de pescado	300°	396	6-8 minutos
Carne en rebanadas	340°	396	7-10 minutos
Filete de rez	340°	396	7-10 minutos
Trozos de pollo	360°	510	7-10 minutos
Papas a la francesa (1 <sup>st</sup> time)	375°	510	6-10 minutos
Papas a la francesa (2 <sup>nd</sup> time)	375°	226	3-5 minutos

\*Papas a la francesa que son refreidos por 2<sup>da</sup> vez seran mas livianos y dorados.

## DESPUES DE QUE LOS ALIMENTOS HAN SIDO FREIDOS:

1. Asegurese de poner el control de temperatura esté en apagado **OFF** y desconectado del toma corriente.
2. Una vez que haya terminado de cocinar, quite la tapadera de la freidora, cuelgue la canasta freidora para que el exeso de aceite caiga dentro del propio contenedor de aceite.

**Advertencia:** Al remover la tapadera de la freidora escapara vapor caliente, tenga mucha precaucion al destaparla. Mantenga la cara y manos alejados del vapor que escapa.

3. Saque la canasta y ponga los alimentos en servilletas de papel para que absorba el exeso de aceite. **No toque la canasta cuando este caliente. Utilize la agarradera.**
4. Despues que el exeso de aceite se a drenado, ponga los alimentos en tollas de papel para que absorba completamente el exeso de aceite.
5. Coloque la canasta dentro de la freidora.
6. No mueva o la lleve de un lugar a otro la freidora hasta que este completamente fría.
7. Desconecte la freidora del toma corriente y guarde.

## COMO LIMPIAR LA FREIDORA

1. Quite la tapadera de la freidora.

**ADVERTENCIA:** Antes de limpiar la freidora asegurese que esté desconectada del toma corriente, tambien asegurese de que la unidad y el aceite esten completamente fríos. El aceite retiene su temperatura por largos periodos de tiempo despues del uso. No intente mover la freidora mientras el aceite este caliente.

2. Espere a que la freidora enfrie, levante el elemento térmico.
3. Remueva el deposito del aceite vacie en un tazón se recomienda filtrar el aceite despues de cada uso si planea reuzar el mismo aceite otra vez.
4. Despues de remover el depósito de aceite la freidora se podra dividir en varias partes para limpiar.
5. El depocito del aceite y la base se pueden sumergir en el agua par alimpiar o lavar
6. El elemento térmico devera de ser limpiado con toallas de papel absorbente. Luego utilice un trapo húmedo con un poco de jabón para limpiarlo.

**PRECAUCIÓN:** No sumerja el elemento térmico en agua para limpiar.

7. Seque todas las partes completamente.

**Nota:** Nunca utilice limpiadores abractivos, cepillos de alambre o químicos para limpiar la unidad.

### COMO REMPLAZAR LOS FILTROS:



Los filtros de carbón deberán de cambiarse cada 6 meses, El filtro del aceite cada 12 meses.

- 4) Quite la tapa del filtro.
- 5) Remueva los dos filtros el blanco y el negro.
- 6) Desagase de los filtros viejos y reemplace con nuevos. On. Asegúrese de que el filtro blanco descansa en la superficie de metal bajo el filtro de carbón ( filtro negro ).

## COMO LIMPIAR LA FREIDORA

- Siempre permita que la freidora enfríe completamente antes de guardarla.
- Guarde la freidora en un lugar seco y mantenga el cordón eléctrico fuera del alcance de los niños.

## EL USO DE UN CORDON ELECTRICO CORTO

**NOTA:** Un cordón eléctrico corto se ensambla en el aparato, para reducir el riesgo de daños personales como el enredarse o tropezar con el cordón eléctrico, Si un cordón eléctrico es requerido, extensiones eléctricas están disponibles para su compra en su ferretería local y podrán ser utilizadas si se toman las debidas precauciones. Si una extensión eléctrica es utilizada:

(1) Las especificaciones eléctricas del cordón devesa cuando menos ser de las mismas especificaciones electricas o más que el aparato a utilizar:

(2) La extensión eléctrica devesa de colocarse de manera que no cuelgue de la orilla de la mesa donde podrán accidentalmente ser jalados por niños o mascotas.

### **INSTRUCCIONES ESPECIALES:**

- Para evitar una sobre carga eléctrica cuando use este producto, no utilice otro aparato de alta potencia (watage) en el mismo circuito o en el mismo receptaculo eléctrico.
- Evite el uso de extensiones eléctricas porque la extensión se podra sobrecalentar y causar riesgo de incendio.

**PRECAUCIÓN:** Este aparato esta equipado con una ploga polarizada(**un lado de la navaja de la ploga es mas ancha que la otra**) como una característica de seguridad para reducir el riezgo de una descarga eléctrica. Esta ploga esta diceñada para entrar de una sola manera. Esta es una característica de seguridad. Si usted no puede introducir la ploga en el enchúfe eléctrico, Haga girar la ploga 180° grados y trate de nuevo. Si el enchúfe no entra de ninguna manera, pongase en contacto con un electricista aprobado. Nunca utilice una extensión eléctrica sin que pueda introducir completamente la ploga en el receptaculo eléctrico. No altere la ploga de ninguna forma. No intente eliminar las características de seguridad de la ploga eléctrica polarizada.

Un cordón eléctrico corto a sido ensamblado en su aparato para reducir el riezgo de daños personales de enredarce o tropezar con el cordón.

Extensiones eléctricas están disponibles y pueden ser usados si toma las devidas precauciones. durante su uso.

Si una extensión eléctrica mas larga va a ser utilizada favor de tomar muy en cuenta lo siguiente:

**Las especificaciones eléctricas(voltage, watage y amperage) de la extensión eléctrica de vera de ser igual o de más potencia que el aparato que se va a usar.**

***Este aparato es de uso domestico unicamente***

**GARANTÍA LIMITADA \* UN (1) AÑO**

**GARANTIA ES VALIDA CON UNA PRUEBA DE COMPRA FECHADA**

1. Su aparato de cocina está construido con precisión, inspeccionados y probados antes de salir de nuestra fábrica.
2. Se garantiza, al comprador original, de estar libres de defectos de fabricación en condiciones de uso normales y las condiciones para un (1) año, cordones excluidos. Esta garantía se aplica sólo al comprador original de este producto.
3. Si necesita cambiar la unidad, devuélvala en su caja original, con el recibo de compra, a la tienda donde lo compró. Si usted está más allá del plazo concedido para el retorno por la política de la tienda, por favor consulte la garantía incluida.
4. Si utiliza el aparato para uso doméstico y de acuerdo con las instrucciones, debería ofrecerlele años de servicio satisfactorio.
5. Durante el período de garantía de un año, un producto con un defecto será reparado o reemplazado por un modelo nuevo o reacondicionado (a nuestro criterio) cuando el producto sea devuelto a nuestro Centro de Servicio. (Consulte la sección "Devoluciones" a continuación).
6. El producto reparado o reemplazado estará garantizado por el saldo restante del período de garantía de un año y un plazo adicional de un mes.
- 7. Esta garantía limitada cubre los aparatos comprados y usados en los 50 estados contiguos y el Distrito de Columbia, y no cubre:**
  - Los daños causados por el uso excesivo, negligencia, uso y desgaste normal, uso comercial, montaje o instalación incorrecta del producto.
  - Los daños causados durante el envío.

- Los daños causados por la sustitución o reposición de fusibles o disyuntores.
- Defectos que no sean defectos de fabricación.
- Rotura causada por mal uso, abuso, accidente, alteración, falta de cuidado y mantenimiento, o incorrecta de corriente o voltaje.
- Pérdida o falta alguna pieza del producto. Las piezas se deben comprar por separado.
- Daños de piezas que no sean eléctricos; por ejemplo: agrietado o roto de plástico o de vidrio.
- Daños por servicio o reparación por personal no autorizado.
- Las garantías extendidas compradas a través de una empresa independiente o revendedor.
- Remordimiento del consumidor no es una razón aceptable para devolver un producto a nuestro Centro de Servicio.

\* Un año de garantía limitada válida solamente en los 50 **estados contiguos y el Distrito de Columbia, excluyendo Puerto Rico y las Islas Vírgenes.**

Esta garantía es válida sólo si el producto es comprado y operado en los EE.UU., el uso del producto que se encuentra en violación de las instrucciones escritas proporcionadas con la unidad anulará esta garantía.

Para la garantía internacional, por favor póngase en contacto con el distribuidor local.

\*\* Cualquier instrucción o política incluida en este manual puede estar sujeta a cambios en cualquier momento.

### **MAXI-MATIC, EE.UU.**

18401 E. Ave Arenth. City of Industry, CA 91748

Departamento de Atención al Cliente: (626) 912-9877 Ext: 120/107 Lunes a viernes 8am-5pm PST Sitio web: [www.maxi-matic.com](http://www.maxi-matic.com) email: [info@maxi-matic.com](mailto:info@maxi-matic.com)

## **INSTRUCCIONES DE DEVOLUCIÓN**

### **DEVOLUCIONES:**

A. Cualquier devolución de mercancía defectuosa al fabricante deben ser procesados apropiadamente contactando primero al servicio al cliente (información de contacto se muestra a continuación) para obtener un # RA (Número de autorización de devolución). No se aceptará ninguna devolución de mercancía sin un # RA aplicable.

B. INSTRUCCIONES IMPORTANTES DE RETORNO. Su garantía depende que usted siga estas instrucciones si va a devolver la unidad a Maxi-Matic EE.UU.:

1. Empaque cuidadosamente el producto en su caja original o en otra caja adecuada para evitar daños durante el envío.
2. Antes del envío de la devolución unidad, asegúrese de adjuntar:
  - a) Su nombre, dirección completa con código postal, número de teléfono durante el día, y #RA
  - b) Un recibo de compra fechado o COMPROBANTE DE COMPRA,
  - c) El número de modelo de la unidad y el problema que tiene (Encierre en un sobre y pegue directamente a la unidad antes de sellar la caja) y
  - d) Todas las piezas o accesorios relacionados con el problema.
3. Maxi-Matic EE.UU. recomienda enviar el paquete de servicio terrestre de UPS para fines de seguimiento. No podemos asumir la responsabilidad por productos perdidos o dañados devueltos a nosotros durante el transporte entrante. Para su protección, siempre cuidadosamente empaquetar el producto para su envío y asegurarlo con la compañía. Envíos C.O.D no puede ser aceptado.

**4. Todos los gastos de envío de devolución debe ser pagado por usted.**

5. Marque el exterior del paquete:

MAXI-MATIC EE.UU.

18401 E. ARENTH AVE.