

PART

Α

В

С

D

Ε

F

G

Н

J

K

M6 X 15 L

Bolt

+ 1 spare

Qty. 36

the product.

WARNING

PREPARATION

Leg Post

Top Crossbar

Top Crossbar

Top Crossbar

Top Crossbar

Slim Crossbar

Slim Crossbar

Canopy Side Bar

Canopy Side Bar

NOTE: Crossbars and sidebars are labeled.

HARDWARE CONTENTS (shown to size)

M6 X 20 L

Qty. 8

SAFETY INFORMATION

attempt to assemble the product.

ASSEMBLY INSTRUCTIONS

(D & E) and (F & G).

M6 x 15 L Bolt

M6 Washer

ASSEMBLY INSTRUCTIONS

(D & E).

inside).

2. Adjust the distance of the two assembled top crossbars (B & C). (Note: Make sure they are parallel and symmetrical). Place top crossbars (B & C) onto top crossbars

3. Stand up the four leg posts (A). (Note:

4. Lift the assembled top frame on top of the leg post (A) (Note: Make sure the gaps are at the top). Line up the holes, insert an M6 x 20 L bolt (BB) through a metal washer (DD), through the bracket of leg post (A), and into the top crossbar for each hole. Don't tighten completely. Repeat procedure for the other three leg posts (A) and top

frame. Securely tighten all bolts.

M6 x 20 L Bolt

M6 Washer

ASSEMBLY INSTRUCTIONS

5. Attach one support bar (H) to the top frame and leg post (A) by inserting an M6 x 25 L bolt (CC), through a metal washer (DD), through support bar (H) and into leg post (A). Don't tighten completely. Repeat procedure for remaining seven support

6. Put each assembled slim crossbars (F & G)

into the gaps of the top crossbar (B & C).

7. Insert the canopy side bar (J) into the canopy side bar (I). Repeat procedure

for the other canopy side bars.

ASSEMBLY INSTRUCTIONS

canopy (K) if necessary.

8. Place the canopy (K) onto the top frame.

9. Secure the pergola to the ground by

canopy (K) to each leg post (A).

The pergola with canopy is ready for use!

CANOPY REMOVAL INSTRUCTIONS

winds, heavy rains or snow.

canopy from pergola frame.

CARE AND MAINTENANCE

ONE-YEAR LIMITED WARRANTY

for personal, residential purposes.

defects in material or workmanship.

natural causes are not covered.

year.

Wash with mild soap. Rinse with water and let air dry.

10. CAUTION: Do not leave out during high

Remove the canopy side bar and the

Lawn Stake

Hardware Used

inserting the lawn stakes (EE) through the holes in the bottom of each leg post (A) and into the ground. Securely tighten all bolts. Fasten the slings attached to the

Insert two canopy side bars (I & J) into the sleeves of canopy (K). Adjust two ends of

bars. Securely tighten all bolts.

M6 x 25 L Bolt

M6 Washer

Hardware Used

x 8

x 8

4

5

x 16

5

8

9

10

6

CAUTION: Do not leave out during high winds, heavy rains or snow. Remove canopy.

This warranty is extended to the original purchaser and applies to defects in materials and

Replacement canopies may be available for purchase on Lowes.com if out of warranty.

workmanship of your patio furniture provided your furniture is maintained with care and used only

Frames are warranted to be free from defects in material or workmanship for a period of one (1)

Cushions, Straps and/or Wicker Weaves are covered for a period of one (1) year against defects in material or workmanship. Sling fabric is covered for a period of one (1) year against

Exclusions: Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damage to frames or welds caused by improper assembly, misuse or

If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1-800-643-0067.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and

7

9

10

11

12

The manufacturer, at its option, will repair or replace the defective parts.

you may also have other rights which vary from state to state.

x 16

Hardware Used

make sure the brackets of leg post (A) face

Hardware Used

Estimated Assembly Time: 2 hours

Bolt

+ 1 spare

· Item is heavy. Use care when handling. May require four adults for safe assembly.

1. Remove all parts from the carton and place them on a non-abrasive surface. Insert one top crossbar (B) into the end of top crossbar (C). Insert an M6 x 15 L bolt (AA) through a

and into top crossbar (C) for each hole. Don't tighten completely. Repeat procedure

metal washer (DD), through top crossbar (B)

for the other pairs of top crossbars (B & C). Repeat procedure for the top crossbars

M6 X 25 L

Bolt

Qty. 16

+ 1 spare

Support Bar

Canopy

DESCRIPTION

10 FT. SQUARE **PERGOLA WITH CANOPY**

ITEM #0015795

MODEL #S-J-110 Français p. 08 Español p. 15

S garden treasu treasures. Lowes.com/gardentreasures 1

U.S.A. Customers: Replacement canopies are available for purchase at www.Lowes.com Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer

QUANTITY

garden

Allen

Wrench

Qty. 2

(not to scale)

garden treasures[.]

garden treasu

F/G

garden treasures

garden garden

Printed in China

garden garden treasures.

Garden Treasures® is a registered trademark of LF, LLC. All rights reserved.

Lowes.com/gardentreasures

Lowes.com/gardentreasures

Lowes.com/gardentreasures

Lowes.com/gardentreasures

Lowes.com/gardentreasures

Touch-up

Paint

Qty. 1

B

Lowes.com/gardentreasures

D

B

(not to scale)

Lawn

Stake

Qty. 16

(not to scale)

service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

4

2

2

2

2

5

5

8

2

2

1

2

DD

M6 Washer

Qty. 60

Please read and understand this entire manual before attempting to assemble or install

CAUTION: Do not leave out during high winds, heavy rains or snow. Remove canopy.

• Assemble the item on a soft, non-abrasive surface, such as carpeting, to avoid damage.

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not

Tools Required for Assembly (included): 2 Allen Wrenches and 1 Touch Up Paint

x 36

x 36

3

2

3