

PREPARATION

This gazebo top is designed to be attached to Item #0057294. Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

2

Estimated Assembly Time: 1 hour Helpful tools Required for Assembly (not included): Allen Wrench and Hex Wrench

1. Remove all existing bolts, washers, nuts and "S" hooks attached to the canopy


To remove original canopy:

ASSEMBLY INSTRUCTIONS

frame. Take out the old canopy from the canopy corner pocket. Count the components removed from the old canopy top. There should be: 1 canopy frame, 1 finial top, 8 bolts, 8 washers, 8 nuts and 9 "S" hooks.

To attach new canopy:

- 2. Attach the canopy (A) to canopy frame. Insert bars of canopy frame through the holes on the end of canopy (A). Then insert the short bars of canopy frame into the sleeves of the wind vent canopy. Pull down the canopy and make it cover the top frame and spread the canopy top to the location. Tighten the finial top onto the top of the canopy (A).
- 3. Place the assembled canopy onto the top of the assembled leg posts as shown, and place four long top frame bars into the Ubracket. Line up the holes. For each hole insert a bolt through the U-bracket, a long frame bar and a washer, and secure with a nut. Repeat procedure to attach the remaining three frames to the brackets of the top crossbars. Hang an "S" hook through the hanging ring on each long top frame bar. Pull down the edges of the canopy, insert each tip of the long frame bars into the pocket of the canopy and make sure the top crossbars are between the valances. (Note: Place long side canopy fabric onto long side of canopy frame).

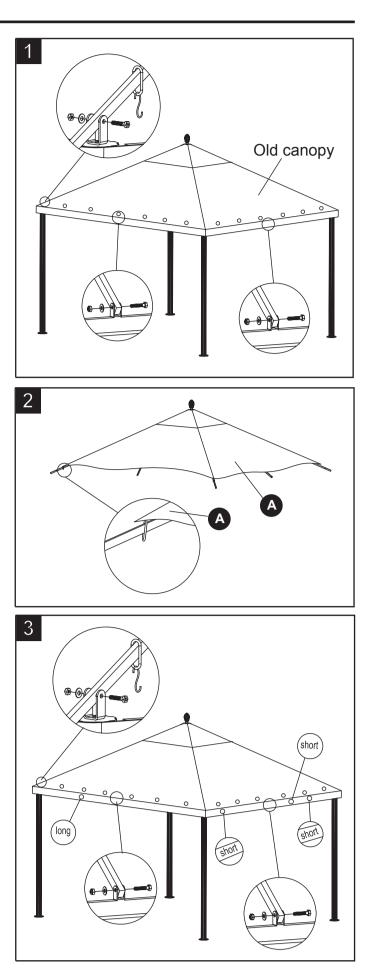

Lowes.com/gardentreasures

Q

Lowes.com/gardentreasures

garden treasures

CARE AND MAINTENANCE

Wash with mild soap. Rinse with water and let air dry.

ONE-YEAR LIMITED WARRANTY

natural causes are not covered.

This warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes.

Replacement canopies may be available for purchase on Lowes.com if out of warranty.

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.
Cushions, Straps and/or Wicker Weaves are covered for a period of one (1) year against defects in material or workmanship. Sling fabric is covered for a period of one (1) year against defects in

material or workmanship. **Exclusions:** Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damage to frames or welds caused by improper assembly, misuse or

If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1-800-643-0067. The manufacturer, at its option, will repair or replace the defective parts.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

4

5

Garden Treasures® is a registered trademark of LF, LLC. All rights reserved.

Lowes.com/gardentreasures

10

11