

Please read and understand this entire manual before attempting to assemble or install the product.

Canopy

SAFETY INFORMATION

PART

А

• Assemble the item on a soft, non-abrasive surface such as grass to avoid damage.

QUANTITY

1

Item is heavy. Handle with careMay require four adults for safe assembly.


DESCRIPTION

- May require four adults for safe assembly.
  The gazebo is not intended to be a permanent structure.
- Take it down during high winds or inclement weather or it may be damaged.
  KEEP ALL FLAME AND HEAT SOURCES AWAY FROM CANOPY FABRIC. This canopy is made with flame-resistant fabric, which meets CPAI-84 specifications. It is not fire proof. The canopy fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product. **Estimated Assembly Time:** 1 hour

No Tools Required for Assembly.

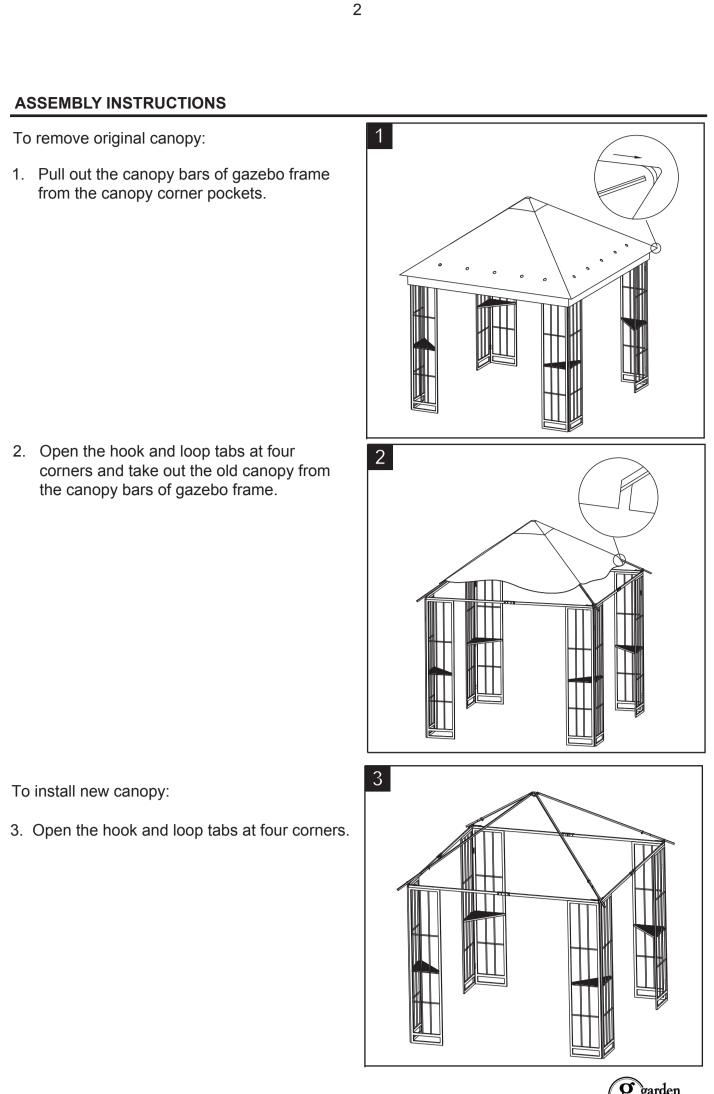

Lowes.com/gardentreasures

garden treasures

Q

Lowes.com/gardentreasures

ASSEMBLY INSTRUCTIONS
4. Place the canopy (A) on top of the gazebo frame and insert the canopy bars of gazebo frame into the corner pockets of the canopy (A). Pull down the valances and fasten the hook and loop tabs.

## CARE AND MAINTENANCE Wash with mild soap. Rinse with water and let air dry.

ONE-YEAR LIMITED WARRANTY

This warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes.

Replacement canopies may be available for purchase online if out of warranty.

**Frames** are warranted to be free from defects in material or workmanship for a period of one (1) year.

**Exclusions:** Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damage to frames or welds caused by improper assembly, misuse or natural causes are not covered.

If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1-800-643-0067. The manufacturer, at its option, will repair or replace the defective parts.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Garden Treasures<sup>®</sup> is a registered trademark of LF, LLC. All rights reserved.

Lowes.com/gardentreasures

garden treasures

4

5

6

10

11