



Pellet Stoves
Wood Stoves
Multi-Fuel Stoves
Pellet Grills

P.O. Box 206 Monroe, VA 24574 www.heatredefined.com Phone: (800) 516-3636 Fax: (434) 929-4810

Heat Powered Stove Fan

Important Notes

Design: The fan base and blade are made from aluminum; the blades are uniquely-designed anodized blades which are rust and corrosion resistant. This stove fan has been designed to deliver a very broad thermal current, for optimum performance.

Safety Feature: The strip of metal in the base of the fan is a bi-metallic strip, designed to raise the edge of the fan slightly as the maximum operating temperature is approached.

Operating above the recommended temperature of 660° F (350° C) may damage the fan and the electricity-generating unit within it, and will invalidate your warranty.

Keep fan away from small children when in use.

Never handle the base of the stove fan! If you need to relocate your fan to a cooler spot on the stove or remove it from the stove, always use the extendable handle. Do not set the stove fan down on an unprotected surface when hot.

Good stove safety practice includes the use of a stove thermometer.

Operation

Position: The stove fan generates its own electricity through the difference in temperature as air is drawn over the cooling fins. For this reason, it is best to position the fan on a smooth flat surface of your stovetop near the side or back of the stove; do not position the fan directly in front of the stove pipe, or in the front of the stove.

Keep in mind that that the hotter the stove is, the more air the fan circulates.

The stove fan is designed for usage on freestanding stoves with a normal surface temperature of between 185° F (85° C) and 660° F (350° C). Remove the fan from the stove if the temp. exceeds 660° F (350° C).

Warranty

The manufacturer extends a one-year limited warranty from the date of purchase against defects in workmanship and/or materials. We reserve the right to replace only the parts that are deemed to be defective during the warranty period without charge. Purchaser must give notice of claim of defect within the warranty period and pay transportation to and from a service center designated by the manufacturer. This warranty does not apply if the damage occurs because of accident, improper handling or operation, shipping damage, abuse, misuse, or unauthorized repairs made or attempted. The manufacturer is not liable for indirect, incidental, or consequential damages in connection with the product including any cost or expense, providing substitute equipment or service during periods of malfunction or nonuse. All liability for any consequential damage for breach of any written or implied warranty is disclaimed and excluded. Warranty is void if product is used in any manner other than which it was intended.

Some states do not allow the exclusion of limitations of incidental or consequential damages, so the above may not apply to you.

Contact Technical Support at (800) 245-6489 to obtain a Return Authorization number and mailing instructions.