


11 FT OFFSET UMBRELLA

MODEL #YJAF-819A

Français p. 7

Español p. 13




ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

PACKAGE CONTENTS



PART	DESCRIPTION	QUANTITY
A	Lower Bracket	1
B	Upper Bracket	1
C	Base Tube	1
D	Base Corner Bracket	4
E	Base Side Bracket	4
F	Base Cover	1
G	Sand Insert	2
H	Crank	1
I	Long Steel Hook	4
J	Short Steel Hook	4
K	Umbrella (preassembled to Base Tube (C))	1

HARDWARE CONTENTS (not shown to scale)



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

Item is heavy. Use care when handling. May require two adults for safe assembly. This outdoor furniture is designed and made for personal non-commercial use. It should not be used as a toy or a tool. Children under age of 16 should not be engaged in the assembly, removal or disassembly. Children under age of 10 should be supervised by a competent adult while using this furniture.

CAUTION

To prevent damage to the canopy, DO NOT leave the umbrella open directly facing the wind. Always take down the umbrella when not in use and during high or gusting wind and rain. Assemble on a soft, non-abrasive surface, such as a carpet, to avoid damage to the item. Crank the umbrella to its closed position during windy weather conditions.

PREPARATION

Before beginning the assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

Estimated Assembly Time: 40 minutes


Tools Required for Assembly (included): Long Wrench and Short Wrench

ASSEMBLY INSTRUCTIONS

1. Use short wrench (EE) to unscrew the preassembled short bolt (BB) from base tube (C). Detach base tube (C) from umbrella (K).

Hardware Used


BB	Short Bolt		x 1
EE	Short Wrench		x 1




2. Insert upper bracket (B) on top of lower bracket (A). Align the screw holes on base tube (C) with holes on lower bracket (A) and upper bracket (B), then attach using long bolts (AA) and washers (CC). Tighten with long wrench (DD).

Hardware Used

AA	Long Bolt		x 4
CC	Washer		x 4
DD	Long Wrench		x 1




3. Slide base corner brackets (D) onto the ends of upper bracket (B) and lower bracket (A). Insert short hooks (J) into inner holes of upper bracket (B) and lower bracket (A), then insert long hooks (I) into outer holes. Finally, slide base side brackets (E) into corner bracket (D) to secure assembly.




ASSEMBLY INSTRUCTIONS

4. Move umbrella base assembly to desired location, ensuring it is level. Insert sand inserts (G) into the assembly, then fill with sand (not included). Snap the preassembled buckles on sand inserts (G) to secure.

Note: A minimum of 220 lbs. of sand is needed to properly secure the umbrella.




5. Slide base cover (F) down base tube (C). Secure the base cover (F) to the assembly with the preassembled cover hooks.



6. Replace umbrella (K) in base tube (C), securing with previously removed short bolt (BB). Tighten with short wrench (EE).


Hardware Used

BB	Short Bolt		x 1
EE	Short Wrench		x 1



ASSEMBLY INSTRUCTIONS

7. Release the preassembled umbrella band from umbrella (K). Insert crank (H) into the preassembled handle on umbrella (K). Rotate crank (H) clockwise to open canopy of umbrella (K). To raise the canopy, press the button on the handrail of umbrella (K) and lift upward. Release the button to set the canopy in the desired position. To lower the canopy, gradually rotate the crank (H) counterclockwise. Then, to close the canopy, push the button on the handrail, slide it down, then attach the band back to the umbrella (K).



CARE AND MAINTENANCE

- Before using, clean the product completely with a soft, dry towel.
- Store the product in a cool, dry location away from sunlight.

ONE-YEAR LIMITED WARRANTY


This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of one (1) year on frame. Umbrella frames and bases are warranted for a period of one (1) year. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions: Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART#
A	Lower Bracket	0401961A
B	Upper Bracket	0401961B
C	Base Tube	0401961C
D	Base Corner Bracket	0401961D
E	Base Side Bracket	0401961E
F	Base Cover	0401961F
G	Sand Inserts	0401961G
H	Crank	0401961H
I	Long Steel Hook	0401961I
J	Short Steel Hook	0401961J
K	Umbrella	0401961K
AA	Long Bolt	0401961AA
BB	Short Bolt	0401961BB
CC	Washer	0401961CC
DD	Long Wrench	0401961DD
EE	Short Wrench	0401961EE



Printed in China

Garden Treasures® is a registered trademark of LF, LLC. All rights reserved.