



ITEM #0401965

9 FT. MARKET UMBRELLA

MODEL #U-1303-2

Garden Treasures® is a registered trademark of LF, LLC. All Rights Reserved.

Français p. 5

Español p. 9



ATTACH YOUR RECEIPT HERE

Serial Number _____

Purchase Date _____




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

XXXXXX

Lowes.com/gardentreasures



PACKAGE CONTENTS

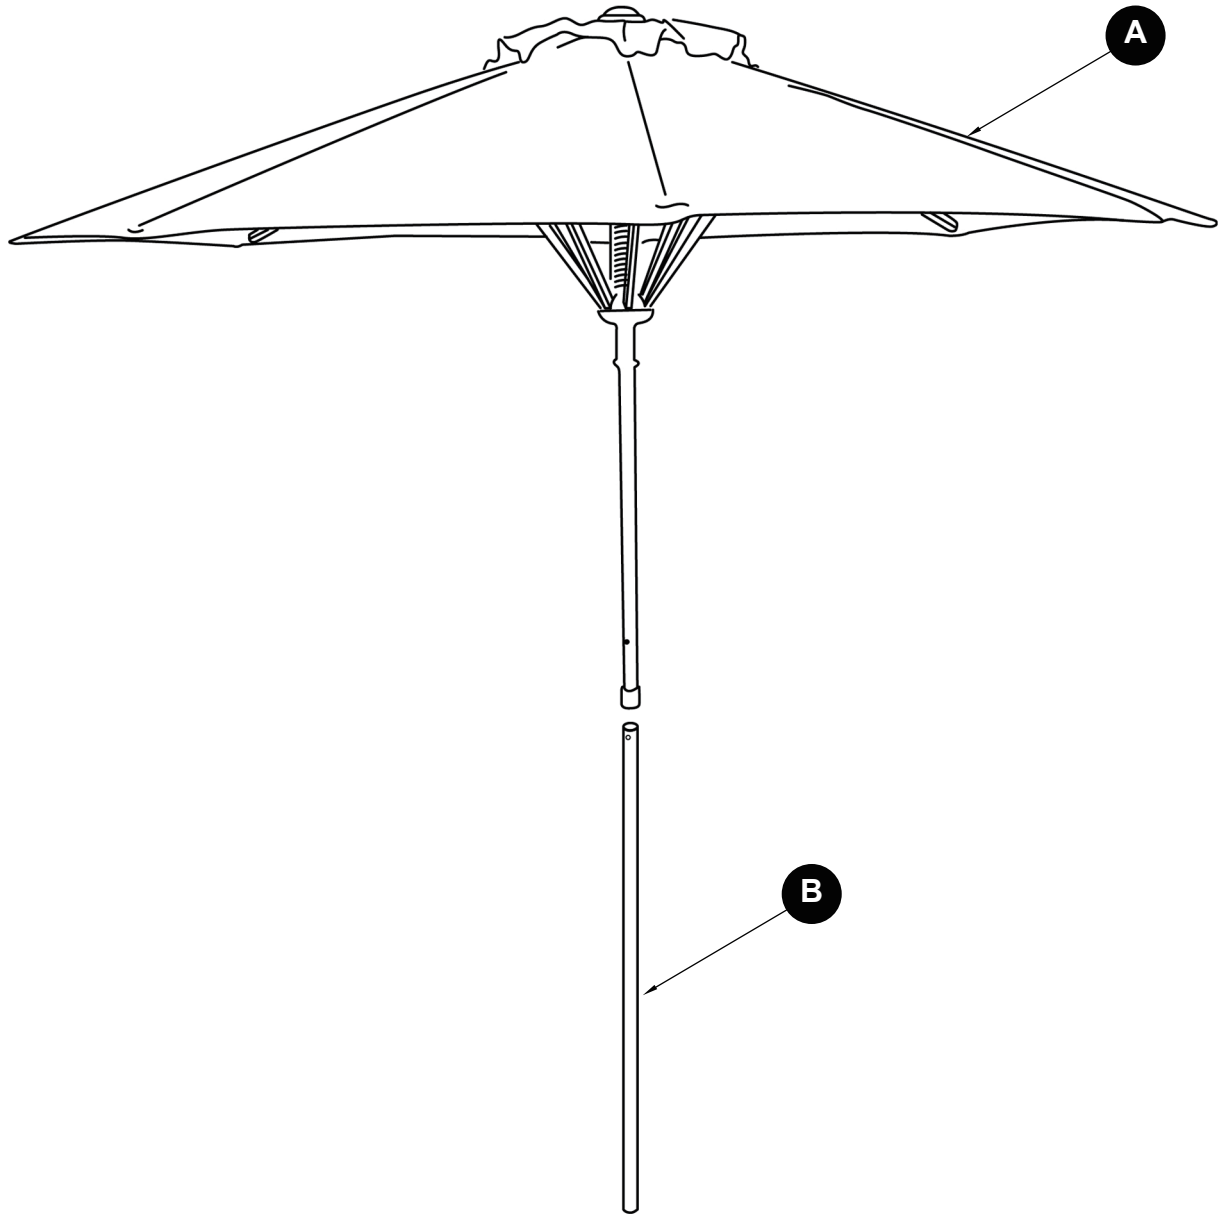

PART	DESCRIPTION	QUANTITY
A	Upper Part of the Umbrella	1
B	Lower Pole	1

SAFETY INFORMATION

- Assemble on a soft, non-abrasive surface.
- Two adults may be required for safe assembly.
- Do not leave the umbrella open during high winds. Open the umbrella to its closed position during windy conditions.
- When not in use, keep the umbrella closed.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 3 minutes


No tools required for assembly.

ASSEMBLY INSTRUCTIONS

1. Insert the lower pole (B) into umbrella base (sold separately). Use a heavy or weighted base to help stabilize the umbrella. Securely fasten the lower pole (B) to the umbrella base.

Hold the upper part of the umbrella (A) upside down and click the push button located on the bottom, allowing it to fall naturally into the open position.

Turn the umbrella upright and insert the upper part of the umbrella (A) into the lower pole (B). The push button located on the upper part of the umbrella (A) must extend through the opening on the lower pole (B).

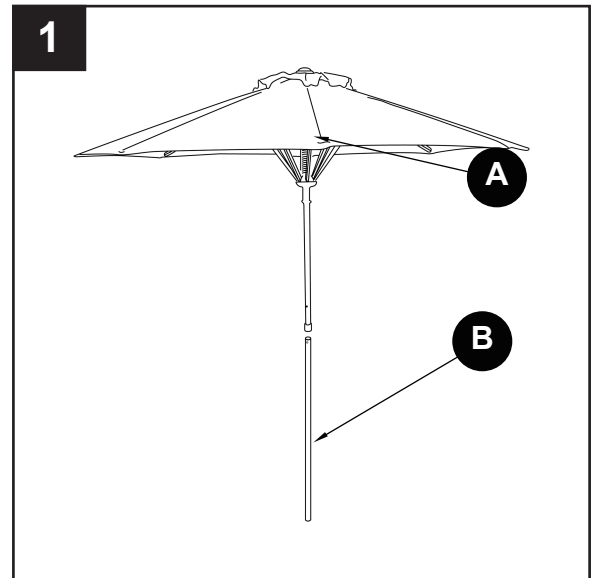

CARE AND MAINTENANCE

- Clean with mild soap and lukewarm water, rinse, and air dry.
- Store the product indoors in a cool, dry place.

LIMITED WARRANTY

This warranty is for the original purchaser and applies to defects in materials and workmanship of your patio furniture, provided your unit is maintained with care and used only for personal, residential purposes.

Frames are warranted to be free from defects in material or workmanship for one (1) year.

Spun fabric is covered for one (1) year against defects in material or workmanship.

Exclusions: Items used for commercial, contract or other non-residential purposes, display models, items purchased "as is," or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damages to frames or welds caused by improper assembly, misuse or natural causes are not covered.

For warranty service, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

Printed in China

Garden Treasures® is a registered trademark of L.F. LLC. All Rights Reserved.



Lowe.com/gardentreasures