



ITEM #0379423

 
# SOLAR PATH LIGHTS (Set of 8)

Portfolio Outdoor® is a registered trademark of LF, LLC. All Rights Reserved.

MODEL #MS16Mh-R4-SS-W8

Français p. 7

Español p. 13

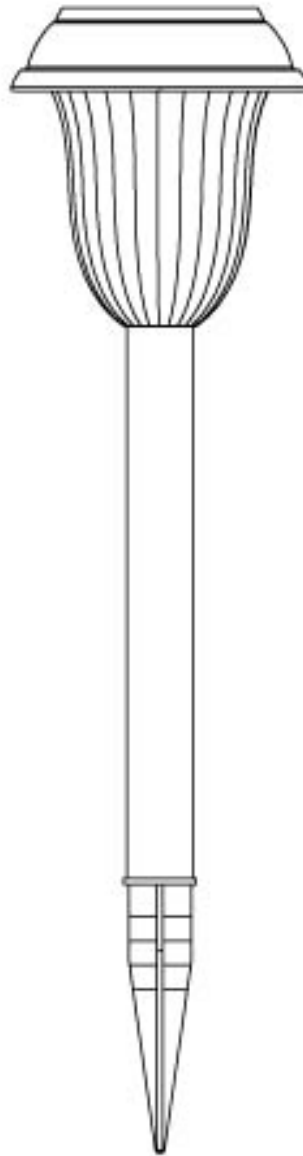

### ATTACH YOUR RECEIPT HERE

 
Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

## PACKAGE CONTENTS

---

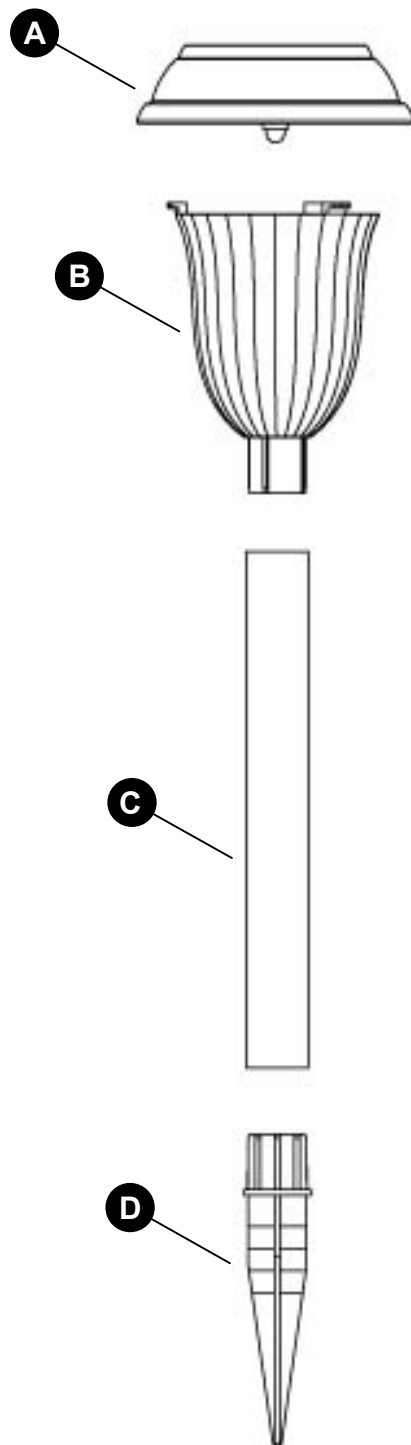

PART	DESCRIPTION	QUANTITY
A	Top Housing	8
B	Lens	8
C	Mounting Pole	8
D	Ground Spike	8

## SAFETY INFORMATION

---

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### CAUTION

- This product contains nickel-cadmium batteries. Batteries must be recycled or disposed of properly.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

### PREPARATION

---

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


**Estimated Assembly Time: 6 minutes**

No Tools Required for Assembly.


### ASSEMBLY INSTRUCTIONS

---


1. On the bottom of top housing (A), pull off the isolation strip on the battery compartment.

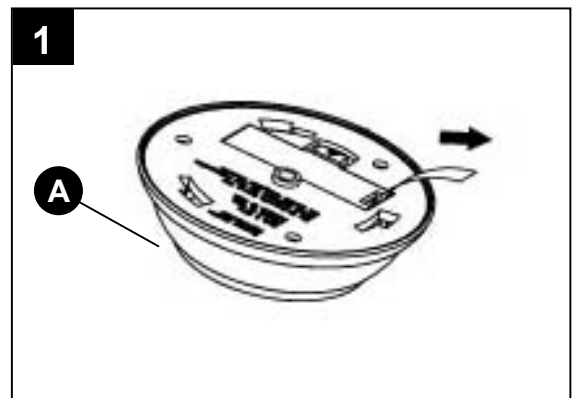

2. Twist and secure lens (B) to the top housing (A).

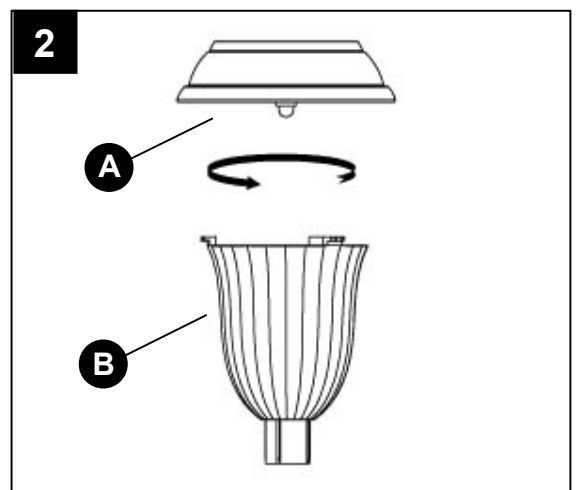

- Attach the mounting pole (C) to the ground spike (D). Push the ground spike (D) firmly into the ground. Note: Do not use a hammer. Attach the light fixture to the mounting pole (C).

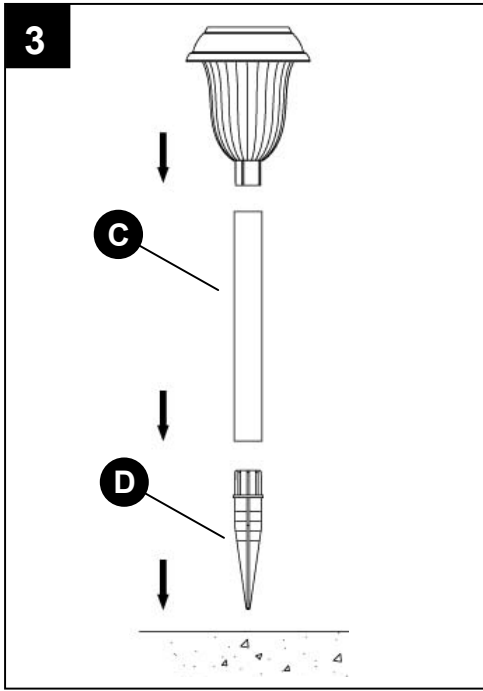

**CARE AND MAINTENANCE**

- CHARGING THE BATTERIES**

For optimum performance, it is best to install the solar light in full sunlight and charge for 10-12 hours. Allow the light to run at least 8 -12 complete charging and discharging cycles to reach batteries' maximum capacity.

- REPLACING THE BATTERIES**



The included rechargeable batteries will usually last two years. Replace batteries only when you notice the performance of your solar light is weaker than its normal operation in the first year.

To replace the battery, twist and remove the lens (B) from the top housing (A). Remove the battery compartment cover and replace the old battery with a new AA Ni-Cd or Ni-MH rechargeable battery (not included), minimum capacity of 800mAh is required. Replace the battery compartment cover and lens.

**CAUTION:**  
BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY.

- WINTER TIPS**

Keep debris and snow off the solar panel to allow the batteries to recharge. If lights have been covered by snow for a long time, allow batteries to recharge in full, direct sunlight for at least 10-12 hours so that they maintain maximum capacity.

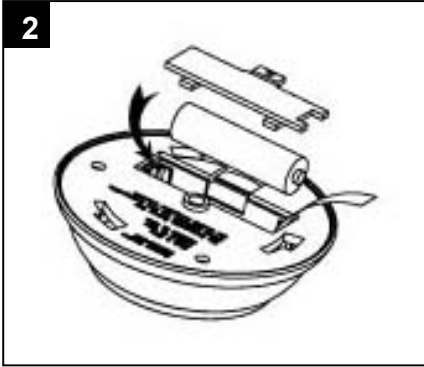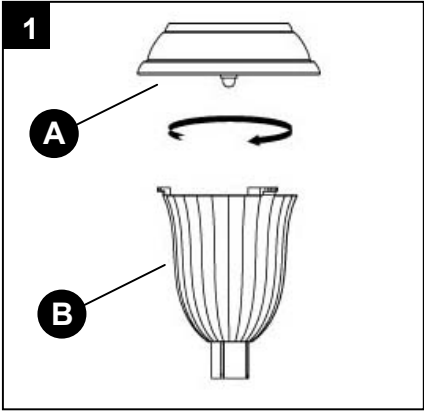

## TROUBLESHOOTING

---

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Solar light does not turn on at night or its nightly run time is shorter.	<ol style="list-style-type: none"><li>1. Battery is not fully charged.</li><li>2. The solar light is installed close to other light sources, which may keep the solar light from turning on at night automatically.</li><li>3. The batteries are reaching the end of their useful life.</li></ol>	<ol style="list-style-type: none"><li>1. Make sure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight everyday. Keeping the solar panel clean is equally important to ensure the maximum charging performance.</li><li>2. Relocate the fixture or eliminate other light sources.</li><li>3. Replace old batteries with new AA Ni-Cd or Ni-MH rechargeable batteries.</li></ol>

## WARRANTY

---

The manufacturer warrants this product to be free of defects in material and workmanship for one (1) year from date of original purchase. The manufacturer agrees to repair or replace the defective product, at its own option. This warranty does not include any costs associated with the physical installation, removal or return of the product.

This warranty only extends to the original purchaser and is not transferable or assignable to subsequent purchasers. No warranty work will be provided under this warranty without reasonable proof of purchase.

Please call us at 1-800-643-0067 to receive your warranty service.

This warranty does not extend to the following: (1) LED bulbs or batteries (2) defects caused by and resulting from misuse, neglect, accident or improper operation, maintenance and storage, disassembly of parts (3) surface scratches or weathering as this is considered normal wear (4) any other failure not related to defects in materials and workmanship.

There are no other warranties except those stated above.

Some states do not allow the exclusion or limitation of special or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday -Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	Top Housing	MS16Mh-R4-SS-TH
B	Lens	MS16Mh-LENS
C	Mounting Pole	CM005-SS
D	Ground Spike	BP004-BK
E	Rechargeable Battery	BT-NC-AA-800
F	Battery Compartment Cover	NP009-BK

