




ITEM #0027404

## 35 IN FIREPIT

MODEL #SRFP90B

Français p. 8

Español p. 15

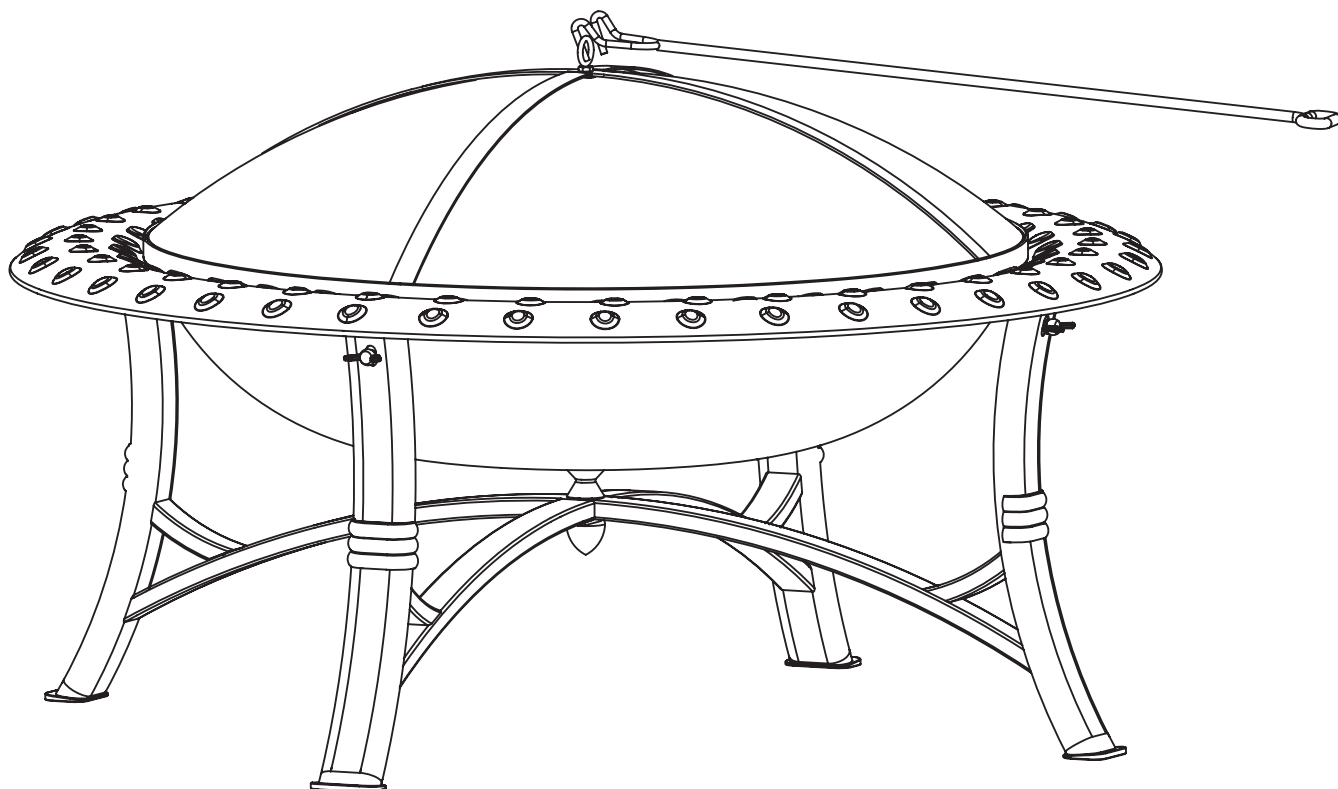


**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.

PACKAGE CONTENTS


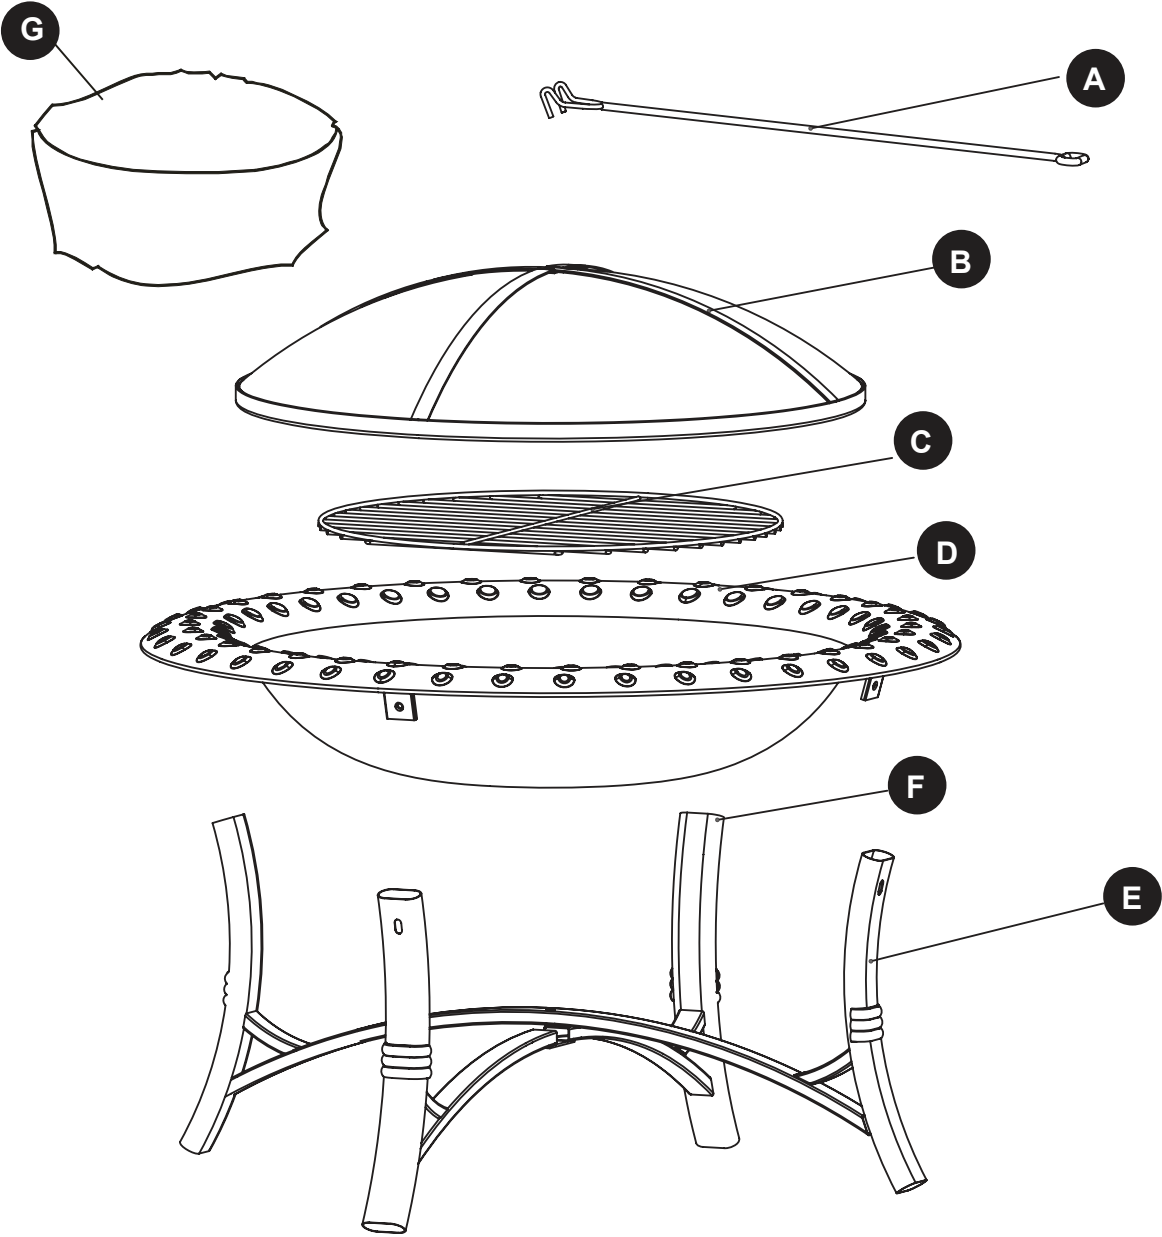






| PART | DESCRIPTION   | QUANTITY |
|------|---------------|----------|
| A    | Screen hook   | 1        |
| B    | Screen        | 1        |
| C    | Charcoal grid | 1        |
| D    | Fire bowl     | 1        |

| PART | DESCRIPTION        | QUANTITY |
|------|--------------------|----------|
| E    | Upper leg assembly | 1        |
| F    | Lower leg assembly | 1        |
| G    | PVC cover          | 1        |
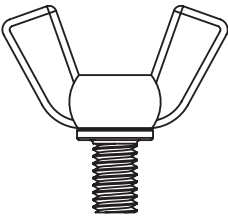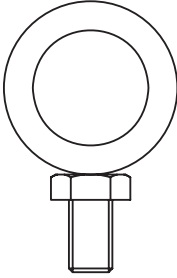
## HARDWARE CONTENTS (shown actual size)

---

| AA  | BB  | CC  | DD   | EE  | FF  |
|---|---|---|--|---|---|
|  |  |  |  |  |  |
| M6 x 10 mm<br>Wing Screw  | M6<br>Ring Screw  | M6<br>Flange Nut  | Foot Pad   | Decorative<br>Nut   | Decorative<br>Screw   |
| Qty. 4  | Qty. 1  | Qty. 1  | Qty. 4   | Qty. 1  | Qty. 1  |

## SAFETY INFORMATION

---

### WARNING:

- FOR OUTDOOR USE ONLY.
- Do not use the firepit indoors. Carbon monoxide fumes, due to lack of ventilation, can cause death.
- Do not use gasoline or kerosene to start fires in the firepit. Keep all flammable liquids away from the firepit.
- This unit is designed to burn charcoal and untreated wood only. Fill the bottom of the bowl with sand until the surface of sand is 0.59 inches below the grid.
- Do not use under or on combustible structures/surfaces including wooden decks.
- Use protective gloves and long-handled tools with this firepit.
- Dispose of packaging materials properly.
- Keep children away from hot firepit.
- Firepit remains very hot for a period of time after using.
- Be sure firepit is cool before attempting to move it.
- Do not place the PVC cover too close to firepit when it's burning.
- Do not place hot particles inside the PVC cover.
- Do not burn over 1.6 lbs. of charcoal or 3 lbs. of untreated wood at one time.
- The handle of the tools may become hot during and after use. The firepit should be placed no closer than 24 in. from walls during use.
- Don't touch the ash tray handle during use until the fire is completely out and cooled down.

**CAUTION:** Assemble the firepit on a non-abrasive surface.

## PREPARATION

---

Before assembling product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.




**Estimated Assembly Time: 15 minutes**


No tools required for assembly.

## ASSEMBLY INSTRUCTIONS

1. Connect upper leg assembly (E) and lower leg assembly (F) with decorative nut (EE) and decorative screw (FF). Then attach foot pads (DD) to legs.


### Hardware Used


|           |                  |   |     |
|-----------|------------------|---|-----|
| <b>DD</b> | Foot Pad         |  | x 4 |
| <b>EE</b> | Decorative Nut   |  | x 1 |
| <b>FF</b> | Decorative Screw |  | x 1 |

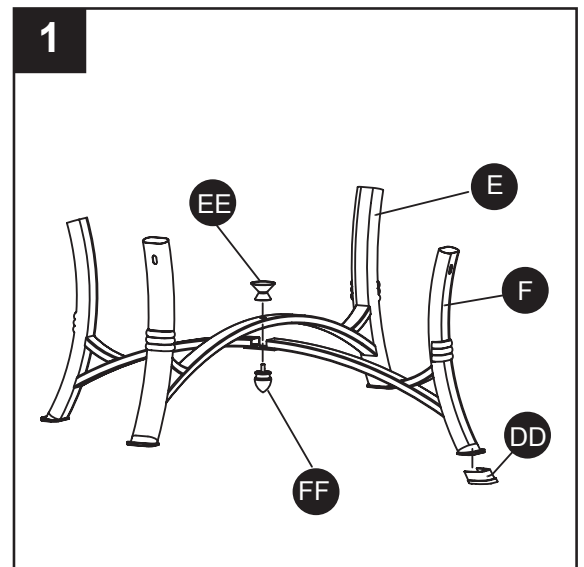

2. Place the fire bowl (D) upside down and attach legs to fire bowl (D) with four wing screws (AA).



### Hardware Used

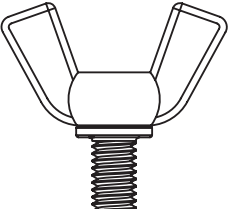
|           |                    |   |     |
|-----------|--------------------|---|-----|
| <b>AA</b> | M6 x 10 Wing Screw |  | x 4 |
|-----------|--------------------|---|-----|

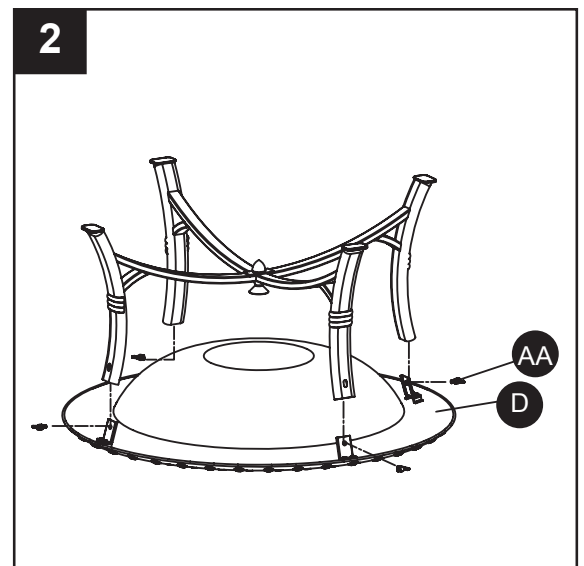

3. Attach the M6 ring screw (BB) to the top of the screen (B) with an M6 flange nut (CC).


### Hardware Used
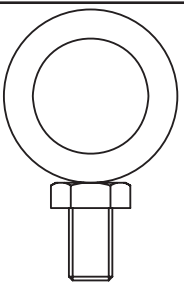
|           |               |   |     |
|-----------|---------------|---|-----|
| <b>BB</b> | M6 Ring Screw |  | x 1 |
| <b>CC</b> | M6 Flange Nut |  | x 1 |

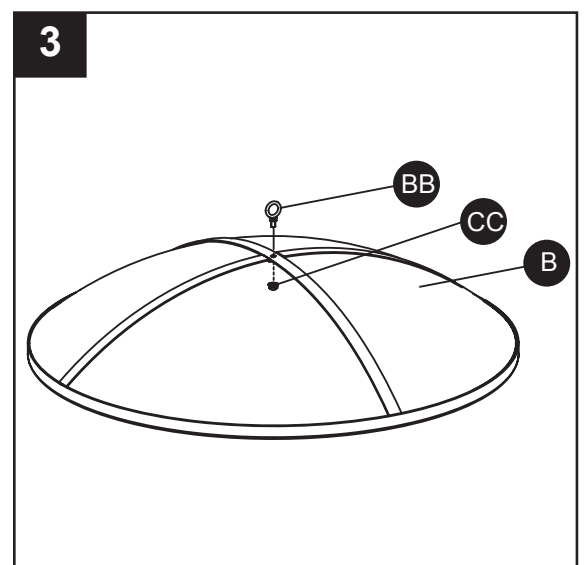

## ASSEMBLY INSTRUCTIONS

4. Place charcoal grid (C) on top of fire bowl (D) followed by screen (B) and screen hook (A).

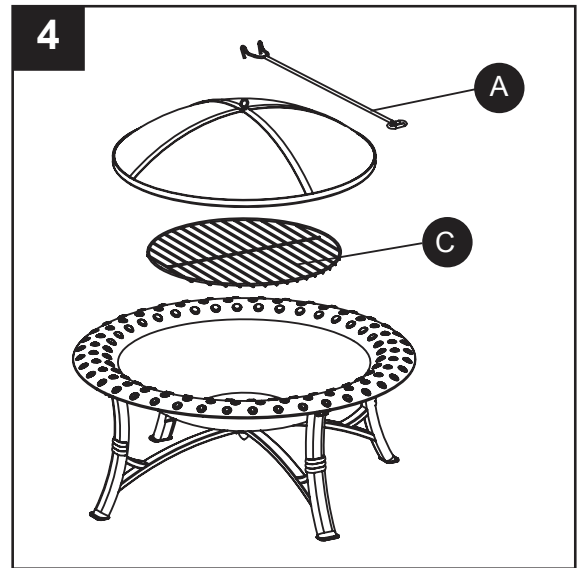

## CARE AND MAINTENANCE

---

### Inspecting

Inspect this firepit on a regular basis to ensure product safety and longer product life.

DO NOT attempt to inspect this outdoor firepit until the fire is COMPLETELY out and cooled down.

- Check handles to make sure they are secure.
- Check components for any signs of damage or rust.
- If any component is damaged, do not operate until repairs are made.

### Cleaning

Clean this outdoor firepit on a regular basis to promote safer use and longer product life.

Note: After repeated use, the finish may discolor slightly.

DO NOT attempt to clean this outdoor firepit until the fire is COMPLETELY out and cooled down.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this outdoor firepit in a self-cleaning oven as it may damage this finish.

- Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- For stubborn surfaces use a citrus-based degreaser and a nylon scrubbing brush.
- Rinse clean with water.
- Remove built-up creosote from components with a chimney cleaning product.

### Storage

DO NOT move or store this outdoor firepit until the fire is COMPLETELY out and cooled down.

- Once the fire is out, coals are cold and outdoor firepit is cool to touch, remove ashes and properly dispose.
- Cover outdoor firepit with the PVC cover (G).
- Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor firepit in a dry location to maximize product life.

## ONE-YEAR LIMITED WARRANTY

---

The item has been manufactured under the highest standards of quality and workmanship.

We warrant to the original consumer/purchaser that all aspects of this product will be free of defects in material and workmanship for one (1) year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty.

This warranty shall be effective from the date of purchase as shown in the purchaser's receipt.

For warranty service, call 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.


This warranty is valid for the original consumer/purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.

This warranty gives you specific rights, and you may also have other rights that vary from state to state.


REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067,  
8 a.m. - 8 p.m., EST, Monday - Friday.


| PART | DESCRIPTION        | PART#    |
|------|--------------------|----------|
| AA   | M6 x 10 Wing Screw | 27404-AA |
| BB   | M6 Ring Screw      | 27404-BB |
| CC   | M6 Flange Nut      | 27404-CC |
| DD   | Foot Pad           | 27404-G  |
| EE   | Decorative Nut     | 27404-F  |
| FF   | Decorative Screw   | 27404-E  |
| B    | Screen             | 27404-B  |
| C    | Charcoal grid      | 27404-C  |
| D    | Fire bowl          | 27404-D  |

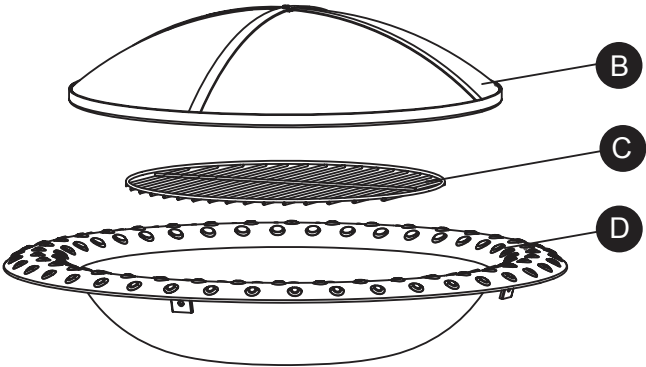

AA

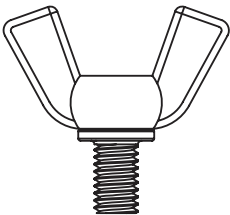

BB

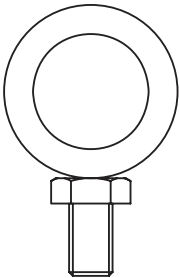

CC



DD



EE



FF

