




Freestanding Electric Range

PRODUCT MODEL NUMBERS

RF3010XE


Electrical: A four-wire or three-wire, single-phase, 120/240-volt, 60-Hz, AC-only, electrical supply is required on a 40-ampere circuit, (or, if specified on the model/serial rating plate, a four-wire or three-wire, single-phase 120/208-volt, 60 Hz, AC-only electrical supply is available, a 40-ampere circuit), fused on both sides of the line. A time-delay fuse or circuit breaker is recommended. The model/serial rating plate is located under the cooktop.

OVERALL DIMENSIONS

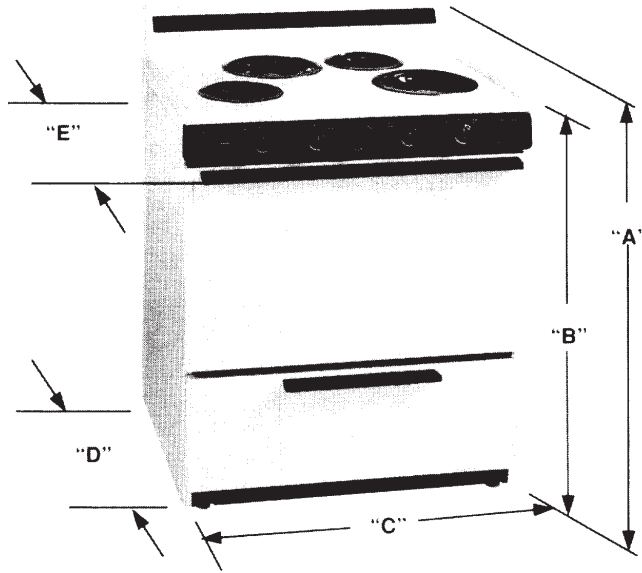

MODEL	OVERALL HEIGHT DIM. "A"	COOKTOP HEIGHT DIM. "B"	WIDTH DIM. "C"	DEPTH WITHOUT HANDLE DIM. "D"	DEPTH WITH HANDLE DIM. "E"
30"	40"	36"	30"	26"	27 1/8"
20"	40"	36 1/4"	20 3/16"	24 1/2"	25 1/2"

CABINET OPENING DIMENSIONS

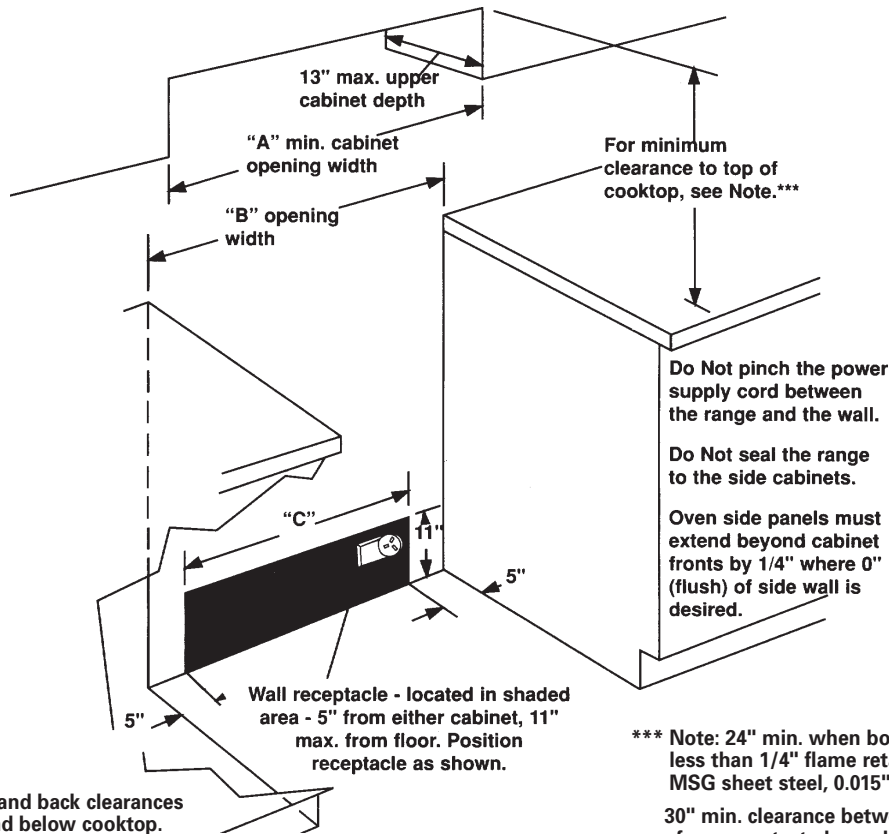

MODEL	DIM. "A"	DIM. "B"	DIM. "C"
20"	20"	20 1/4"	10 1/4"
30"	30"	30 3/16"	20 3/16"

*** Note: 24" min. when bottom of wood or metal cabinet is protected by not less than 1/4" flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" stainless steel, 0.024" aluminum or 0.020" copper.
30" min. clearance between the top of the cooking platform and the bottom of an unprotected wood or metal cabinet.