Installation instructions

3. Ventilation and installation

- To ensure adequate ventilation for your refrigerator and its correct operation see recommended cabinetry dimensions below.
- These measurements do not include space for the water filter at the back of the cabinet as we recommend that the filter is placed as close to the incoming water supply as possible.

Cabinetry dimensions (including minimum air clearances)	E522B		RF201A	
	inches	mm	inches	mm
A inside height	683/4	1735	711/4	1810
Flush with refrigerator chassis – full door rotation				
B inside width	323/4	830	37	940
C inside depth	243/8	620	243/8	620
Flush with refrigerator door - full door rotation				
D inside width	337/8	860	393/8	1000
E inside depth flush to curved door	265/s	675	=	3=
F inside depth flush to flat door	271/8	690	271/8	690
Flush with refrigerator door – 90° door rotation (for full drawer/shelf access, the doors need to be open past 9	0°)			
G inside width	35 ³ / ₈	900	393/4	1010
H inside depth flush to curved door	265/8	675	-	-
I inside depth flush to flat door	271/8	690	271/8	690
Minimum clearances				
J side clearance	3/4	20	3/4	20
K side clearance – hinge side flush with door – full rotation	2	50	2	50
L side clearance – hinge side flush with door – 90° rotation	31/2	90	31/2	90
M rear clearance (incl. evaporator tray)	11/8	30	11/8	30
N vent (above refrigerator cabinet or around top of cupboard)	2	50	2	50
O door clearance – hinge side flush with chassis – full rotation	253/8	645	143/8	365
P door clearance – hinge side flush door – full rotation	241/4	615	131/4	335