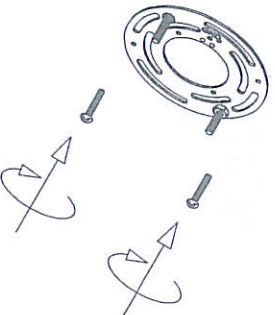
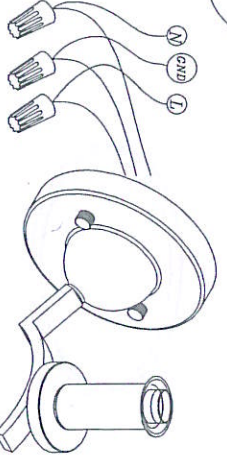
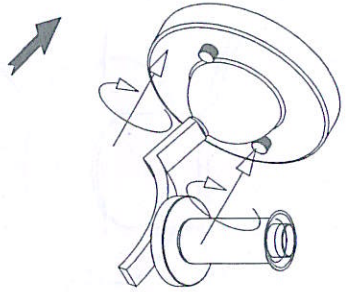
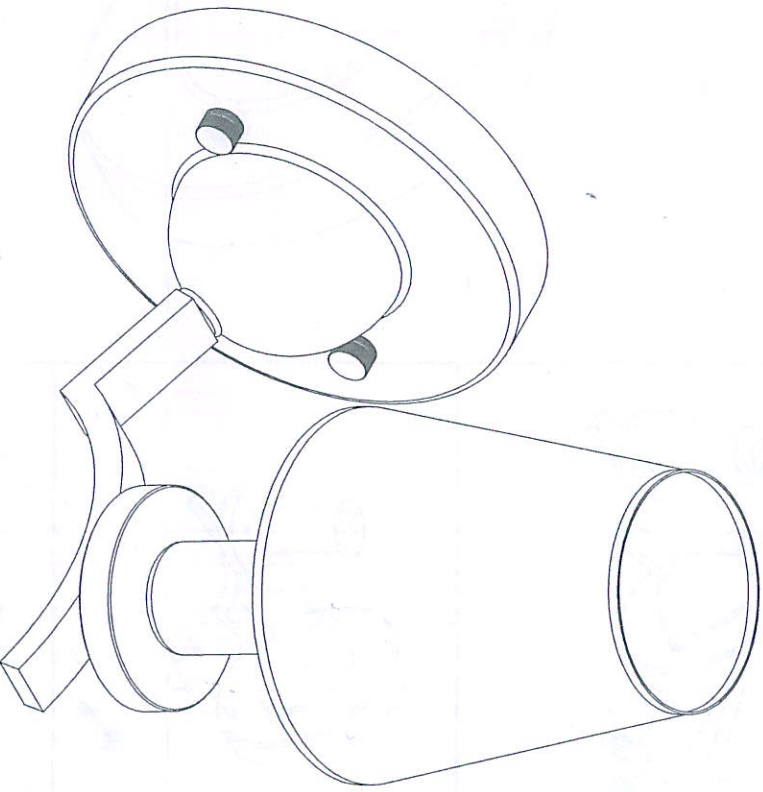
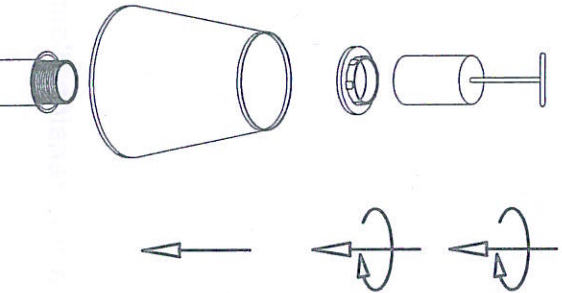
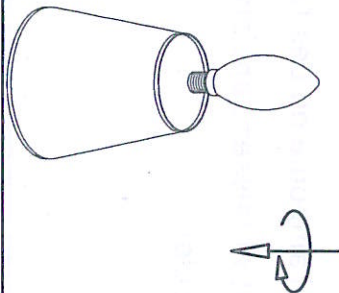


1 	
2 	
3 	
4 	
5 	

- 1、 This light fitting operates at a normal supply voltage of 120V.
- 2、 When changing the bulb or fuses, always switch off at the mains and allow the old bulb to cool down before handing.