
#### **INSTALL GLASS**


- To install glass, position round part (A) in center of glass (B) and align holes in glass (B) with holes on round part (A).
- Slide stems (C) through the glass into round part (A).

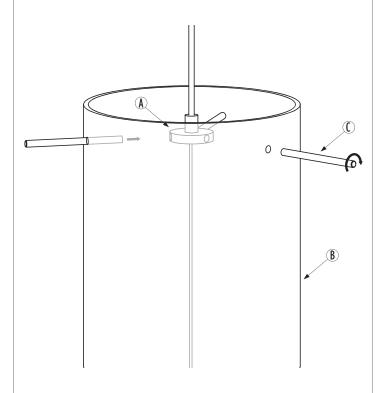

### REPLACE LAMP

- To replace lamp turn off power.
- Lift the glass (B) after replacing lamp, carefully slide glass back onto


NOTE: Glass does not hold in upper position and will slide back.

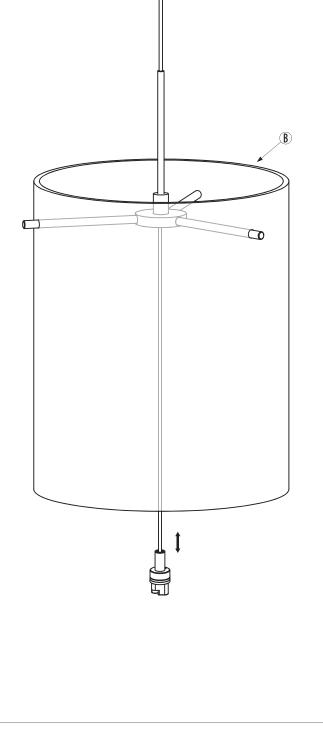

BRUCK LIGHTING SYSTEMS 15774 Gateway Circle Tustin, CA. 92780 www.brucklighting.com

For more assistance with technical questions please call our technical support staff at (714) 259-9959. You can also contact us by email at info@brucklightingsystems.com.

# REGAL DOWN

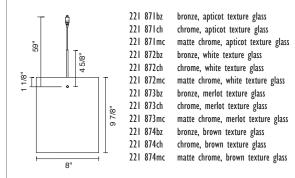

## Â

#### IMPORTANT SAFETY INSTRUCTIONS



- 1. Save these instructions and refer to them when additions to or changes to the fixture are made.
- 2. Do not install this fixture in damp or wet locations.
- 3. CAUTION Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
- 4. Turn off power prior to any work on the systems.
- 5. Please check that the total lamp wattage does not exceed 50W or wattage specified by fixture.
- Warranty is void in case of unauthorized modifications and/ or improper use.

#### READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLATION

 
#### INSTRUCTIONS FOR USE

- Insert the lamp into the socket as far as it will go. Make sure the pin spacing and wattage are correct for your fixture.
- Mount the fixture to the canopy or adaptor by plugging in the Uni-Plug. The Uni-Plug will 'click' when properly inserted. Tighten the retaining collar to complete the installation (see diagram).





# INSTALLATION INSTRUCTIONS



 


 












#### INSTRUCTIONS FOR USE

- 1. Disassemble the uni-plug by:
  - -removing plug A with the hexagonal key.
  - -removing the knurled screw B.
  - -loosening screw C.
  - -unscrew part D with the hexagonal screw.
  - -loosening screw F.
  - -pushing the cable G through the plug reception H.
  - -removing the clamp conus E.
- 2. Shorten the cable G to the desired lenght. Push the clamp conus E on. Push the stranded exterior of the cable G so that the interior cable is exposed.
- 3. Place the cable G with clamp conus E into the plug reception H. Screw in the interior part D.
- 4. Cut the excess interior cable so that it is flush with part D.
- 5. Push the stranded cable G through the plug reception to re-expose the interior cable. Strip away 4mm of insulation away from the interior cable.
- 6. Attatch screw plug with plastic sleeve K; fasten screw C firmly.
- 7. Pull the exterior cable G back. Push the screw plug with plastic sleeve K into the interior part D. Place the knurled nut on to the plug reception. Screw the plug A on and fasten it firmly.
- 8. Fasten the screw F.

